

HPE Network Node Manager iSPI Performance for Quality

Software Version: 10.20 for the Windows® and Linux® operating systems

Online Help for Reports

Document Release Date: July 2016 Software Release Date: July 2016

Legal Notices

Warranty

The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HPE shall not be liable for technical or editorial errors or omissions contained herein.

The information contained herein is subject to change without notice.

Restricted Rights Legend

Confidential computer software. Valid license from HPE required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Copyright Notice

© Copyright 2011 - 2016 Hewlett Packard Enterprise Development LP

Trademark Notices

Adobe® is a trademark of Adobe Systems Incorporated.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

Documentation Updates

The title page of this document contains the following identifying information:

- Software Version number, which indicates the software version.
- Document Release Date, which changes each time the document is updated.
- Software Release Date, which indicates the release date of this version of the software.

To check for recent updates or to verify that you are using the most recent edition of a document, go to: https://softwaresupport.hpe.com/group/softwaresupport/search-result?keyword=.

This site requires an HP Passport account. If you do not have one, click the **Create an account** button on the HP Passport Sign in page.

Support

Visit the HPE Software Support web site at: https://softwaresupport.hpe.com

This web site provides contact information and details about the products, services, and support that HPE Software offers.

HPE Software Support provides customer self-solve capabilities. It provides a fast and efficient way to access interactive technical support tools needed to manage your business. As a valued support customer, you can benefit by using the support web site to:

- · Search for knowledge documents of interest
- Submit and track support cases and enhancement requests
- Download software patches
- Manage support contracts
- Look up HPE support contacts
- · Review information about available services
- · Enter into discussions with other software customers
- · Research and register for software training

Most of the support areas require that you register as an HP Passport user and sign in. Many also require a support contract. To register for an HP Passport ID, go to https://softwaresupport.hpe.com and click Register.

To find more information about access levels, go to: https://softwaresupport.hpe.com/web/softwaresupport/access-levels

About this PDF Version of Online Help

This document is a PDF version of the online help. This PDF file is provided so you can easily print multiple topics from the help information or read the online help in PDF format. Because this content was originally created to be viewed as online help in a web browser, some topics may not be formatted properly. Some interactive topics may not be present in this PDF version. Those topics can be successfully printed from within the online help.

Contents

Quality Assurance Reports	/
Launching the Quality Assurance Reports	7
Quality Assurance Baseline Sleeve Report	7
Quality Assurance Headline Report	8
Quality Assurance Managed Inventory Report	8
Quality Assurance Most Changed Reports	8
How to Run the Report	9
Defaults	10
Quality Assurance Peak Period Report	10
How to Run the Report	10
Defaults	12
Quality Assurance Top N Frequency Distribution Report	12
How to Run the Report	12
Defaults	14
Quality Assurance Top N Report	14
How to Run the Report	15
Defaults	16
Quality Assurance Top N Table Report	17
How to Run the Report	17
Defaults	19
Quality Assurance Top N Chart Report	19
How to Run the Report	19
Defaults	21
Quality of Service (QoS) Reports	22
Launching the NNM iSPI Performance for QA QoS Reports	22
Quality of Service (QoS) Baseline Sleeve Report	22
Quality of Service (QoS) Calendar Report	23
How to Run the Report	23
Defaults	23
Quality of Service (QoS) Chart Detail Report	24
How to Run the Report	24
Defaults	25
Quality of Service (QoS) Heat Chart Report	25
How to Run the Report	26
Defaults	
Quality of Service (QoS) Managed Inventory Report	27
Quality of Service (QoS) Headline Report	27
Quality of Service (QoS) Most Changed Reports	28
How to Run the Report	28
Defaults	29
Quality of Service (QoS) Peak Period Report	29
How to Run the Report	30
Defaults	31

Quality of Service (QoS) Threshold Sleeve Report	31
Quality of Service (QoS) Top N Report	32
How to Run the Report	32
Defaults	33
Quality of Service (QoS) Top N Table Report	34
How to Run the Report	34
Defaults	36
Quality of Service (QoS) Top N Frequency Distribution Report	36
How to Run the Report	37
Defaults	38
Quality of Service (QoS) Top N Chart Report	39
How to Run the Report	39
Defaults	40
Ping Latency Pair Reports	42
Launching the Ping Latency Pair Reports	42
Ping Latency Pair Calendar Report	42
How to Run the Report	42
Defaults	43
Ping Latency Pair Chart Detail Report	43
How to Run the Report	44
Defaults	45
Ping Latency Pair Heat Chart Report	45
How to Run the Report	45
Defaults	46
Ping Latency Pair Managed Inventory Report	46
Ping Latency Pair Most Changed Reports	47
How to Run the Report	47
Defaults	48
Ping Latency Pair Peak Period Report	48
How to Run the Report	48
Defaults	50
Ping Latency Pair Top N Report	
How to Run the Report	
Defaults	
Ping Latency Pair Top N Table Report	
How to Run the Report	
Defaults	
Ping Latency Pair Top N Frequency Distribution Report	
How to Run the Report	
Defaults	
Ping Latency Pair Top N Chart Report	
How to Run the Report	
Defaults	59
Send Documentation Feedback	60

Online Help for Reports

Quality Assurance Reports

The Network Node Manager iSPI Performance for Quality Assurance Software (NNM iSPI Performance for QA) provides you with Quality Assurance reports. These reports enable you to do the following:

- Monitor the network performance, and drill-down to the root-cause of the problem
- Analyze the trend of the network performance for a specific time period
- Forecast any problem that may arise over a period of time
- Troubleshoot any problem in the network

NNM iSPI Performance for QA enables you to view the reports for the following policy types:

- A parent policy, that is, a policy that contains references to other policies
- An independent policy. that is, a policy that does not refer to any other policies

Multi-tenant architecture is also integrated with Network Performance Server and restricts a user to view only selective probes and reports. For example, while generating Top N report, a user can view the report of the nodes that can be accessed by the user.

Launching the Quality Assurance Reports

Follow the steps as given below to view a QA report:

- 1. Navigate to the Network Node Manager iSPI Performance for Metrics console using any of the following methods:
 - Click Actions > HPE NNM iSPI Performance > Reporting-Report Menu in the NNMi console.
 Alternatively, you can right-click a QA probe or QA group in the Quality Assurance inventory on the NNMi console, select HPE NNM iSPI Performance, and then select Reporting Report Menu.
 - Log in to NPS using http://<fully-Qualified-serverName>:9300/p2pd/NPS.html portal.
- 2. On the NPS home page, select **Reports** tab in the navigation panel.
- 3. Click iSPI Quality Assurance.
- 4. Click Quality Assurance.
- 5. Click **QAMetrics**.
- 6. Select the report type.

For more information, see the Network Node Manager iSPI Performance for Metrics Online Help.

Before you start viewing the QA reports, ensure that Network Performance Server (NPS) is up and running.

Quality Assurance Baseline Sleeve Report

Baseline sleeve report enables you to analyze or forecast when the metric is likely to violate the threshold value.

This report enables you to do the following:

- · Analyze if the network performance is within the normal range for the selected time range
- Detect if the threshold state of the metric is likely to cross the high or low threshold value
- View the details of the metric as a line chart and tabular format as well. For a specific time grain, you can
 view the time, baseline metric average, exceptions, lower normal and upper normal standard deviations in
 percentage

Quality Assurance Headline Report

Quality Assurance (QA) Headline report enables you to analyze and compare the different metrics in a single report, as follows:

- Response time (RTT) between the selected source node and destination node, based on the following:
 - Average response (msec)
 - Minimum response and Maximum response (msec)
- Ping latency between the selected source node and destination node, based on the following:
 - · Reachability (avg)
 - Target error (avg)
 - Unresponsive target (avg)
- Jitter between the selected source node and destination node, based on the following:
 - Positive jitter (µsecs) (avg)
 - Negative jitter (µsecs) (avg)
- Packet loss between the selected source node and destination node, based on the following:
 - Two way packet loss (%) (avg)
- Mean Opinion Score between the selected source node and destination node.

Quality Assurance Managed Inventory Report

Quality Assurance Managed Inventory report enables you to view the topology elements used in a selected time range.

Using this report you can:

- View the utilization for each topology element used in your network.
- Analyze if any of the elements are over-utilized or underutilized for a specific time range.
- Track the utilization of topology elements to resolve an existing network problem.
- Track the number of QA probes and QA probe types run in your network.

Quality Assurance Most Changed Reports

This report compares performance of the components for two different (consecutive) time periods and ranks components by the amount of change. The sort order is most-changed to least-changed.

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Most Changed**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top N

The Top N list helps you specify the number of data points that you want to see on the report.

To select data points on the report:



In the Top N list, select a value of your choice.

Grouping By

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric. On the axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

• Top/Bottom N: Top 10

· Grouping by: QA Probe Name

Metrics:

• Y1: Round Trip Time (msecs) (avg)

Quality Assurance Peak Period Report

The Peak Period report ranks the utilization and performance of QA Probes during the busiest time of the selected time range. This report enables you to:

- Identify the performance and utilization of the selected metrics during the peak period.
- Identify QA Probes that have the highest or lowest performances or utilization levels during the peak period.
- Compare the performance for multiple QA Probes during the peak period using this report.

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Peak Period**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

Grouping by Time Period:



In the Grouping by Time Period box, select the time period by which you want to group the peak values.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10

· Grouping by Time Period: Hour

Metrics:

• Y1: Round Trip Time (msecs) (avg)

Y2: Round Trip Time (msecs) (max)

Quality Assurance Top N Frequency Distribution Report

The Top N Frequency Distribution report ranks network elements by the metrics you select and shows the distribution of metric values for each collected sample during the selected time range.

You can use this report as an alternative to the Top N report. In addition to providing all the details that are available on the Top N report, this report helps you see how much time the metric value has spent in each bucket¹.

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Top N Frequency Distribution**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

¹A bucket represents a range of values. The Top N Frequency Distribution report enables you to define 12 different buckets (or ranges of values) for a metric series—from bucket 0 (Bkt 0) through bucket 11 (Bkt 11). Each bucket is associated with a color code (in-built, not configurable). The generated report represents the distribution of different value ranges with the color codes that are associated with buckets.

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

 
To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

• Top/Bottom N: Top 10

Grouping by: QA Probe Name

Metrics:

Y1: Round Trip Time (msecs) (avg)

• Y2: Round Trip Time (msecs) (max)

Quality Assurance Top N Report

The Top N report ranks QA Probes by the selected metrics. Use this report to spot the QA Probe that performed at the extremes and to analyze the historical data for QA Probes that exhibit unusual utilization levels.

The report enables you to:

- Detect any QA Probe that is experiencing a health or performance problem.
- Detect over-utilized and under-utilized QA Probes on the network.
- Compare the performance of multiple QA Probes

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Top N**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

• Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10

· Grouping by: QA Probe Name

Metrics:

Y1: Round Trip Time (msecs) (avg)

• Y2: Round Trip Time (msecs) (max)

Tip: Check this report once a day to see which network component might need special attention.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Example

Some of the destination sites in your network are performing poorly. Using this report, you can group the QA probes reporting highest Round Trip Time (RTT) for each of the destination sites. The QA probe reporting the highest RTT is ranked first.

Quality Assurance Top N Table Report

This report ranks network elements by the metrics you select. Unlike the Top N report, this report does not show any bar charts or time series graphs and does not show the others¹ group. In a large environment, NPS can generate the Top N Table report faster than it can generate the Top N report. If you want to view Top N elements in the least possible time, choose the Top N Table report instead of the Top N report.

Use this report to spot the element that performed at the extremes and to analyze historical data for elements that are exhibiting unusual utilization levels. You can:

- Detect the QoS entitie that has a health or performance problem.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network QA Probes.

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Top N Table**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

 
To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:

¹On a Top N report, elements that are not ranked by the report are grouped together and represented by the "others" row.



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

• Top/Bottom N: Top 10

· Grouping by: QA Probe Name

Metrics:

• Y1: Round Trip Time (msecs) (avg)

Y2: Round Trip Time (msecs) (max)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Quality Assurance Top N Chart Report

This report ranks QA Probes by the metrics you select. This report displays the metric values for each rank with the help of a line graph.

Use this report to spot the QA Probe that performed at the extremes and to analyze historical data for QA Probes that are exhibiting unusual utilization levels. You can:

- Detect the QoS entitie that has a health or performance problem.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network QA Probes.

How to Run the Report

To launch the Quality Assurance Reports, navigate to **iSPI Quality Assurance > Quality_Assurance > Top N Chart**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

• Filter attribute selection: None

Options

• Top/Bottom N: Top 10

• Grouping by: QA Probe Name

Metrics:

• Y1: Round Trip Time (msecs) (avg)

• Y2: Round Trip Time (msecs) (max)

Quality of Service (QoS) Reports

Quality of Service (QoS) Reports enable you to perform the following:

- Monitor the network performance, and drill-down to the root-cause of the problem
- Analyze the trend of the QoS entities in the network for a specific time period
- Forecast any problem that may arise over a period of time

Launching the NNM iSPI Performance for QA QoS Reports

Follow the steps as given below to view a QoS report:

- 1. Navigate to the Network Node Manager iSPI Performance for Metrics console using any of the following methods:
 - Click Actions > HPE NNM iSPI Performance > Reporting-Report Menu in the NNMi console.
 Alternatively, you can right-click a QoS element in the Quality Assurance inventory on the NNMi console, select HPE NNM iSPI Performance, and then select Reporting Report Menu.
 - Log in to NPS using http://<fully-Qualified-serverName>:9300/p2pd/NPS.html portal.
- 2. On the NPS home page, select **Reports** tab in the navigation panel.
- 3. Click iSPI Quality Assurance.
- 4. Click Class Based QoS.
- 5. Click QoSMetrics.
- 6. Select the report type.

For more information, see the Network Node Manager iSPI Performance for Metrics Online Help.

Before you start viewing the QoS reports, make sure that Network Performance Server (NPS) is up and running.

Quality of Service (QoS) Baseline Sleeve Report

Baseline sleeve report enables you to analyze or forecast when the selected QoS metric is likely to violate the threshold value.

You can set a QoS threshold value for a metric using the Configure QoS Threshold form in the Quality Assurance Configuration Console. For information on how to create QoS threshold, see NNM iSPI Performance for QA QoS Threshold Configuration section in HPE Network Node Manager iSPI Performance for Quality Assurance Software Help for Administrators.

This report enables you to do the following:

 Analyze if the performance of the selected QoS network element is within the normal range for the selected time range.

- Detect if the threshold state of the metric is likely to cross the high or low threshold value.
- View the details of the metric as a line chart and tabular format as well. For a specific time grain, you can
 view the time, baseline metric average, exceptions, lower normal and upper normal standard deviations in
 percentage.

Quality of Service (QoS) Calendar Report

The Calendar report uses a traditional, calendar-style layout to show hourly statistics of two metrics in a single, extended graph spanning over multiple days. You cannot use the Calendar report with a time range shorter than a day.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Calendar**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

Defaults

Time

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

· Relative start: Yes

· Interval: (Last rolling) 1 day

· Grain: 1 hour

Topology

Topology group tracking method: SCD Type 1

Filter attribute selection: None

Options

- Metrics:
 - Y1: Pre Policy Rate (kbps) (avg)
 - Y2: Post Policy Rate (kbps) (avg)

Quality of Service (QoS) Chart Detail Report

Use the Chart Detail Report to examine sampled data for any two metrics in detail. This report contains a graph representing data samples of two metrics and enables you to perform a trend analysis for health and performance of QoS entities based on historical data.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Chart Detail**. The section lists the default configuration of the report. You can modify the default settings of the report using the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Metrics

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

To modify the report layout:



This drop-down list enables you to choose to view a chart or table or both on the report. Select Chart or Table or Chart and Table depending on your requirement.

Defaults

Time

Relative start: Yes

• Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Metrics:

Y1: Pre Policy Rate (kbps) (avg)

• Y2: Post Policy Rate (kbps) (avg)

Quality of Service (QoS) Heat Chart Report

The Heat Chart (or the normalized Heat Chart) report represents the *normalized* values of a metric, calculated at every hour of the day, in a tabular format. NPS uses color codes to indicate the performance characteristic

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

of the metric in this report, which helps you spot a condition that is gradually worsening and to distinguish satisfactory performance from unsatisfactory performance.

The legend at the top of the report maps a range of normalized performance values to a particular color.

Beneath the legend, a table represents the normalized values of a performance metric, with rows representing hours of the day and columns representing days. Each cell in table is color-coded and indicates a specific value of the metric. You can hover the mouse pointer on the cell to see the absolute metric value for each hour.

With this report, you can perform the following tasks:

- Identify gradual shifts from one range of performance to another range.
- Spot an isolated instance of poor performance that affected the results for one day.
- Spot day-of-week or hour-of-day patterns.
- Verify that an abnormal condition returned to normal after a problem was corrected.

You cannot launch this report with a time range of less than 24 hours.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Heat Chart**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

To select a metric:

Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric. On the axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

- · Metrics:
 - Y1: Pre Policy Rate (kbps) (avg)
 - Y2: Post Policy Rate (kbps) (avg)

Quality of Service (QoS) Managed Inventory Report

Use the QoS Managed Inventory report to view the utilization levels of the QoS interfaces, nodes, or node groups used in the selected time range.

Using this report you can:

- View the list of QoS elements used in your network. NNM iSPI Performance for QA discovers only Cisco QoS elements.
- Identify the over-utilized or under-utilized elements for a specific time range.

Quality of Service (QoS) Headline Report

QoS Headline report enables you to analyze and compare the performances of QoS managed policies, classes, and interfaces in a single report, as follows:

- Total bytes dropped
 - Pre policy (Before applying the policy)
 - Post policy (After applying the policy)
- Total bytes dropped for the egress and ingress directions, based on the following:
 - Dropped bytes (total bytes)
 - Dropped bytes (kbps) (avg)
- Queue utilization for all the traffic classes, based on the following directions:
 - Ingress
 - Egress

- Bandwidth utilization for all the traffic classes and configured bandwidth, based on the following directions:
 - Ingress
 - Egress
- Packet drop in a traffic stream (policing) (%)

Quality of Service (QoS) Most Changed Reports

This report compares performance of the components for two different (consecutive) time periods and ranks components by the amount of change. The sort order is most-changed to least-changed.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Most Changed**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top N

The Top N list helps you specify the number of data points that you want to see on the report.

To select data points on the report:



In the Top N list, select a value of your choice.

Grouping By

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric. On the axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

• Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

• Top/Bottom N: Top 10

· Grouping by: Qualified Interface Name

Metrics:

Y1: Pre Policy Rate (kbps) (avg)

Quality of Service (QoS) Peak Period Report

The Peak Period report ranks the utilization and performance of QoS entities during the busiest time of the selected time range. This report enables you to:

- · Identify the performance and utilization of the selected metrics during the peak period.
- Identify QoS entities that have the highest or lowest performances or utilization levels during the peak period.
- Compare the performance for multiple QoS entities during the peak period using this report.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Peak Period**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

Grouping by Time Period:



In the Grouping by Time Period box, select the time period by which you want to group the peak values.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2**

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

· Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10

Grouping by Time Period: Hour

Metrics:

Y1: Pre Policy Rate (kbps) (avg)

Y2: Post Policy Rate (kbps) (avg)

Quality of Service (QoS) Threshold Sleeve Report

This report analyzes how close the metric performance value is to the threshold levels. In other words, this report enables you to analyze when the metric will reach the threshold.

Using this report, you can:

- Forecast over-utilization or under-utilization of the selected QoS element.
- Detect if the metric performance is about to cross the high and low thresholds.

For example, if you generate the Threshold Sleeve Chart report for Availability (avg), the chart displays the how close the average QoS element availability is to the high and low threshold.

• Save multiple Threshold Sleeve Reports for a specific metric for different time ranges, and analyze the metric performance trend.

This report supports one metric.

- To change the Time Controls defaults, see Using Reports > Change Time Settings with the Time Control
 Tab section.
- To change the Topology Filters defaults, see Set Topology Filters in the Using Reports section.
- To change the Report Options defaults, see *Change Report Options* in the *Using Reports > Change Reports Options* section.

Quality of Service (QoS) Top N Report

The Top N report ranks QoS entities by the selected metrics. Use this report to spot the QoS entities that performed at the extremes and to analyze the historical data for QoS entities that exhibit unusual utilization levels.

The report enables you to:

- Detect any QoS entities that are experiencing health or performance problems.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare the performance of multiple QoS entities

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Top N**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

· Relative start: Yes

· Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

Filter attribute selection: None

Options

Top/Bottom N: Top 10

· Grouping by: Qualified Interface Name

· Metrics:

• Y1: Pre Policy Rate (kbps) (avg)

Y2: Post Policy Rate (kbps) (avg)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Quality of Service (QoS) Top N Table Report

This report ranks network elements by the metrics you select. Unlike the Top N report, this report does not show any bar charts or time series graphs and does not show the others 1 group. In a large environment, NPS can generate the Top N Table report faster than it can generate the Top N report. If you want to view Top N elements in the least possible time, choose the Top N Table report instead of the Top N report.

Use this report to spot the element that performed at the extremes and to analyze historical data for elements that are exhibiting unusual utilization levels. You can:

- Detect the QoS entities that have health or performance problems.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network QoS entities.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Top N Table**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

¹On a Top N report, elements that are not ranked by the report are grouped together and represented by the "others" row.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click Show Description to see the metric definition.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10

Grouping by: Qualified Interface Name

Metrics:

• Y1: Pre Policy Rate (kbps) (avg)

Y2: Post Policy Rate (kbps) (avg)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Quality of Service (QoS) Top N Frequency Distribution Report

The Top N Frequency Distribution report ranks network elements by the metrics you select and shows the distribution of metric values for each collected sample during the selected time range.

You can use this report as an alternative to the Top N report. In addition to providing all the details that are available on the Top N report, this report helps you see how much time the metric value has spent in each bucket¹.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Top N Frequency Distribution**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

 
To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

¹A bucket represents a range of values. The Top N Frequency Distribution report enables you to define 12 different buckets (or ranges of values) for a metric series—from bucket 0 (Bkt 0) through bucket 11 (Bkt 11). Each bucket is associated with a color code (in-built, not configurable). The generated report represents the distribution of different value ranges with the color codes that are associated with buckets.

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

• Filter attribute selection: None

Options

• Top/Bottom N: Top 10

Grouping by: Qualified Interface Name

Metrics:

• Y1: Pre Policy Rate (kbps) (avg)

Y2: Post Policy Rate (kbps) (avg)

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Quality of Service (QoS) Top N Chart Report

This report ranks QoS entities by the metrics you select. This report displays the metric values for each rank with the help of a line graph.

Use this report to spot the QoS entities that performed at the extremes and to analyze historical data for QoS entities that are exhibiting unusual utilization levels. You can:

- Detect the QoS entities that have health or performance problems.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network QoS entities.

How to Run the Report

To launch the QoS Reports, navigate to **iSPI Quality Assurance > Class_Based_QoS > Top N Chart**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

• Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

• Filter attribute selection: None

Options

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

- Top/Bottom N: Top 10
- Grouping by: Qualified Interface Name
- Metrics:
 - Y1: Pre Policy Rate (kbps) (avg)
 - Y2: Post Policy Rate (kbps) (avg)

Ping Latency Pair Reports

Ping Latency Pair Reports enable you to monitor and analyze the performance of the Ping Latency Pairs and drill-down to the root-cause of the problem.

Multi-tenant architecture is also integrated with Network Performance Server and restricts a user to view only selective Ping Latency Pairs and reports. For example, while generating Top N report, a user can view the report of the Ping Latency Pairs that can be accessed by the user.

Related Topic

Launching the Ping Pair Reports

Launching the Ping Latency Pair Reports

Follow the steps as discussed below to view a Ping Pair report:

- 1. Navigate to the Network Node Manager iSPI Performance for Metrics console using any of the following methods:
 - Click Actions > HPE NNM iSPI Performance > Reporting-Report Menu on the NNMi console.
 Alternatively you can right-click a ping pair in the Quality Assurance inventory on the NNMi console, select HPE NNM iSPI Performance, and then select Reporting Report Menu.
 - Log in to NPS using http://<fully-Qualified-serverName>:9300/p2pd/NPS.html portal.
- 2. On the NPS home page, select **Reports** tab in the navigation panel.
- 3. Click iSPI Quality Assurance.
- 4. Click Ping_Latency.
- 5. Click PingPairMetrics.
- 6. Select the report type.

For more information, see the Network Node Manager iSPI Performance for Metrics Online Help

Before you start viewing the Ping Pair reports, ensure that Network Performance Server (NPS) is up and running.

Ping Latency Pair Calendar Report

The Calendar report uses a traditional, calendar-style layout to show hourly statistics of two metrics in a single, extended graph spanning over multiple days. You cannot use the Calendar report with a time range shorter than a day.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Calendar**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

Defaults

Time

· Relative start: Yes

· Interval: (Last rolling) 1 day

· Grain: 1 hour

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

- Metrics:
 - Y1: Interface Utilization(%) (avg)
 - Y2: RTT Average(ms) (avg)

Ping Latency Pair Chart Detail Report

Use the Chart Detail Report to examine sampled data for any two metrics in detail. This report contains a graph representing data samples of two metrics and enables you to perform a trend analysis for health and performance of ping latency pairs based on historical data.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Chart Detail**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Metrics

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

 
To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

To modify the report layout:



This drop-down list enables you to choose to view a chart or table or both on the report. Select Chart or Table or Chart and Table depending on your requirement.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

- · Metrics:
 - Y1: Interface Utilization(%) (avg)
 - Y2: RTT Average(ms) (avg)

Ping Latency Pair Heat Chart Report

The Heat Chart (or the normalized Heat Chart) report represents the *normalized* values of a metric, calculated at every hour of the day, in a tabular format. NPS uses color codes to indicate the performance characteristic of the metric in this report, which helps you spot a condition that is gradually worsening and to distinguish satisfactory performance from unsatisfactory performance.

The legend at the top of the report maps a range of normalized performance values to a particular color.

Beneath the legend, a table represents the normalized values of a performance metric, with rows representing hours of the day and columns representing days. Each cell in table is color-coded and indicates a specific value of the metric. You can hover the mouse pointer on the cell to see the absolute metric value for each hour.

With this report, you can perform the following tasks:

- Identify gradual shifts from one range of performance to another range.
- Spot an isolated instance of poor performance that affected the results for one day.
- Spot day-of-week or hour-of-day patterns.
- Verify that an abnormal condition returned to normal after a problem was corrected.

You cannot launch this report with a time range of less than 24 hours.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Heat Chart**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric. On the axis, you can select only one metric.

Tip: Click **Show Description** to see the metric definition.

Defaults

Time

· Relative start: Yes

Interval: (Last rolling) 1 hour

• Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

Filter attribute selection: None

Options

- Metrics:
 - Y1: Interface Utilization(%) (avg)
 - Y2: RTT Average(ms) (avg)

Ping Latency Pair Managed Inventory Report

Ping Pair Managed Inventory report enables you to view the ping pairs used in a selected time range.

Using this report you can:

- View the interface utilization for each ping pairs used in your network.
- Analyze if any of the interfaces for the selected ping pairs are over-utilized or underutilized for a specific time range.
- Track the network performances between the selected ping pairs to resolve an existing network problem.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Ping Latency Pair Most Changed Reports

This report compares performance of the components for two different (consecutive) time periods and ranks components by the amount of change. The sort order is most-changed to least-changed.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Most Changed**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top N

The Top N list helps you specify the number of data points that you want to see on the report.

To select data points on the report:



In the Top N list, select a value of your choice.

Grouping By

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric. On the axis, you can select only one metric.

Tip: Click Show Description to see the metric definition.

Defaults

Time

Relative start: Yes

• Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

· Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10Grouping by: Pair Name

Metrics:

Y1: Interface Utilization(%) (avg)

Ping Latency Pair Peak Period Report

The Peak Period report ranks the utilization and performance of ping latency pairs during the busiest time of the selected time range. This report enables you to:

- Identify the performance and utilization of the selected metrics during the peak period.
- Identify ping latency pairs that have the highest or lowest performances or utilization levels during the peak period.
- Compare the performance for multiple ping latency pairs during the peak period using this report.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Peak Period**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

Grouping by Time Period:



In the Grouping by Time Period box, select the time period by which you want to group the peak values.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click Show Description to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

· Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

• Top/Bottom N: Top 10

· Grouping by Time Period: Hour

Metrics:

Y1: Interface Utilization(%) (avg)

• Y2: RTT Average(ms) (avg)

Ping Latency Pair Top N Report

The Top N report ranks ping latency pairs by the selected metrics. Use this report to spot the ping latency pair that performed at the extremes and to analyze the historical data for ping latency pairs that exhibit unusual utilization levels.

The report enables you to:

- Detect any ping latency pair that is experiencing a health or performance problem.
- Detect over-utilized and under-utilized ping latency pairs on the network.
- Compare the performance of multiple ping latency pairs

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Top N**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10Grouping by: Pair Name

Metrics:

Y1: Interface Utilization(%) (avg)

• Y2: RTT Average(ms) (avg)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Ping Latency Pair Top N Table Report

This report ranks network elements by the metrics you select. Unlike the Top N report, this report does not show any bar charts or time series graphs and does not show the others¹ group. In a large environment, NPS

¹On a Top N report, elements that are not ranked by the report are grouped together and represented by the "others" row.

can generate the Top N Table report faster than it can generate the Top N report. If you want to view Top N elements in the least possible time, choose the Top N Table report instead of the Top N report.

Use this report to spot the element that performed at the extremes and to analyze historical data for elements that are exhibiting unusual utilization levels. You can:

- Detect the QoS entitie that has a health or performance problem.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network ping latency pairs.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Top N Table**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

Relative start: Yes

Interval: (Last rolling) 1 hour

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10Grouping by: Pair Name

Metrics:

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

- Y1: Interface Utilization(%) (avg)
- Y2: RTT Average(ms) (avg)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Ping Latency Pair Top N Frequency Distribution Report

The Top N Frequency Distribution report ranks network elements by the metrics you select and shows the distribution of metric values for each collected sample during the selected time range.

You can use this report as an alternative to the Top N report. In addition to providing all the details that are available on the Top N report, this report helps you see how much time the metric value has spent in each bucket¹.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Top N Frequency Distribution**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

 
To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

Options

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:

¹A bucket represents a range of values. The Top N Frequency Distribution report enables you to define 12 different buckets (or ranges of values) for a metric series—from bucket 0 (Bkt 0) through bucket 11 (Bkt 11). Each bucket is associated with a color code (in-built, not configurable). The generated report represents the distribution of different value ranges with the color codes that are associated with buckets.



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag^1 s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click **Show Description** to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

• Interval: (Last rolling) 1 hour

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

· Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

Filter attribute selection: None

Options

Top/Bottom N: Top 10Grouping by: Pair Name

Metrics:

Y1: Interface Utilization(%) (avg)

• Y2: RTT Average(ms) (avg)

Tip: Check this report once a day to see which network component might need special attention.

Check this report throughout the day to see which network components are performing at the extremes and might need special attention.

Ping Latency Pair Top N Chart Report

This report ranks ping latency pairs by the metrics you select. This report displays the metric values for each rank with the help of a line graph.

Use this report to spot the ping latency pair that performed at the extremes and to analyze historical data for ping latency pairs that are exhibiting unusual utilization levels. You can:

- Detect the QoS entitie that has a health or performance problem.
- Analyze the utilization of the NNMi-managed network QoS entities during a specific time range.
- Detect over-utilized and under-utilized QoS entities on the network.
- Compare performance for multiple network ping latency pairs.

How to Run the Report

To launch the Ping Latency Pair Reports, navigate to **iSPI Quality Assurance > Ping_Latency > Top N Chart**. The section lists the default configuration of the report. You can modify the default settings of the report with the help of the Time, Topology, and Options menus.

Time

To modify the time settings, click **Time** on the report. The Time Control workspace in the navigation panel opens.

Topology

To filter the report by topology attributes, click **Topology** on the report. Alternatively, click **Topology Filter** in the navigation panel, and then click **Launch Topology Selector**.

 
Options

To modify report options, first open the Report Options pane by clicking the **Options** menu on the report.

Top/Bottom N:

The Top/Bottom N list helps you specify the number of ranks that you want to see on this report.

To select data points on the report:



In the Top/Bottom N list, select a value of your choice.

To change the Grouping By option:



In the Grouping By list, select an attribute to define the grouping mechanism for the tabular data on the report.

To select more than one attribute, click **Add New Grouping**. A new Grouping By box with the list of attributes appears.

To remove a grouping attribute, click Remove Grouping.

Metrics:

To select a metric:

1. Right-click the metric.

Tip: You can use the search feature to find the metric of your choice. To search a metric, type the metric name in the Search box.

You can also use tag¹s to narrow down your search. To use tags, click inside the Tags box, and then select tags of your choice.

2. In the context menu, click **Send to Y1** if you want to select this metric for the Y1 axis; click **Send to Y2** if you want to select this metric for the Y2 axis. On each axis, you can select up to six metrics.

Tip: Click Show Description to see the metric definition.

You can limit the number of rows on the report by specifying a range of values in the From and To boxes on each axis. After typing a value in the From or To box, you must press **Enter**. For the percentage type of metrics, specify values in decimal fractions. For example, to specify 9%, type 0.09.

To remove a metric from an axis:

Right-click the metric on the axis, and then click **Delete**. The metric disappears from the axis.

To change the order of the metric:

¹A tag is a keyword that represents an aggregation type or a domain-specific group.

Right-click the metric on the axis, and then click **Move Up** or **Move Down**. The metric changes its position on the axis and, subsequently, changes its position on the report when the report is launched.

Note: Right-clicking a metric on the Y1 or Y2 axis does not bring up any context menus when no other metrics are present on the axis.

Defaults

Time

· Relative start: Yes

• Interval: (Last rolling) 1 hour

• Grain: 5 minutes

Topology

Topology group tracking method: SCD Type 1

· Filter attribute selection: None

Options

Top/Bottom N: Top 10

• Grouping by: Pair Name

Metrics:

Y1: Interface Utilization(%) (avg)

• Y2: RTT Average(ms) (avg)

Send Documentation Feedback

If you have comments about this document, you can contact the documentation team by email. If an email client is configured on this system, click the link above and an email window opens with the following information in the subject line:

Feedback on Online Help for Reports (Network Node Manager iSPI Performance for Quality Assurance Software 10.20)

Just add your feedback to the email and click send.

If no email client is available, copy the information above to a new message in a web mail client, and send your feedback to network-managerment-doc-feedback@hpe.com.

We appreciate your feedback!