

IP Telephony Call Detail Report Pack

For the Windows®, HP-UX, Solaris, and Linux operating systems

Software Version: 3.10

HP Performance Insight 5.40

User Guide

Legal Notices

Warranty

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

The information contained herein is subject to change without notice.

Restricted Rights Legend

Confidential computer software. Valid license from HP required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Copyright Notices

© Copyright 2002 - 2009 Hewlett-Packard Development Company, L.P.

No part of this document may be copied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard Company. The information contained in this material is subject to change without notice.

This product includes Xerces XML Java Parser software, which is Copyright (c) 1999 The Apache Software Foundation. All rights reserved.

This product includes JDOM XML Java Parser software, which is Copyright (C) 2000-2003 Jason Hunter & Brett McLaughlin. All rights reserved.

This product includes JClass software, which is (c) Copyright 1997, KL GROUP INC. ALL RIGHTS RESERVED.

This product includes J2TablePrinter software, which is © Copyright 2001, Wildcrest Associates (<http://www.wildcrest.com>)

This product includes Xalan XSLT Processor software, which is Copyright (c) 1999 The Apache Software Foundation. All rights reserved.

This product includes EXPAT XML C Processor software, which is Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper Copyright (c) 2001, 2002 Expat maintainers.

This product includes Apache SOAP software, which is Copyright (c) 1999 The Apache Software Foundation. All rights reserved.

This product includes O'Reilley Servlet Package software, which is Copyright (C) 2001-2002 by Jason Hunter, jhunter_AT_servlets.com. All rights reserved.

This product includes HTTPClient Package software, which is Copyright (C) 1991, 1999 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

This product includes Perl software, which is Copyright 1989-2002, Larry Wall. All rights reserved.

This product includes Skin Look And Feel software, which is Copyright (c) 2000-2002 L2FProd.com. All rights reserved.

This product includes nanoXML software, which is Copyright (C) 2000 Marc De Scheemaecker, All Rights Reserved.

This product includes Sixlegs PNG software, which is Copyright (C) 1998, 1999, 2001 Chris Nokleberg

This product includes cURL & libURL software, which is Copyright (c) 1996 - 2006, Daniel Stenberg, <daniel@haxx.se>. All rights reserved.

This product includes Quartz - Enterprise Job Scheduler software, which is Copyright 2004-2005 OpenSymphony

This product includes Free DCE software, which is (c) Copyright 1994 OPEN SOFTWARE FOUNDATION, INC., (c) Copyright 1994 HEWLETT-PACKARD COMPANY, (c) Copyright 1994 DIGITAL EQUIPMENT CORPORATION, Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

This product includes DCE Threads software, which is Copyright (C) 1995, 1996 Michael T. Peterson

This product includes Jboss software, which is Copyright 2006 Red Hat, Inc. All rights reserved.

This product includes org.apache.commons software developed by the Apache Software Foundation (<http://www.apache.org/>).

Trademark Notices

Java™ is a U.S. trademark of Sun Microsystems, Inc. Java™ and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Oracle® is a registered U.S. trademark of Oracle Corporation, Redwood City, California.

UNIX® is a registered trademark of The Open Group.

Windows® and Windows NT® are U.S. registered trademarks of Microsoft® Corporation.

Documentation Updates

This guide's title page contains the following identifying information:

- Software Version number, which indicates the software version.
- Document Release Date, which changes each time the document is updated.
- Software Release Date, which indicates the release date of this version of the software.

To check for recent updates, or to verify that you are using the most recent edition of a document, go to:

<http://h20230.www2.hp.com/selfsolve/manuals>

This site requires that you register for an HP Passport and sign-in. To register for an HP Passport ID, go to:

<http://h20229.www2.hp.com/passport-registration.html>

Or click the **New users - please register** link on the HP Passport login page.

You will also receive updated or new editions if you subscribe to the appropriate product support service. Contact your HP sales representative for details.

Support

You can visit the HP Software Support Online web site at:

<http://www.hp.com/go/hpsoftwaresupport>

This web site provides contact information and details about the products, services, and support that HP Software offers.

HP Software Support Online provides customer self-solve capabilities. It provides a fast and efficient way to access interactive technical support tools needed to manage your business. As a valued support customer, you can benefit by using the HP Software Support web site to:

- Search for knowledge documents of interest
- Submit and track support cases and enhancement requests
- Download software patches
- Manage support contracts
- Look up HP support contacts
- Review information about available services
- Enter into discussions with other software customers
- Research and register for software training

Most of the support areas require that you register as an HP Passport user and sign in. Many also require a support contract.

To find more information about access levels, go to:

http://h20230.www2.hp.com/new_access_levels.jsp

To register for an HP Passport ID, go to:

<http://h20229.www2.hp.com/passport-registration.html>

Contents

1 Overview	9
Performance Insight and Cisco CallManager	9
Recent Enhancements	10
New in Version 3.10	10
New Features in Version 3.00	11
Data Collection and Aggregation	11
Cisco CallManager as Data Source	12
Cisco IPT SPI as Data Source	12
Mapping Rate Data to Hourly Tables	12
Data Summarization and Aggregation	13
Folders and Reports	13
Generic Report Types	15
Integration with Network Node Manager	17
Options for Customizing Reports	17
Group Filters	17
Importing Property Information	18
Editing Parameters	19
Sources for Additional Information	19
2 Upgrade Install	21
Guidelines for a Smooth Upgrade	21
Prerequisites for Cisco CallManager	21
Prerequisites for Installing the Upgrade Package	21
Distributed Environments	22
Upgrading Common Property Tables	22
Upgrading IP Telephony Call Detail to 3.10	22
Package Removal	26
3 New Install	29
Guidelines for a Smooth Install	29
Prerequisites for a New Install	29
Distributed Environments	30
Upgrading Common Property Tables to Version 3.90	30
Integration with the NNM Alarm Browser	30
Installable Packages and Sub-Packages	31
Installing IP Telephony Call Detail	31
Accessing Deployed Reports	33
New Objects for the Object Model	34
Package Removal	34

4 Post-Install Configuration	37
Configuring a Data Source	37
Exporting Data from CCM 4.x	37
Scheduling an Export from CallDetailRecordDiagnostic	39
Using an FTP Session to Transfer Raw Data Files	39
Collecting Data from a CCM 5.x Database	40
CDR onDemand Service	40
How to Support Multiple Versions of CCM	41
Assigning Dial Plans to Gateways	42
Integrating with the Cisco IPT SPI	44
Modifying Default Thresholds	45
Modifying Default Thresholds for CallManagers	45
Modifying Default Gateway Thresholds	46
Modifying IP Phone User and Location	48
Modify IP QoS Parameters	49
5 Setting up a Distributed System	51
Proper Package Installation	52
Configuring the Central Server	52
Configuring a Satellite Server	54
6 Call History Summary	57
7 Top Ten and Top 100 Reports	69
8 Call QoS Summary Reports	77
9 Forecast Reports	87
10 Inventory Report	101
11 Summary Reports	103
A Version History	107
B Editing Tables and Graphs	111
View Options for Tables	111
View Options for Graphs	112
Style Options	113
Display Data Table	117
View in New Frame	117
C Troubleshooting	119
Index	121

1 Overview

This chapter covers the following topics:

- [Performance Insight and Cisco CallManager](#)
- [Recent Enhancements](#)
- [Data Collection and Aggregation](#)
- [Folders and Reports](#)
- [Integration with Network Node Manager](#)
- [Options for Customizing Reports](#)
- [Sources for Additional Information](#)

Performance Insight and Cisco CallManager

Performance Insight is a performance management application that collects data from many sources, performs in-depth trend analysis, maintains performance baselines, and provides users with convenient, web-based reporting. Following is a partial list of product features:

- Distributed architecture
- Easy to scale (supports data collection from thousands of agents)
- CODA/PA agent support
- Multi-company security model
- Data warehousing
- Near Real Time reporting
- Forecasting
- Multiple aggregations (by day, week, month; by location, by customer)
- Thresholding and alerting
- Bottlenecks easy to spot; capacity trends easy to assess
- Accurate and timely documentation for management

The reporting solution for Cisco CallManager call details consists of a report pack and a datapipe. Version 3.10 of the IP Telephony Call Detail Report Pack contains 51 reports. The datapipe, Cisco CDR Datapipe 3.20, has two data sources, Cisco CallManager and the NNM SPI for Cisco IP Telephony. Although Cisco CallManager has its own ad hoc reporting capability, the resulting reports are limited and difficult to produce. The reporting solution offers these advantages:

- Spans multiple CallManager clusters (inter-site reporting)

- Generates statistics for call quality, call availability, and call usage
- Generates the following statistics for CCM:
 - Gateway usage
 - Channel usage
 - Resource utilization
 - Performance Monitor
 - Voice application process
- Produces rolling baseline statistics
- Produces forecasts derived from rolling baseline statistics
- Monitors thresholds for usage and availability and reports threshold breaches
- Integrates with the NNM SPI for Cisco IP Telephony

This report pack will not operate correctly until you assign a dial plan to each gateway. The procedure for this step is in [Chapter 4, Post-Install Configuration](#). Chapter 4 also includes procedures for defining a data source. You can define the data source before installing the report pack or after installing the report pack.

Recent Enhancements

New in Version 3.10

Compatible with PI 5.40:

- Support for IPT Cisco Call Manager (CCM) 6.x
- Upgrades for the following data aggregation utilities:
 - trend_sum
 - hour_IPT_Hist_phoneNum.sum
 - hour_IPT_Hist_gateway_loc.sum

Compatible with PI 5.31 (Available via Patch Release Only)

- Copy Policy Enhancement
- UPGRADE_IPT_CallDetails_to_31.ap
- UPGRADE_IPT_CallDetails_Location_to_22.ap

For details about changes to earlier releases of the IP Telephony Call Detail, see [Version History](#).

New Reports in Version 3.00

- Gateway EndPoint Channel Top Ten by CM
- Gateway EndPoint Channel History Summary by CM
- Gateway EndPoint History Summary by CM
- Gateway EndPoint Channel Forecast by CM


- Gateway EndPoint Top Ten by CM
- Gateway EndPoint Channel History Summary by Location
- Gateway EndPoint History Summary by Location
- Gateway EndPoint Forecast by CM
- PerfMon Forecast
- PerfMon Summary
- Phone Number MOS Forecast
- Phone Number MOS Summary
- Phone Number MOS Top100Offender
- Process CallManager Forecast
- Process CallManager Summary
- Process Forecast by Location
- Process Summary by Location
- System Resource Forecast by Location
- System Resource Summary by Location
- System Resource CallManager Forecast
- System Resource CallManager Summary
- Voice Service History Summary by Location
- Voice Service CallManager History Summary

New Features in Version 3.00

- Location Independent Reporting (LIR)
- MOS data collection from CCM 5.x
- Gateway and channel usage data collection from the Cisco IPT SPI

Data Collection and Aggregation

The Cisco CDR Datapipeline performs the following tasks:

- Creates rate data tables
 - Collects data from two sources:
 - Cisco CallManager 4.x, 5.x, and 6.x
 - NNM SPI for Cisco IP Telephony
-  For details about the integration procedure, see [Integrating with the Cisco IPT SPI](#) on page 44.
- Maps data into hourly tables created by the IP Telephony Call Detail Report Pack.

Cisco CallManager as Data Source

Cisco CallManager produces two call information records:

- Call Detail Records (CDRs)
- Call Management Records (CMRs)

A CDR stores information about call endpoints and other call control/routing details. CDR data is used to generate bills, track call activity, to diagnose certain types of problems, and evaluate the quality of service of calls through the system. Beginning with Cisco Call Manager 5.0, CDR data includes MOS values. MOS values measure call quality.

A CMR contains information about the quality of streamed audio. In Cisco literature, both CDRs and CMRs together are referred to as CDR data.

The Cisco CDR Datapipe includes a preprocessor. If the raw data is not local, the preprocessor uses FTP to get the raw data. Next, the preprocessor parses CDR data, creating a format that Performance Insight can read and import.

Cisco IPT SPI as Data Source

The Cisco CDR Datapipe collects the following CCM details from the Cisco IPT SPI:

- Gateway availability and usage
- Gateway Endpoint availability and usage
- Channel availability and usage
- Performance Monitor statistics
- System resource usage
- Voice applications

The Cisco CDR Datapipe uses an XML parser to extract data from the SPI. If the SPI is not local, the XML parser uses FTP to get data from the SPI.

Mapping Rate Data to Hourly Tables

The Cisco CDR Datapipe runs a collection against each CallManager and the Cisco IPT SPI. Using data collected from these sources, the Cisco CDR Datapipe populates rate tables and maps data for the following statistics into hourly tables maintained by the report pack:

- Lost packets
- Jitter
- Latency
- QoS values derived from lost packets, jitter, and latency
- Call volume
- Call duration
- Call Success Ratio (CSR)
- Disconnect Cause Distribution
- Call Type Distribution

Data Summarization and Aggregation

In response to processing directives in the report pack, PI produces daily summaries from the hourly statistics, and monthly summaries from the daily statistics. In addition, PI aggregates data by:

- Phone Number
- Gateway (by CallManager and also by location)
- CallManager
- CallManager Cluster
- Location
- Process
- System Resource
- Performance Monitor

Folders and Reports

IP Telephony Call Detail contains the following report folders:

- CallManager
- CallManager Cluster
- Gateway
- Performance Monitor
- Phone Number
- Process
- System Resource
- Voice Application
- Location

Folder contents are as follows:

Call Manager Folder

- CallManager History Summary
- CallManager QoS Summary
- CallManager History Top Ten
- CallManager QoS Top Ten
- CallManager Forecast

CallManager Cluster Folder

- Cluster History Summary
- Cluster QoS Summary
- Cluster History Top Ten

- Cluster QoS Top Ten
- Cluster Forecast

Gateway Folder

- Gateway History Summary by CallManager
- Gateway QoS Summary by CallManager
- Gateway History Top Ten by CallManager
- Gateway QoS Top Ten by CallManager
- Gateway Forecast by CallManager
- Gateway EndPoint Channel History Summary by CallManager
- Gateway EndPoint Channel Top Ten by CallManager
- Gateway EndPoint History Summary by CallManager
- Gateway EndPoint Top Ten by CallManager

Performance Monitor Folder

- Performance Monitor Forecast by CallManager

Phone Number Folder

- Phone Number History Summary
- Phone Number QoS Summary
- Phone Number History Top Ten
- Phone Number QoS Top Ten
- Phone Number Forecast
- Phone Number MOS Forecast
- Phone Number MOS Summary
- Phone Number MOS Top 100 Offenders

Process Folder

- Process CallManager Forecast
- Process CallManager Summary

System Resource Folder

- System Resource Metrics Forecast by Call Manager
- System Resource Metrics Summary by Call Manager

Voice Application Folder

- Voice Service History Summary by Call Manager

Location Folder

- Gateway History Summary by Location
- Gateway QoS Summary by Location
- Gateway History Top Ten by Location
- Gateway QoS Top Ten by Location
- Gateway Forecast by Location
- Location History Summary
- Location QoS Summary
- Location History Top Ten
- Location QoS Top Ten
- Location Forecast
- Gateway EndPoint Channel History Summary by Location
- Gateway EndPoint History Summary by Location
- Process Forecast by Location
- Process Summary by Location
- System Resource Metrics Forecast by Location
- System Resource Metrics Summary by Location
- Voice Service History Summary by Location

Admin Folder

The Admin folder contains one inventory report. This report provides a list of clusters, CallManagers, gateways, and IP phones. The inventory report reads property tables that are created by the Admin module and populated by the Cisco CDR Datapipe.



IP Telephony Call Detail and IP Telephony Statistics use the same Admin module. They share the same inventory report and they share property tables.

Generic Report Types

The IP Telephony Report Pack contains multiple instances of these reports:

- **History Summary.** Provides summary data about call history from multiple perspectives. This report focuses on the Call Success Rate (CSR) percentage, while also providing statistics for Total Call Minutes and Total Normal Disconnections. Selection tables rank items by CSR, highest to lowest. You can investigate the CSR more closely by looking at the following graphs:
 - Total Call Volume
 - Total Call Minutes
 - Call Type Distribution
 - Maximum and Average Call Duration per success call
 - Abnormal Disconnect Cause
 - Call Duration Distribution

- **History Summary Top Ten.** Performs a ranking function, using results from yesterday. Provides the following tables:
 - Highest Call Volume
 - Highest Call Volume Increase
 - Most Call Minutes
 - Highest Call Minutes Increase
 - Worst Call Success Rate
 - Highest CSR Decrease
- **QoS Summary.** Provides summary data about call QoS metrics for multiple perspectives. Focuses on the packets lost, jitter, latency, and average QoS. You can investigate call QoS more closely by looking at the following graphs:
 - Calls by QoS value stacked by:
 - Good
 - Acceptable
 - Fair
 - Poor
 - Packet Lost
 - Jitter
 - Latency
- **QoS Top Ten.** Performs a ranking function, using results from yesterday. Provides the following tables:
 - Highest Packet Lost
 - Highest Packet Lost Increase
 - Highest Jitter
 - Highest Jitter Increase
 - Highest Latency
 - Highest Latency Decrease
- **Forecast reports.** Focus on Total Calls 30, 60, and 90 days from today. You can investigate forecasts in more detail by using the following tabbed graphs:
 - Call Volume Forecast
 - Call Minutes Forecast
 - Call Success Rate Forecast
 - Average QoS Forecast

Use the Standard tab to compare the baseline average to future performance; use the Day of Week tab to correlate future performance by day of week; use the History tab to track the data used in the forecast. The rolling baseline average is based on 91 days of data.

Integration with Network Node Manager

If you integrate PI and NNM, you can diagnose and isolate problems faster. Integrating NNM and PI involves running and configuring an integration script on NNM and running the Integration Wizard on PI.

If NNM and PI are already integrated, make sure to install the optional thresholds sub-package that comes with IP Telephony Call Detail. Installing the thresholds sub-package configures the Thresholds Module to detect threshold breaches related to Call Success, Network Fail, and QoS. If the Thresholds Module detects a breach, it responds by taking an action. The default action is to send a threshold trap to NNM. The trap received by NNM becomes an alarm in the NNM alarm browser. The NNM operator can respond to the alarm by opening the following reports:

- CallManager History Summary
- CallManager QoS Summary
- Gateway History Summary by Location
- Gateway QoS Summary by Location

Configuring the Thresholds Module is necessary. You need to configure the trap destination if you want to receive traps in NNM.

You can modify category, severity, and destination parameters at any time. For details about these options, see the *Thresholds Module User Guide*.

Options for Customizing Reports

The contents of a report can be customized. Here are your options:

- Apply group filters
- Edit parameters, tables, and graphs
- Add and modify property information, including thresholds

Service providers use group filters to produce customer-specific reports. Edits to parameters, tables, and graphs are temporary change that anyone can make. For more information about view options for tables and graphs see [Editing Tables and Graphs](#).

Group Filters

If you want to share reports with your customers, you must configure PI to produce customer-specific reports. Here is an overview of the steps involved:

- Use Common Property Tables to import customer names and device locations
- Create a group account for all the users affiliated with each customer
- Create a group filter for each group account

For more information about group filters, see the *PI Administration Guide*.

Importing Property Information

The reports in this package include the following types of property information:

- The ID assigned to a cluster, CallManager, or gateway
- The customer and location associated with a cluster, CallManager, or gateway
- Threshold values assigned to a CallManager, gateway, or QoS parameter
- Users and locations assigned to IP phones

Property information comes from the following sources:

- Cisco CDR Datapipe
- Common Property Tables
- Change forms bundled with IP Telephony Call Detail

If the Cisco CDR Datapipe identifies a new CallManager or gateway, it will add that CallManager or gateway to Common Property Tables. When that CallManager or gateway appears in reports, the following defaults will appear as associated properties:

- *Customer Unassigned*
- *Location Unassigned*

To associate a customer or a location with a CallManager or a gateway, use the Update Node Information form. This form is bundled with Common Property Tables. When you navigate the object tree, you will see the form listed under **Object Specific Tasks**.

The following properties are imported using forms bundled with IP Telephony Call Detail:

- CallManager thresholds
 - Call Success threshold
 - Network Fail threshold
 - QoS threshold
- Gateway thresholds
 - Call Success threshold
 - Network Fail threshold
 - QoS threshold
- Gateway dial plans
 - International call prefix
 - Local area codes
 - Toll free codes



Assigning a dial plan to each of your gateways is mandatory. If this step is not taken, the report pack will not function properly.

- IP phone properties
 - User
 - Location
- QoS thresholds

- Packet loss
- Jitter
- Latency

For more details about forms, see [Chapter 4, Post-Install Configuration](#).

Editing Parameters

Editing a parameter applies a constraint. The constraint filters out the data you are not interested in seeing. If you edit the Customer Name parameter, data for every customer except the customer you typed in the Customer Name field drops from the report. Similarly, if you edit the Location parameter, data for all locations except the location you typed in the Location field drops from the report.

You can apply multiple constraints at once. Which constraints are available depends on which report you are viewing. Each report supports one or more of the following constraints:

- Customer
- Location
- Cluster
- CallManager
- Gateway
- Phone number

If you are using the Web Access Server to view reports remotely, edit parameters by clicking the Edit Parameters icon at the bottom right-hand corner of the report. When the Edit Parameters window opens, enter the constraint in the field and click **Submit**.

If you are using Report Viewer, select **Edit** → **Parameter Values** from the menu bar. When the Modify Parameter Values window opens, click the **Current Value** field. Type a new value and click **OK**.

Sources for Additional Information

This guide contains samples of some of the reports in the package. The demo package that comes with IP Telephony Call Detail contains a sample of every report in the package. If you have access to the demo package and you want to know what fully-populated reports look like, install the demo package. Like real reports, demo reports are interactive. Unlike real reports, demo reports are static.

For information regarding the latest enhancements to this package and any known issues, refer to the *IP Telephony Call Detail Report Pack Release Notes*. You may also be interested in the following documents:

- *Call Manager 4.0(1) Call Detail Record Definition* (Cisco)
- *Call Manager 5.0 Call Detail Record Definition* (Cisco)
- *Call Manager 6.0 Call Detail Record Definition* (Cisco)
- *Cisco IP Telephony Statistics User Guide*
- *PI Report Packs, CD-ROM Release Notes, February 2009*

You can download manuals for PI and manuals for the reporting solutions that run on PI from this site:

<http://h20230.www2.hp.com/selfsolve/manuals>

The user guides for PI are listed under **Performance Insight**. The user guides for report packs and datapipes are listed under **Performance Insight Report Packs**. Every guide indicates a date. If a guide is revised and reposted, the date will change. Since we post revised manuals on a regular basis, you should check this site for updates.

2 Upgrade Install

This chapter provides guidelines for a smooth upgrad, steps that you can follow to upgrade the IP Telephony Call Detail report pack to the latest version, and steps on how to remove packages.

Guidelines for a Smooth Upgrade

The report pack CD contains report packs, datapipes, and several shared packages. When you insert the CD and launch the extraction program, the install script extracts every package from the CD and copies the results to the Packages directory on your system. When the extract finishes, the install script prompts you to launch PI and start Package Manager. Before using Package Manager, review the following guidelines.


Prerequisites for Cisco CallManager

Each system running CallManager must be running the following software:

- CallManager version 4.x, 5.x, or 6.x
- FTP server (if running CallManager 4.x)

Prerequisites for Installing the Upgrade Package


The following software must be in place before upgrading:

- PI 5.40
- Any and all service packs available for PI 5.40
- Common Property Tables 3.90
- Cisco IP Telephony Admin 2.10
- Cisco IP Telephony CallDetails 3.10
- Cisco IP Telephony CallDetails Location 2.20 (optional)
- Cisco CDR Datapipe
-  IP Telephony Statistics and IP Telephony Call Detail share the same Admin package. If you just upgraded the IP Telephony Statistics Report Pack, the Admin sub-package is already upgraded
- FTP server configured with the trendadm user (allows the trendadm user to FTP)

Distributed Environments

If you are running IP Telephony Call Detail in a distributed environment, the upgrade is more complicated. These are the steps to follow:

- 1 Disable trendcopy on the central server.
- 2 Install the following package on the central server:
 - Cisco_IP_Telephony_CallDetails_Upgrade_to_31; deploy reports
 - Cisco_IP_Telephony_Admin_Upgrade_to_21; deploy reports
 - Cisco_IP_Telephony_CallDetails_Loc_Upgrade_to_22
- 3 For each satellite server:
 - Install the following packages:
 - Cisco_IP_Telephony_CallDetails_Upgrade_to_31
 - Cisco_IP_Telephony_Admin_Upgrade_to_21
 - Cisco_IP_Telephony_CallDetails_Loc_Upgrade_to_22
 - Install Cisco CDR Datapipe 3.20

 Until recently, you needed to delete the older version of the Cisco CDR Datapipe, in order to install the newer version. This step is no longer necessary. The existing configurations of your CDR datapipe are retained while you install the CiscoCDR_Datapipe_Upgrade_to_32 package.
- 4 Re-enable trendcopy on the central server.
- 5 Configure the central server and each satellite server. For details, see [Chapter 5, Setting up a Distributed System](#).

Upgrading Common Property Tables

If you are running an earlier version of Common Property Tables, upgrade to version 3.90 by installing the upgrade package `CommonPropertyTables_Upgrade_to_39`. Installing this upgrade is no different from installing any other upgrade. However, do not install this upgrade package *and* other packages at the same time. Install *only* the upgrade package for Common Property Tables.

Upgrading IP Telephony Call Detail to 3.10

Perform the following tasks to upgrade IP Telephony Call Detail to version 3.10:

- Task 1: Extract packages from the report pack CD
- Task 2: If necessary, upgrade to Common Property Tables 3.90 by installing `CommonPropertyTables_Upgrade_to_39` package
- Task 3: Pre-install configuration for `UPGRADE_CiscoCDR_Datapipe_to_32.ap`
- Task 4: Install the upgrade packages

- Task 6: Install Cisco CDR Datapipe 3.20

▶ Until recently, you needed to delete the older version of the Cisco CDR Datapipe, in order to install the newer version. This step is no longer necessary. The existing configurations of your CDR datapipe would be retained while you install the CiscoCDR_Datapipe_Upgrade_to_32 package.

- Task 7: Post-install configuration for UPGRADE_CiscoCDR_Datapipe_to_32.ap

▶ If your system is distributed, do not install the datapipe on the central server.

Task 1: Extract Packages from the report pack CD to the Packages directory on your system

- 1 Log on to the system. On UNIX systems, log on as root.
- 2 Stop OVPI Timer and wait for processes to terminate.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: **sh /sbin/init.d/ovpi_timer stop**

Sun: **sh /etc/init.d/ovpi_timer stop**

- 3 Insert the report pack CD in the CD-ROM drive. On Windows, a Main Menu is displayed automatically. On UNIX, mount the CD if it does not mount automatically, then navigate to the top-level directory on the CD and run the **./setup** command.
- 4 Type **1** in the choice field and press **Enter**. The install script displays a percentage complete bar. When the copy is complete, the install script starts Package Manager. The Package Manager welcome window opens.

When the copy to the Packages directory is complete, you can see the results by navigating to the Packages directory. If you open the IP_Telephony folder, you can see the following sub-directories:

- Docs
- Gateway_Statistics.ap
- Gateway_Statistics_Demo.ap
- Gateway_Statistics_Location.ap
- Gateway_Statistics_Thresholds.ap
- IPT_Admin.ap
- IPT_CallDetails.ap
- IPT_CallDetails_Demo.ap
- IPT_CallDetails_Location.ap
- IPT_CallDetails_Thresholds.ap
- NNM_Utils
- UPGRADE_Gateway_Statistics_to_32.ap
- UPGRADE_Gateway_Statistics_Location_to_31.ap
- UPGRADE_IPT_Admin_to_21.ap
- UPGRADE_IPT_CallDetails_to_31.ap
- UPGRADE_IPT_CallDetails_Location_to_22.ap

Under the Cisco CDR Datapipe folder, you will see the following folder:

- CiscoCDR_Datapipe.ap
- Docs

Task 2: If necessary, upgrade to Common Property Tables 3.90

IP Telephony Call Detail requires Common Property Tables. If you have not already upgraded to version 3.90, upgrade now by installing CommonPropertyTables_Upgrade_to_39 package. Do not install other packages when you upgrade Common Property Tables. If you need help with the upgrade, refer to the *Common Property Tables User Guide*. When you finish the upgrade, click **Done** to return to the Management Console.

Task 3: Pre-install configuration for UPGRADE_CiscoCDR_Datapipe_to_32.ap

Before you proceed with the upgrade install, perform the following steps for UPGRADE_CiscoCDR_Datapipe_to_32.ap:

- 1 Locate the file `{DPIPE_HOME}/packages/CiscoCDR_Datapipe/UPGRADE_CiscoCDR_Datapipe_to_32.ap/CCM6_datapipe.ini`, then locate line 5:

```
args=-username=abc -password=abc -ccmHost=xx.xxx.xx.xxx -servicePort=8443  
-ftpHost=xx.xxx.xx.xxx -ftpUser=xyz -ftpPassword=xyz -ftpDir=/xyz/  
-timeZone=PST -nday=1
```
- 2 Replace values of the parameters with real ones. Among them, default service port number is **8443**, default nday value is **1**, which means fetch data of yesterday.

```
username=<CCM UserName>  
password=<CCM passwd>  
ccmHost=<CCM IPAddress>  
servicePort=<CCM PortNo> default : 8443  
ftpHost=<PI FTP IPAddress>  
ftpUser=<PI FTPUser>  
ftpPassword=<PI FTPHost>  
ftpDir=/xyz/  
timeZone=PST  
nday=1
```
- 3 Copy the updated file from
`{DPIPE_HOME}/packages/CiscoCDR_Datapipe/UPGRADE_CiscoCDR_Datapipe_to_32.ap/CCM6_datapipe.ini`
to the following folder
`{DPIPE_HOME}/packages/CiscoCDR_Datapipe/CiscoCDR_Datapipe.ap`.

Task 4: Install the upgrade package(s)

- 1 Start Package Manager. The Package Manager welcome window opens.
- 2 Click **Next**. The Package Location window opens.
- 3 Click **Install**.
- 4 Approve the default installation directory or select a different directory if necessary.
- 5 Click **Next**. The Report Deployment window opens. Accept the default for Deploy Reports; accept the defaults for application server name and port; type your user name and password for the PI Application Server.
- 6 Click **Next**. The Package Selection window opens.

- 7 Click the check box next to the following packages:
 - *Cisco_IP_Telephony_CallDetails_Upgrade_to_31*
 - *Cisco_IP_Telephony_Admin_Upgrade_to_21*
 - *Cisco_IP_Telephony_CallDetails_Loc_Upgrade_to_22*
- 8 Click **Next**. The Type Discovery window opens.
- 9 Disable the default and click **Next**. The Selection Summary window opens.
- 10 Click **Install**. The Installation Progress window opens and the install process begins. When the install finishes, an installation complete message appears.
- 11 Click **Done** to return to the Management Console.

Task 5: Remove Cisco CDR Datapipe 2.1

- 1 Start Package Manager. The Package Manager welcome window opens.
- 2 Click **Next**. The Package Location window opens.
- 3 Click **Uninstall**.
- 4 Click **Next**. The Report Undeployment window opens.
- 5 Accept the defaults for Undeploy Reports, Application Server Name, and Port; type the username and password for *trendadm*.
- 6 Click **Next**. The Package Selection window opens.
- 7 Click the check box next to the following package:
 - CiscoCDR_Datapipe 2.1*
- 8 Click **Next**. The Selection Summary window opens.
- 9 Click **Uninstall**. The Progress window opens and the removal process begins. When removal finishes, a removal complete message appears.
- 10 Click **Done** to return to the Management Console.

Task 6: Install Cisco CDR Datapipe 3.20; restart OVPI Timer

- 1 Start Package Manager. The Package Manager welcome window opens.
- 2 Click **Next**. The Package Location window opens.
- 3 Click **Install**.
- 4 Click **Next**. The Report Deployment window opens. Disable the default for Deploy Reports. Accept the defaults for application server name and port. Type your user name and password for the PI Application Server.
- 5 Click **Next**. The Package Selection window opens.
- 6 Click the check box next to the following package:
 - Cisco CDR Datapipe 3.2*
- 7 Click **Next**. The Type Discovery window opens. Disable the default.
- 8 Click **Next**. The Selection Summary window opens.
- 9 Click **Install** to begin the installation process. The Installation Progress window opens and the install process begins. When the install finishes, an installation complete message appears.

10 Click **Done** to return to the Management Console.

11 Restart OVPI Timer.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: **sh /sbin/init.d/ovpi_timer start**

Sun: **sh /etc/init.d/ovpi_timer start**

Task 7: Post-install configuration for UPGRADE_CiscoCDR_Datapipe_to_32.ap

1 Update the `{DPIPE_HOME}/lib/trendtimer.sched` as follows, then restart the OVPI timer service after you finish the modification.

a Comment line:

```
1:00+30 - - {DPIPE_HOME}/bin/trend_proc -f {DPIPE_HOME}/scripts/
CiscoCDR.pro
```

b Add line:

```
24:00+1:00 - - {DPIPE_HOME}/bin/trend_proc -f {DPIPE_HOME}/scripts/
CiscoCDR.pro
```

2 Perform the following steps:

a Run the following command on the server where the NNM SPI for IPT is installed
ovstop -d OVPI_IPT_Datapipe

b Take a backup of the `iptdatapipe.jar` file and copy the updated version to replace the existing jar file.
The location of this jar file would be `$OV_MAIN_PATH/java` folder.

c Run the following command on the server where the NNM SPI for IPT is installed:
ovstart -d OVPI_IPT_Datapipe

3 To collect data from CCM 5.x/6.x repository box, the CDRonDemand Service needs to be started on CCM 5.x/6.x repository box.

Package Removal

Follow these steps to uninstall IP Telephony Call Detail and associated packages.

1 Log on to the system. On UNIX systems, log on as root.

2 Stop OVPI Timer and wait for processes to terminate.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: **sh /sbin/init.d/ovpi_timer stop**

Sun: **sh /etc/init.d/ovpi_timer stop**

3 Start Package Manager. The Package Manager welcome window opens.

4 Click **Next**. The Package Location window opens.

5 Click **Uninstall**.

- 6 Click **Next**. The Report Undeployment window opens. Accept the defaults for Undeploy Reports, Application Server Name, and Port. Type the username and password for *trendadm*.
- 7 Click **Next**. The Package Selection window opens.
- 8 Click the check box next to the following packages:
 - Cisco_IP_Telephony_Admin*
 - Cisco_IP_Telephony_CallDetails*
 - Cisco_IP_Telephony_CallDetails_Location* (if installed)
 - Cisco_IP_Telephony_CallDetails_Thresholds* (if installed)
 - Cisco_IP_Telephony_CallDetails_Demo* (if installed)
 - CiscoCDR_Datapipe*
- 9 Click **Next**. The Selection Summary window opens.
- 10 Click **Uninstall**. The Progress window opens and the removal process begins. When removal finishes, a removal complete message appears.
- 11 Click **Done** to return to the Management Console.
- 12 Restart OVPI Timer.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**

UNIX: As root, do one of the following:

HP-UX: **sh /sbin/init.d/ovpi_timer start**

Sun: **sh /etc/init.d/ovpi_timer start**

3 New Install

This chapter covers the following topics:

- Guidelines for a smooth installation
- Installing the report pack and associated packages
- Accessing deployed reports
- New objects in the object model
- Package removal

Guidelines for a Smooth Install

An PI reporting solution has two ingredients, a report pack and a datapipe. Some reporting solutions offer multiple datapipes. Installing a datapipe configures PI to collect a specific type of performance data at a specific interval. Installing a report pack configures PI to summarize and aggregate the data collected by the datapipe.

When you insert the report pack CD-ROM and launch the package extraction program, the install script extracts every package from the CD and copies the results to the Packages directory on your system. After the extract finishes, the install script prompts you to launch PI and start Package Manager.

This chapter contains the package extract procedure. If the extraction step has already taken place, then IP Telephony Call Detail is ready to install. Before starting Package Manager, review the following guidelines.

Prerequisites for a New Install

The following software must be in place before installing the IPT Call Detail package on the system running PI:

- PI 5.40
- All service packs available for 5.40
- FTP server configured with the trendadm user (allows the trendadm user to FTP)

Details about each service pack, including installation instructions, can be found in the release notes created for each service pack.

The following software must be in place on the CallManager system:

- CallManager version 4.x, 5.x, or 6.x
- FTP server (if running CallManager version 4.x)

Distributed Environments

If you intend to run this package in a distributed environment, installation is more complicated. The rules are as follows:

- Make sure that every server is running the same version of PI.
- Make sure that every server is running the same service packs.
- Disable trendcopy on the central server.
- Install the following packages on the central server:
 - Cisco IP Telephony Admin; deploy reports
 - Cisco IP Telephony CallDetails; deploy reports
 - Cisco IP Telephony CallDetails Location; deploy reports
 - Cisco IP Telephony CallDetails Thresholds
 - Thresholds Module (Threshold and Event Generation)
 - Common Property Tables
- Install the following packages on each satellite server:
 - Cisco IP Telephony Admin
 - Cisco IP Telephony CallDetails
 - Cisco IP Telephony CallDetails Location
 - Common Property Tables
 - Cisco CDR Datapipe
- Re-enable trendcopy on the central server.
- Configure the central server and each satellite server. For details, see [Chapter 5, Setting up a Distributed System](#).

Upgrading Common Property Tables to Version 3.90

IP Telephony Call Detail requires Common Property Tables. If you are installing everything for the first time, the install wizard will install Common Property Tables for you. If you are running an earlier version of Common Property Tables, upgrade to the latest version by installing the upgrade package `CommonPropertyTables_Upgrade_to_39`. Do not install other packages when you upgrade Common Property Tables. Install *only* the upgrade package for Common Property Tables.

Integration with the NNM Alarm Browser

If NNM and PI are integrated, PI can notify NNM when threshold breaches are detected. To take advantage of this feature, install the optional thresholds sub-package. The default settings enabled by the optional thresholds sub-package can be modified by using the forms described in [Chapter 4, Post-Install Configuration](#).

The thresholds sub-package has a prerequisite, the Threshold and Event Generation Module, commonly known as the Thresholds Module. For more information about configuration options, recent changes, and installation, see the *Thresholds Module User Guide*.

Installable Packages and Sub-Packages

Once PI packages are extracted from the CD to the Packages directory on your system, the following packages are available for installation.

- IPT_Admin.ap

Allows the Cisco IP Telephony Statistics Report Pack and the IP Telephony Call Detail Report Pack to share property data for the objects they have in common. Sharing property data eliminates duplication, allows the database to operate more efficiently, and simplifies administration. The Admin module creates the following tables:

- K_IPT_Cluster — for IP Telephony CallManager clusters
- K_IPT_CManager — for IP Telephony CallManagers
- K_IPT_gateway — for the gateways associated with CallManagers
- K_IPT_gateway_loc — for the gateways associated with locations
- K_IPT_phoneNum — for the IP phones associated with CallManagers
- K_IPT_loc — for the IP phones associated with locations
- K_IPT_Qos — for QoS parameters

The data in these tables can be modified using the property update forms described in [Chapter 4, Post-Install Configuration](#).

- Cisco_IP_Telephony_CallDetails.ap

The main package. Contains directives for PI related to summarizing and aggregating data.

- Cisco_IP_Telephony_CallDetails_Location.ap

An optional sub-package that makes it possible to see usage patterns and trends aggregated by location.

- Cisco_IP_Telephony_CallDetails_Thresholds.ap

This optional sub-package contains a thresholds policy. The policy is read by the Thresholds Module. The Thresholds Module monitors the database for threshold conditions and responds to a breach condition by taking an action. The Thresholds Module is a prerequisite for the optional thresholds sub-package.

Installing IP Telephony Call Detail

Perform the following tasks to install IP Telephony Call Detail:

Task 1: Stop OVPI Timer and extract packages from the report pack CD

- 1 Log on to the system. On UNIX systems, log on as root.
- 2 Stop OVPI Timer and wait for processes to terminate.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: `sh /sbin/init.d/ovpi_timer stop`

Sun: `sh /etc/init.d/ovpi_timer stop`

- 3 Insert the report pack CD in the CD-ROM drive. On Windows, a Main Menu is displayed automatically. On UNIX, mount the CD if it does not mount automatically, then navigate to the top level directory on the CD and run the **./setup** command.
- 4 Type **1** in the choice field and press **Enter**. The install script displays a percentage complete bar. When the copy is complete, the install script starts Package Manager. The Package Manager welcome window opens.

When the copy to the Packages directory is complete, you have the option of seeing the results by navigating to the Packages directory. If you open the IP_Telephony folder, you can see the following contents:

- Docs
- Gateway_Statistics.ap
- Gateway_Statistics_Demo.ap
- Gateway_Statistics_Location.ap
- Gateway_Statistics_Thresholds.ap
- IPT_Admin.ap
- IPT_CallDetails.ap
- IPT_CallDetails_Demo.ap
- IPT_CallDetails_Location.ap
- IPT_CallDetails_Thresholds.ap
- NNM_Utils
- UPGRADE_Gateway_Statistics_to_32.ap
- UPGRADE_IPT_Admin_to_21.ap
- UPGRADE_IPT_CallDetails_to_30.ap
- UPGRADE_IPT_CallDetails_Location_to_21.ap

Under the Cisco CDR Datapipe folder, you can see the following folder:

- CiscoCDR_Datapipe.ap
- Docs

You can ignore the upgrade packages. Installing the demo package is optional. You can install the demo package by itself, with no other packages, or you can install the demo package along with everything else.

Task 2: Upgrade to Common Property Tables 3.90

If you have not already upgraded to Common Property Tables 3.90, upgrade now by installing CommonPropertyTables_Upgrade_to_39 package. If you need help with the upgrade, see the *Common Property Tables User Guide*. When Package Manager indicates that the upgrade is complete, click **Done** to return to the Management Console.

Task 3: Install IP Telephony Call Detail, the Datapipe, and Optional Sub-Packages

- 1 Start Package Manager. The Package Manager welcome window opens.
- 2 Click **Next**. The Package Location window opens.
- 3 Click **Install**. Approve the default installation directory or select a different directory if necessary.

- 4 Click **Next**. The Report Deployment window opens. Accept the default for Deploy Reports; accept the defaults for application server name and port; type your user name and password for the PI Application Server.
- 5 Click **Next**. The Package Selection window opens.
- 6 Click the check box next to the following packages:

Cisco_IP_Telephony_CallDetails

Cisco_IP_Telephony_Admin

Cisco_IP_Telephony_CallDetails_Location

Cisco-IP_Telephony_CallDetails_Thresholds

CiscoCDR_Datapipe



If your system is distributed, the thresholds sub-package belongs on the central server, not on satellite servers. Installing the thresholds sub-package on satellite servers is necessary only if you want to set thresholds against hourly data.

The Cisco CDR Datapipe must be installed on any server that polls.

- 7 Click **Next**. The Type Discovery window opens. Disable the default.
- 8 Click **Next**. The Selection Summary window opens.
- 9 Click **Install** to begin the installation process. The Installation Progress window opens and the install process begins. When the install finishes, an installation complete message appears.
- 10 Click **Done** to return to the Management Console.
- 11 Restart OVPI Timer.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: **sh /sbin/init.d/ovpi_timer start**

Sun: **sh /etc/init.d/ovpi_timer start**

Accessing Deployed Reports

When you installed the Call Detail package, you enabled the Deploy Reports option. As a result, the reports in this package (as well as any forms that come with this package) were deployed to the PI Application Server. Once reports reside on the PI Application Server, you have two ways to view them:

- PI client applications
- Web browser

If the client applications are installed on your system, you have access to Report Viewer, Report Builder, and the Management Console. If you do not have the client applications, you must use a web browser to view reports.

For more information about the clients, see the *PI Installation Guide*. For details about the Management Console, including how to use the Object/Property Management view to launch reports specific to a selected object, see the *PI Administration Guide*.

New Objects for the Object Model

An object is any item that has performance data or property information associated with it. Devices, customers, and locations are objects, and all three of these object categories belong to PI's default object model. When you select an object in the object model, the right side of the Object/Property Management window refreshes, showing a list of forms under **General Tasks**, a list of forms under **Object Specific Tasks**, and a list of reports under **Object Specific Reports**.

The object tree changes each time you install a new report pack. Some report packs add a new class of objects or services that do not fit within the default model. When this happens, installing the report pack adds a new view. To open the new view, select **View** → **Change View**.

IP Telephony Call Detail adds the following object categories to the object model:

- Cluster
- CallManager
- Gateway
- GW Endpoint
- Channel
- IP_Phone

Package Removal

Follow these steps to uninstall IPT Call Detail and the associated packages.

- 1 Log on to the system. On UNIX systems, log on as root.
- 2 Stop OVPI Timer and wait for processes to terminate.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: `sh /sbin/init.d/ovpi_timer stop`

Sun: `sh /etc/init.d/ovpi_timer stop`

- 3 Select **Start** → **HP Software** → **Performance Insight** → **Package Manager**. The Package Manager welcome window opens.
- 4 Click **Next**. The Package Location window opens.
- 5 Click **Uninstall**.
- 6 Click **Next**. The Report Undeployment window opens. Accept the defaults for Undeploy Reports, Application Server Name, and Port. Type your username and password.
- 7 Click **Next**. The Package Selection window opens.
- 8 Click the check box next to the following packages:

Cisco_IP_Telephony_Admin

Cisco_IP_Telephony_CallDetails

Cisco_IP_Telephony_CallDetails_Location (if installed)

Cisco_IP_Telephony_CallDetails_Thresholds (if installed)

Cisco_IP_Telephony_CallDetails_Demo (if installed)

CiscoCDR_Datapipe

- 9 Click **Next**. The Selection Summary window opens.
- 10 Click **Uninstall**. The Progress window opens and the removal process begins. When removal finishes, a removal complete message appears.
- 11 Click **Done** to return to the Management Console.
- 12 Restart OVPI Timer.

Windows: Select **Settings** → **Control Panel** → **Administrative Tools** → **Services**.

UNIX: As root, do one of the following:

HP-UX: `sh /sbin/init.d/ovpi_timer start`

Sun: `sh /etc/init.d/ovpi_timer start`

4 Post-Install Configuration

This chapter covers the following post-install configuration topics:

- Configuring a data source
- Assigning dial plans to gateways
- Integrating the reporting solution with the Cisco IPT SPI
- Modifying default thresholds for CallManagers and gateways
- Modifying users and locations for IP phones
- Modifying QoS parameters

Assigning dial plans to gateways is mandatory. The report pack will not operate correctly until every gateway has a dial plan assigned to it.

Configuring a Data Source

This section explains how to:

- Schedule an export of data from a CCM 4.x database
- Schedule an export from the CDR Diagnostic table
- Configure the preprocessor to FTP CallManager raw data files to your PI server
- Use an FTP session to transfer raw data files
- Collect data from a CCM 5.x database
- Start the CDR onDemand Service
- Apply a workaround for supporting multiple versions of CCM

Exporting Data from CCM 4.x

Follow these steps to schedule an export of data from the *CallDetailRecord* table in a CCM 4.x database:

- 1 Select **Start** → **Programs** → **Microsoft SQL Server** → **Enterprise Manager**. The SQL Server Enterprise Manager window opens.
- 2 Select **Console Root** → **Microsoft SQL Servers** → **SQL Server Group** and select the SQL server name in the Tree window.
- 3 Select **Tool** → **Data Transformation Services** → **Export Data**. The DTS Import/Export Wizard opens.
- 4 Click **Next**. The Choose a Data Source window opens.
- 5 Select **CDR** in the **Database** drop-down list.

- 6 Click **Next**. The Choose a Destination window opens.
- 7 Select **Text File** in the **Destination** drop-down list.
- 8 Type the path\filename in the **File name** field. For example:

`C:\IPT_CDR\cdr-Jan200730.csv`



cdr word must be there in file.

- 9 Click **Next**. The Specify Table Copy or Query window opens.
- 10 Click **Use a query to specify the data to transfer**.
- 11 Click **Next**. The Type SQL Statement window opens.
- 12 Type the following SQL statement in the Query statement window:

```
"select cdrRecordType,
globalCallID_callManagerID,
globalCallID_callID,
dateTimeOrigination,
origSpan,
origIpAddr,
CallingPartyNumber,
origCause_value,
origMediaTransportAddress_IP,
origMediaCap_payloadCapability,
destSpan,
destIpAddr,
finalCalledPartyNumber,
destCause_value,
destMediaTransportAddress_IP,
destMediaCap_payloadCapability,
dateTimeConnect,
dateTimeDisconnect,
duration,
origDeviceName,
destDeviceName,
globalCallID_ClusterID
from CallDetailRecord
where datediff(day,dateadd(second,dateTimeDisconnect,'1/1/
1970'),getdate())=1"
```

- 13 Click **Next**. The Select Destination File Format window opens.
- 14 Accepts the default settings by clicking **Next**. The Save, Schedule, and Replicate Package window opens.
- 15 Mark the **Schedule DTS package for later execution** check box.
- 16 Click **Next**. The Save DTS Package window opens.
- 17 Type the name of your DTS package in the **Name** field. For example:

`Export_CDRs`

- 18 Click **Next**. The Summary window of the DTS Import/Export Wizard opens.
- 19 Click **Finish** if there is no error in the Summary window.
- 20 Click **OK** if a pop-up window opens with this message:

Successfully copied a table from the Microsoft SQL Server to flat file.

If you see an error message, fix the problem, then repeat these steps.

- 21 Click **Done** in the Executing Package window.

Scheduling an Export from CallDetailRecordDiagnostic

Follow these steps to schedule an export of data from the *CallDetailRecordDiagnostic* table:

- 1 Repeat steps 1 through 11 above.
- 2 Type the following SQL statement in the Query statement window:

```
"select cdrRecordType,
globalCallID_callManagerID,
globalCallID_callID,
dateTimeStamp,
numberPacketsSent,
numberOctetsSent,
numberPacketsReceived,
numberOctetsReceived,
numberPacketsLost,
jitter,
latency,
deviceName,
globalCallID_ClusterID
from CallDetailRecordDiagnostic
```
- 3 Repeat steps 13 through 16 above.
- 4 Type the name of your DTS package in the **Name** field. For example:
Export_CMRS
- 5 Repeat steps 18 through 21 above.

Using an FTP Session to Transfer Raw Data Files

If CallManager is storing raw data on a remote machine, configure the preprocessor to FTP those files from the remote machine to your PI server. Follow these steps:

- 1 Open this file:
`{DPIPE_HOME}/scripts/CiscoCDR_Collection.pro`
- 2 Locate this line:
`{DPIPE_HOME}/bin/perl {DPIPE_HOME}/bin/CiscoCDR_PP.pl`
- 3 Change that line to:
`{DPIPE_HOME}/bin/perl {DPIPE_HOME}/bin/CiscoCDR_PP.pl -f 1
-m <Remote_Host_Name> -u <username> -p <password> -r <remote_directory>
-v <CDR/CMR_version>`

where options for this command include:

Option	Description
-a	The name of the CallManager to be monitored. The default is all devices are monitored.
-b	The backup option for the Cisco CDR raw data files: delete , keep , or move . The default is to move the CDR data files to the following directory: <code>{DPIPE_HOME}/data/ImportData/CiscoCDR_Datapipe/backup</code>
-d	The date of the CDR data file (in <code>yyyymmdd</code> format) to retrieve. The default is to retrieve all CDR data files (all dates).
-f	The location from which to retrieve the CDR data files: 0 or 1 where 0 retrieves the CDR files from a local directory (defined by the <code>-l</code> option) and 1 retrieves the CDR files using ftp. The default is 0.
-h	Lists the description of the command options.
-l	The local directory where Cisco CDR data files are located. The default is <code>{DPIPE_HOME}/data/ImportData/CiscoCDR_Datapipe</code>
-m	The ftp target machine name.
-p	The password to use for the ftp session
-r	The remote directory on the ftp target machine from which to retrieve the CDR data files.
-u	The username to use for ftp session.
-v	The version of the CCM data definition: 4.x , 5.x , or 6.x . The default is 5.x.

Collecting Data from a CCM 5.x Database

Follow these steps to collect data from a CallManager 5.x repository server:

- 1 Open this file:

```
{DPIPE_HOME}/scripts/CiscoCDR_Collection.pro
```

- 2 Locate this line:

```
{DPIPE_HOME}/bin/CCM5_datapipe -username=abc -password=abc -ccmHost=xx.xxx.xx.xxx  
-servicePort=8080 -ftpHost=xyz -ftpUser=xyz -ftpPassword=xyz -ftpDir=/xyz/ -timeZone=PST
```

- 3 Change that line to:

```
{DPIPE_HOME}/bin/CCM5_datapipe -username=<repository_user> -password=<repository_password>  
-ccmHost=<repository_IP_address> -servicePort=<repository_service_port_number>  
-ftpHost=<name_of_OVPI_server_running_FTP> -ftpUser=<FTP_user> -ftpPassword=<FTP_password>  
-ftpDir=<full_pathname_of_location_of_collected_data> -timeZone=<repository_time_zone>
```

CDR onDemand Service

CallManager 5.x includes a web service called CDR onDemand Service. CDR onDemand Service is a SOAP/HTTPS-based service that runs on the CDR Repository node. However, you must start the service from the CallManager 5.x repository server.

CDR onDemand Service receives SOAP requests for CDR file name lists. The lists are based on a time interval specified by the user. The maximum time interval is one hour. The CDR onDemand Service returns all the lists that fit the specified time duration.

CDR onDemand Service uses FTP to deliver a specific CDR file to a destination. The program that fetches data from the CallManager 5.x repository server, and puts the data in a folder defined by the user, is CCM5_datapipe. If you are running CCM5_datapipe, supplying the FTP parameter is mandatory.

How to Support Multiple Versions of CCM

Using the following workaround, you can use multiple versions of CCM (5.x/4.x/6.x) and reporting will be done:

- 1 Make a backup of `CiscoCDR_Collection.pro` file.

This `.pro` file resides in two places:

- `{DPIPE_HOME}/scripts`
- `{DPIPE_HOME}/packages/CiscoCDR_Datapipe/CiscoCDR_Datapipe.ap`

- 2 Navigate to the `scripts` directory and open `CiscoCDR_Collection.pro`.

- 3 Make sure that the data folder that stores CCM 5.x data is not the same folder that is being used by the IPT SPI or for other versions of CCM. To define a unique data folder for CCM 5.x, modify the command parameter in line 27:

```
{DPIPE_HOME}/bin/CCM5_datapipe -username=abc -password=abc  
-ccmHost=xx.xxx.xx.xxx -servicePort=8080 -ftpHost=xyz -ftpUser=xyz  
-ftpPassword=xyz -ftpDir=/xyz/ -timeZone=PST)
```

- 4 When processing reaches line 20, data has been collected from CCM 5.x, but the NNM parser has not run. Add the following lines after line 20:

```
begin: wait  
{DPIPE_HOME}/bin/perl {DPIPE_HOME}/bin/CiscoCDR_PP.pl -l <local directory  
where CCM 5.x data files are located> -v 5.x  
end:  
  
begin: wait  
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_CDRs -mw "-X"  
end:  
  
begin: wait  
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_Hist_phoneNum -mw "-X"  
end:  
  
begin: wait  
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_CMRS -mw "-X"  
end:
```

Assigning Dial Plans to Gateways

Assigning dial plans to gateways is mandatory. The IP Telephony Call Detail Report Pack will not operate correctly until you have assigned a dial plan to every gateway. *Do this as soon as possible. As soon as possible means one day after the datapipe's first data collection.* Follow these steps:

- 1 Start the Management Console.
- 2 Click **Objects**. The Object/Property Management window opens.
- 3 Select **View** → **Change View** → **Cluster**.
- 4 Select a cluster.
- 5 Open a CallManager folder and select a gateway. You will see the Configure Gateway Dial Plan form under **Object Specific Tasks**.
- 6 Double-click **Configure Gateway Dial Plan**. The form opens.
- 7 Modify the following fields:
 - International call prefix
 - Local area codes
 - Toll free codes
- 8 Click **Apply** to save changes, **OK** to save changes and close the form, or **Cancel** to close the form without saving changes.
- 9 Repeat this procedure for every gateway.

Cisco IP Telephony



Configure Gateway Dial Plan

This form allows you to configure the dial plan for a given gateway associated with a CallManager. Enter/modify the values. Click the OK button to save the values and close the window. Click the Apply button to update the values in the database and leave the window open for further modifications. Click the Cancel button to cancel.

Gateway Selection

CallManager	Gateway
s1ccm1	s1c1c4k3
s1ccm1	s1c1c4k4
s1ccm1	s1c1cat4k1

Gateway Phone Number

International Call Prefix

Local Area Codes

Toll Free Codes

OK

Apply

Cancel

Integrating with the Cisco IPT SPI

To integrate the reporting solution with the Cisco IPT SPI, you must install and configure files on the NNM server. Complete the following steps after installing the Cisco CDR Datapipe:

- 1 Run the following script to set the appropriate environment variables on the NNM server:

Windows: **C:\Program Files\HP Software\bin\ov.envvars.bat**

UNIX: **. /opt/OV/bin/ov.envvars.sh**

- 2 Copy the following files from the `/CiscoCDR_Datapipe/CiscoCDR_Datapipe.ap/` directory on the PI server to the specified location on the NNM server:

Copy this file on PI	To this location on NNM
<code>commons-net-1.4.1.jar</code>	<code>\$OV_MAIN_PATH/java</code>
<code>iptdatapipe.jar</code>	<code>\$OV_MAIN_PATH/java</code>
<code>ovpi_ipt_datapipe_config.txt</code>	<code>\$OV_MAIN_PATH/java</code>
<code>ovpi_ipt_datapipe.lrf</code>	<code>\$OV_LRF</code>
<code>ovpi_ipt_datapipe.ovpl</code>	<code>\$OV_MAIN_PATH/bin</code>

- 3 On a UNIX NNM server, change ownership of the files copied in step 1 to **bin:bin**.
- 4 On a UNIX NNM server, change mode of the files copied in step 1 to **744**.
- 5 On the NNM server, edit `$OV_MAIN_PATH/java/ovpi_ipt_datapipe_config.txt`. Set the following values (replace the environment variables `$OV_DB`, `$OV_MAIN_PATH`, and `{DPIPE_HOME}` with their actual values):

Variable	Value
<code>ipt_spi_data_folder</code>	<code><\$OV_DB>/nnmet</code>
<code>ftp_server</code>	<code>OVPI_SERVER_NAME</code>
<code>ftp_user</code>	<code>OVPI_FTP_USER_NAME</code>
<code>ftp_password</code>	<code>OVPI_FTP_PASSWORD</code>
<code>remote_directory_path</code>	<code><{DPIPE_HOME}>/data/ImportData/CiscoCDR_Datapipe</code>
<code>sleep_interval_in_minutes</code>	<code>60</code>

➤ If editing the file on a Windows system, backward slashes must be escaped with a standard backward slash “\” character.

- 6 On the NNM server, edit `$OV_LRF/ovpi_ipt_datapipe.lrf`. In the first line set the full path to (replace the environment variable `$OV_MAIN_PATH` with its actual value):

`<$OV_MAIN_PATH>/bin/ovpi_ipt_datapipe.ovpl`

➤ If editing the file on a Windows system, backward slashes (\) and colons (:) must be escaped with a standard backward slash “\” character.

- 7 On the NNM server, run the following commands to register, start, and check the status of the datapipe process (replace the environment variable \$OV_LRF with its actual value):

Windows:

```
ovaddobj "%OV_LRF%/ovpi_ipt_datapipe.lrf"  
ovstart -d OVPI_IPT_Datapipe  
ovstatus OVPI_IPT_Datapipe
```

UNIX:

```
ovaddobj <$OV_LRF>/ovpi_ipt_datapipe.lrf  
ovstart -d OVPI_IPT_Datapipe  
ovstatus OVPI_IPT_Datapipe
```

Modifying Default Thresholds

The thresholds sub-package contains a thresholds policy. The thresholds policy imposes six defaults. Three pertain to CallManagers and three pertain to gateways. When performance reaches a default, PI sends a trap to the network management system. The following table provides details about the default values and severity levels.

Threshold	Value	Breach Condition	Severity
Call Success	50%	Call success ratio is below the threshold.	Warning
Network Fail	50%	The ratio of failed calls caused by network problems exceeds the threshold.	Warning
QoS	3.0	Average QoS value for all calls exceeds the threshold.	Warning

To modify the thresholds, use one or both of these forms:

- Modify CallManager Call Detail Thresholds
- Modify Gateway Call Detail Thresholds

Modifying Default Thresholds for CallManagers

Follow these steps to modify default thresholds for CallManagers:

- 1 Start the Management Console.
- 2 Click **Objects**. The Object/Property Management window opens.
- 3 Select **View** → **Change View** → **Cluster**.
- 4 Select a cluster.
- 5 Open a CallManager folder and select a CallManager. You can see the Modify CallManager Call Detail Thresholds form under **Object Specific Tasks**.
- 6 Double-click **Modify CallManager Call Detail Thresholds**. The form opens.

Cisco IP Telephony



invent

Configure CallManager Thresholds

This form allows to configure the threshold values for the CallManager. Enter/modify the threshold values. Click the OK button to save the values and close the window. Click the Apply button to update the values in the database and leave the window open for further modifications. Click the Cancel button to cancel.

PRI Channel Max. Util	<input type="text" value="95.00"/>
PRI Channel Min. Util	<input type="text" value="5.00"/>
CAS Channel Max. Util	<input type="text" value="95.00"/>
CAS Channel Min. Util	<input type="text" value="5.00"/>
FXO Port Max. Util	<input type="text" value="95.00"/>
FXO Port Min. Util	<input type="text" value="5.00"/>
FXS Port Max. Util	<input type="text" value="95.00"/>
FXS Port Min. Util	<input type="text" value="5.00"/>

OK

Apply

Cancel

- 7 Modify one or more defaults.
- 8 Click **Apply** to save changes, **OK** to save changes and close the form, or **Cancel** to close the form without saving changes.

Modifying Default Gateway Thresholds


Follow these steps to modify default thresholds for gateways:

- 1 Start the Management Console.
- 2 Click **Objects**. The Object/Property Management window opens.
- 3 Select **View** → **Change View** → **Location**.
- 4 Select a location.
- 5 Open the Gateway folder and select a gateway. You can see the Modify Gateway Call Detail Thresholds form under **Tasks Specific to the Selected Objects**.

- 6 Double-click **Modify Gateway Call Detail Thresholds**. The form opens.

/admin/Cisco_IPT_Admin_Forms/Gateway_CallDetailsThresh_Config.frep

Cisco IP Telephony



Modify Gateway CallDetails Thresholds

This form allows you to modify CallDetails thresholds for the Gateway. Enter/modify the threshold values. Click the OK button to save the values and close the window. Click the Apply button to update the values in the database and leave the window open for further modifications. Click the Cancel button to cancel.

Gateway Selection

Hold the Ctrl or Shift key to select multiple rows

Gateway	CallSuccessThreshold	NetworkFailThreshold	QoSThreshold
gateway1	50.0	50.0	3.0

CallSuccessThreshold

50.0

If CallSuccessRate is less than this threshold, send a trap to NNM.

NetworkFailThreshold

50.0

If NetworkFailRate is greater than this threshold, send a trap to NNM.

AverageQoSThreshold

3.0

If AverageQoS is greater than this threshold, send a trap to NNM.

OK

Apply

Cancel

- 7 Modify one or more defaults.
- 8 Click **Apply** to save changes, **OK** to save changes and close the form, or **Cancel** to close the form without saving changes.

Post-Install Configuration

47

Modifying IP Phone User and Location


Follow these steps to configure IP phone username and location:

- 1 Start the Management Console.
- 2 Click **Objects**. The Object/Property Management window opens.
- 3 Select **View** → **Change View** → **Cluster**.
- 4 Select a location, then open the CallManager folder.
- 5 Open the IP phone folder and select an IP phone. You can see the Configure IP Phone User and Location form under **Tasks Specific to the Selected Objects**.
- 6 Double-click **Configure IP Phone User and Location**. The form opens.
- 7 Add the user and location for one or multiple IP phones.
- 8 Click **Apply** to save changes, **OK** to save changes and close the form, or **Cancel** to close the form without saving changes.

/admin/Cisco_IPT_Admin_Forms/IP_Phone_Config.frep

Cisco IP Telephony

Configure IP Phone UserName and Location



This form allows you to configure the user name and location for a given IP Phone associated with a CallManager. Enter/modify the values. Click the OK button to save the values and close the window. Click the Apply button to update the values in the database and leave the window open for further modifications. Click the Cancel button to cancel.

IP Phone Selection

CallManager	phoneNumber	DeviceName	UserName	Location
Cluster1_CCM1	7793538	Patphone		Location Unassigned
Cluster1_CCM1	7793502	Softphone		Location Unassigned
Cluster1_CCM1	7793520	k00075674		Location Unassigned
Cluster1_CCM1	7793522	k00136033		Location Unassigned
Cluster1_CCM1	7793535	m00443406		Location Unassigned
Cluster1_CCM1	7793599	m00568807		Location Unassigned
Cluster1_CCM1	7793501	SEP000A412B7954		Location Unassigned
Cluster1_CCM1	7793502	SEP0009E881263B		Location Unassigned
Cluster1_CCM1	7793503	SEP000A41426997		Location Unassigned
Cluster1_CCM1	7793535	SEP0009E8812431		Location Unassigned

User Name

Location

Location Unassigned

OK

Apply

Cancel

Modify IP QoS Parameters

Follow these steps to modify default QoS definition ranges:

- 1 Start the Management Console.
- 2 Click **Objects**. The Object/Property Management window opens.
- 3 You can see the Modify QoS Parameters form under **General Tasks**.
- 4 Double-click **Modify QoS Parameters**. The form opens.
- 5 Modify defaults for Good, Acceptable, Fair.
- 6 Click **Apply** to save changes, **OK** to save changes and close the form, or **Cancel** to close the form without saving changes.

/admin/Cisco_IPT_Admin_Forms/Define_QoS_Parameters.frep

Cisco IP Telephony



Modify QoS Parameters

This form allows you to configure the QoS parameters which define the ranges of selected statistic values. Enter/modify the parameter values. QoS weight is the weight used to compute QoS for the selected metric (i.e., LostPackets, Jitter, and Latency). Click the OK button to save the values and close the window. Click the Apply button to update the values in the database and leave the window open for further modifications. Click the Cancel button to cancel.

Quality of Service	LostPackets (%) <=	Jitter (ms) <=	Latency (ms) <=
Good	<input type="text" value="15.00"/>	<input type="text" value="20.00"/>	<input type="text" value="150.00"/>
Acceptable	<input type="text" value="30.00"/>	<input type="text" value="100.00"/>	<input type="text" value="250.00"/>
Fair	<input type="text" value="45.00"/>	<input type="text" value="150.00"/>	<input type="text" value="500.00"/>
Poor	Otherwise	Otherwise	Otherwise
QoS Weight	<input type="text" value="1.00"/>	<input type="text" value="1.00"/>	<input type="text" value="1.00"/>

5 Setting up a Distributed System

These are the steps to follow when setting up a distributed system:

- Decide whether or not you want local reporting.
- Install the right set of packages on each server. (A central server that is not polling will not need datapipes. The satellite servers will need datapipes.)
- Verify that the system clocks in your environment are synchronized.
- Register your satellite servers.
- If you are not copying rate data to the central server, enable LIR on the central server.
- If you enable LIR, add LIR mapping with the time type set to rate.
- Verify that you have all the copy policies you need.
- Configure the central server (manual edits to `trendtimer.sched` and `.pro` files).
- Configure each satellite server (manual edits to `trendtimer.sched` and `.pro` files).

If you want local reporting, you need to deploy reports when you install the report pack on each satellite server, and you also need to allow summarizations to run on each satellite server. If you do not want local reporting, you do not need to deploy reports when you install a report pack on a satellite server, and you can disable the scripts that run summarizations on each satellite server.

Before Location Independent Reporting (LIR) was available, the recommendation for setting up a distributed system was to deploy reports on satellite servers, keep rate data on satellite servers, copy hourly data to the central server, and disable summarizations above the hourly level on satellite servers. This approach had two benefits. It kept a lot of rate data off the network, and it decreased the processing load on the central server. The drawback with this approach is that the central server could not display a Near Real Time (NRT) report. The only NRT report was a local NRT report, on a satellite server.

LIR fixes this problem. If you enable LIR, you can open an NRT report on the central server and drill down on table selections. The selections you make cause the central server to query a satellite server for locally aggregated data. Of course, if you would rather copy rate data to the central server, you can. If you do, then enabling LIR is not necessary.

IP Telephony Call Detail includes a copy policy import file. When you install the report pack, PI uses this file to generate copy policies. Creating these policies yourself, using the Management Console, is no longer necessary. Your only task is to verify that you have the copy policies you need.

Because you are likely to have multiple satellite servers, we designed the hourly process files to be satellite-server friendly. This means that most of the time, most of the defaults are correct. But some defaults will be incorrect, or less than optimal, and to improve performance, you should change them. The manual edits, as well as the other steps listed above, are spelled out in detail in this chapter.

Proper Package Installation

Verify that you installed these packages on the central server:

- IP Telephony Call Detail
- Location Sub-Package (optional)
- Thresholds Sub-Package (optional)
- Common Property Tables

Verify that you installed these packages on the satellite server:

- IP Telephony Call Detail
- Location Sub-Package (optional)
- Common Property Tables
- Cisco CDR Datapipe

Your next step is to configure the central server to pull data from each satellite server. This is done by setting up connections from the central server to each satellite server database and by configuring trendcopy pull command. In addition, you must disable daily aggregations on each satellite server.

Configuring the Central Server

To configure the central server, perform the following tasks:

Task 1: Register the satellite server by setting the database role

- 1 Start the Management Console (log on with Administrator privileges).
- 2 Click the **Systems** icon in the navigation pane.
- 3 Navigate to the PI Databases folder and select the database system.
- 4 Click **Database Properties**.
- 5 From the Database Role list, select the Satellite Server role.
- 6 Enter any information necessary to configure the Satellite Server role.



To add a new database reference, use the Add Database Reference Wizard in the System and Network Administration application.

Task 2: If you are not copying rate data to the central server, enable LIR

- 1 Start the Management Console (log on with Administrator privileges).
- 2 Click the **Systems** icon in the navigation pane.
- 3 Navigate to the PI Databases folder and select the central server.
- 4 Click **LIR Configuration**.
- 5 Select the **LIR enabled** check box.

Task 3: If you enable LIR, add LIR mappings

Configure LIR mappings for the following categories (for the CallDetails and sub-package you installed): Cisco_IP_Telephony_CallDetails and Cisco_IP_Telephony_CallDetails_Location.

- 1 Start the Management Console (log on with Administrator privileges).
- 2 Click the **Systems** icon in the navigation pane.
- 3 Navigate to the PI Databases folder and select the central server.
- 4 Click **LIR Configuration**.
- 5 Click **Add Mapping**.
- 6 From the Select Satellite Server list, select a satellite server to which to add a mapping.
- 7 Select the **Category** data table option.
- 8 Select **Cisco_IP_Telephony_CallDetails** from the drop down list.
- 9 Select the **rate** data type.
- 10 Click **Add to List**.
- 11 To add an additional LIR mapping for the location sub-package, click **Add to list** and repeat [step 6](#) through [step 10](#).
- 12 Click **OK**.
- 13 Click **Apply**.

A copy policy is automatically generated for the hourly data and for each LIR mapping that you add. The data type selected when adding an LIR mapping (in [step 9](#) above) determines the type of data copied (defined in the generated copy policy). The type of data copied (defined in the generated copy policy) is one summarization level greater than the data type selected in the LIR mapping. For example, if you select an hourly data type, a daily data copy policy is generated.

Task 4: Verify that copy policies were generated automatically

Verify that a copy policy has been generated for the following tables and that the copy type is set correctly (to Property and Data):

- 1 Start the Management Console (log on with Administrator privileges).
- 2 Click the **Copy Policy** icon in the navigation pane to start the Copy Policy Manager.
- 3 Verify that the copy type is set to **Property and Data** for each of the following tables in the main package:

SHIPT_QoS_phoneNum

SHIPT_QoS_gateway

SHIPT_QoS_CManager

SHIPT_QoS_Cluster

SHIPT_Hist_phoneNum

SHIPT_Hist_gateway

SHIPT_Hist_CManager

SHIPT_Hist_Cluster

SHIPT_Hist_PerfMon

SHIPT_Hist_SysRes_CManager
SHIPT_Hist_ProcessRes_CManager
SHIPT_Hist_GWEndPoint
SHIPT_Hist_GWEndPointChannel

- 4 Verify that the copy type is set to **Property and Data** for each of the following tables in the Location sub-packag:

SHIPT_QoS_gateway_loc
SHIPT_QoS_loc
SHIPT_Hist_gateway_loc
SHIPT_Hist_loc

Copy Policy Not Generated

If a copy policy was not generated for a table, follow these steps:

- 1 Click the **New Copy Policy** icon or select **File** → **New Copy Policy** from the Copy Policy Manager. The Copy Policy Wizard opens.
- 2 Click **Next**. The Satellite Server and Copy Policy Selection Page opens.
- 3 Select a satellite server from the pull down list. This is the satellite server from which data is copied to the central server.
- 4 Select **Single Table** and select the table from the pull down list.
- 5 Click **Next**. The Copy Type Selection Page opens.
- 6 Select **Property and Data**.
- 7 Click **Next**. The Summary page opens.
- 8 Verify the information in the summary window. If the information is not correct, you can modify it by clicking **Back**.
- 9 Click **Finish**.
- 10 Repeat [step 4](#) - [step 9](#) for all missing tables.

Copy Type Not Set to Property and Data

If only the copy type is not set to **Property and Data**, do the following:

- 1 Double-click the copy policy.
- 2 Select the **Property and Data** copy type.
- 3 Click **OK**.

Configuring a Satellite Server

Follow these steps to disable daily aggregations on each satellite server:

- 1 Modify the `{DPIPE_HOME}/scripts/IPT_CallDetails_trendcopy.pro` file (where `{DPIPE_HOME}` is the directory in which PI is installed):
Uncomment all of block0, including the begin and end lines.

- 2 Modify the `{DPIPE_HOME}/scripts/IPT_CallDetails_Location_Daily.pro` file:
If you installed the Location sub-package, comment out the begin and end lines of blocks 2 - 5.
- 3 Modify the `{DPIPE_HOME}/scripts/IPT_CallDetails_Loc_trendcopy.pro` file):
If you installed the Location sub-package, uncomment all of block0, including the begin and end lines.
- 4 Verify that the system clock is synchronized with the system clock on the central server.

6 Call History Summary

The History Summary reports look at call history from the following perspectives:

- Cluster
- CallManager
- Gateway by CallManager and by Location
- Location
- Phone number
- Gateway Endpoint by CallManager and by Location
- Gateway Endpoint Channel by CallManager and by Location
- Voice Service by CallManager and by Location

The focus of this report, regardless of the perspective you are using, is yesterday's Call Success Rate (CSR). CSR is a percentage calculated by dividing successful calls by total calls and multiplying the result by 100. All selection tables sort by CSR, highest to lowest. All History Summary reports provide the following graphs:

- Total Call Volume stacked by Success Call and Failed Call
- Total Call Minutes
- Call Type Distribution stacked by:
 - Internal
 - Incoming PSTN
 - Outgoing Local; Long Distance; International
 - Tandem
- Maximum and Average Call Duration per success call
- Abnormal Disconnect Cause stacked by:
 - Called Party Cause
 - Wrong Number
 - No Response
 - Network Fail
 - Others
- Call Duration Distribution stacked by:
 - Less than 1 minute
 - 1 to 5 minutes
 - 5 to 30 minutes
 - 30 minutes to 2 hours
 - 2 hours to 12 hours
 - More than 12 hours

An hourly graph shows 24 hours for yesterday, a daily graph looks at data for the previous 30 days, and a monthly graph looks at data for the previous 12 months.

Cisco IP Telephony Call Details



Cluster History Summary


The Cluster History Summary Report presents call history metrics aggregated for a given Call Manager Cluster. This report can be used to view call history statistics and identify device performance issues.

Cluster Selection


Wed Sep 24 12:00 AM

ClusterName	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
Cluster1	24	52.2	134.4	13


Hourly Daily Monthly

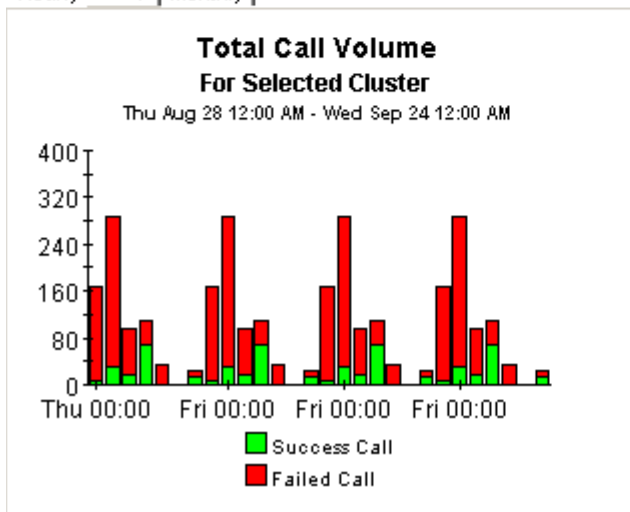


Hourly Daily Monthly

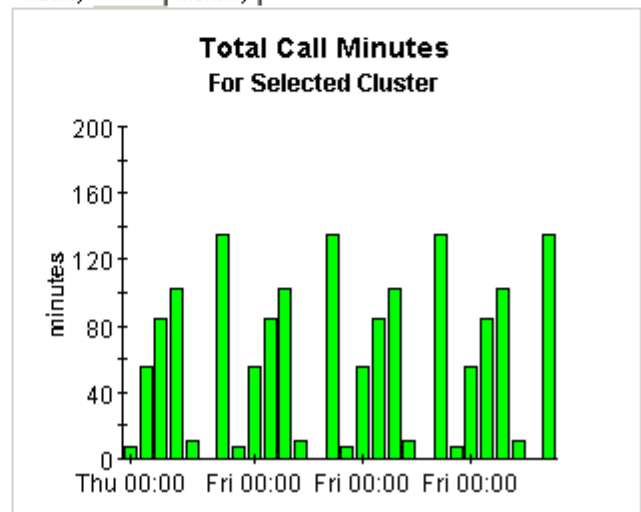


Hourly | Daily | Monthly

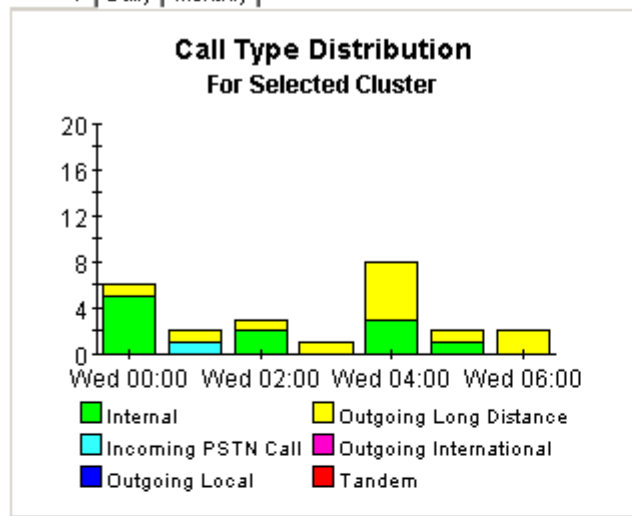


Hourly | Daily | Monthly

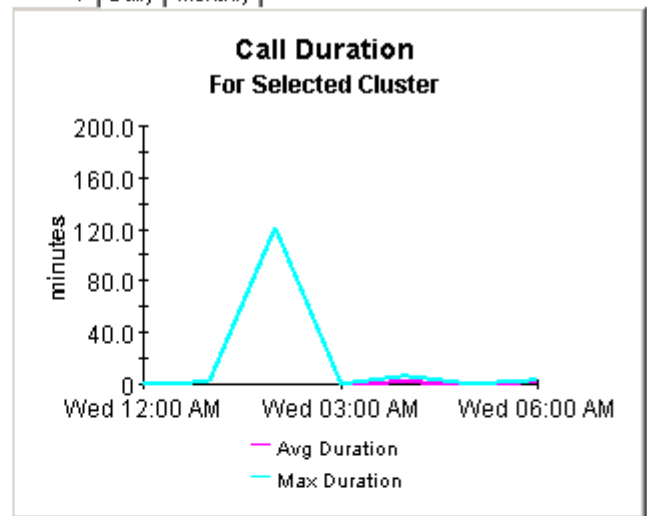

Hourly | Daily | Monthly

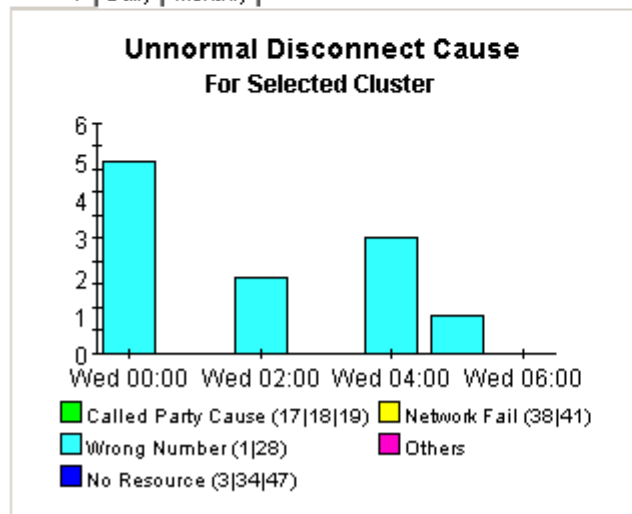

Hourly | Daily | Monthly

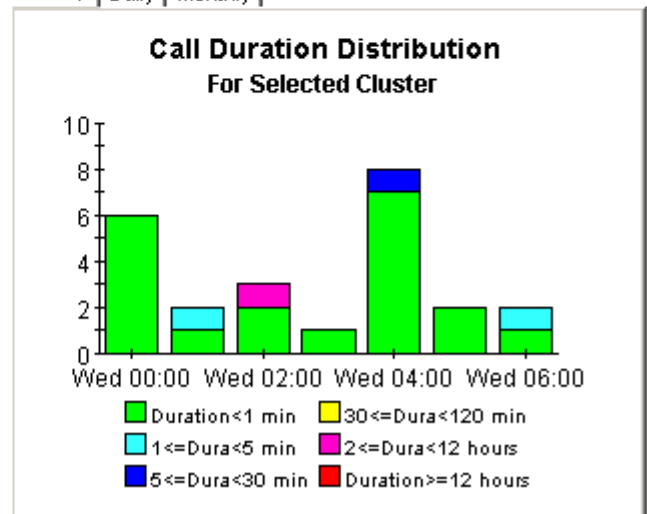

Cisco IP Telephony Call Details

CallManager History Summary




The CallManager History Summary Report presents call history metrics aggregated for a given Call Manager. This report can be used to view call history statistics and identify device performance issues.

CallManager Selection


Wed Sep 24 12:00 AM

Cluster_CallManager	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
Cluster1_CCM1	24	52.2	134.4	13


Hourly | Daily | Monthly |

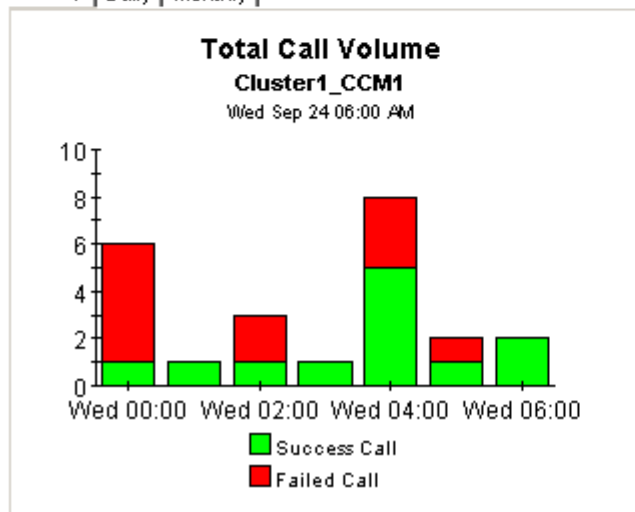


Hourly | Daily | Monthly |

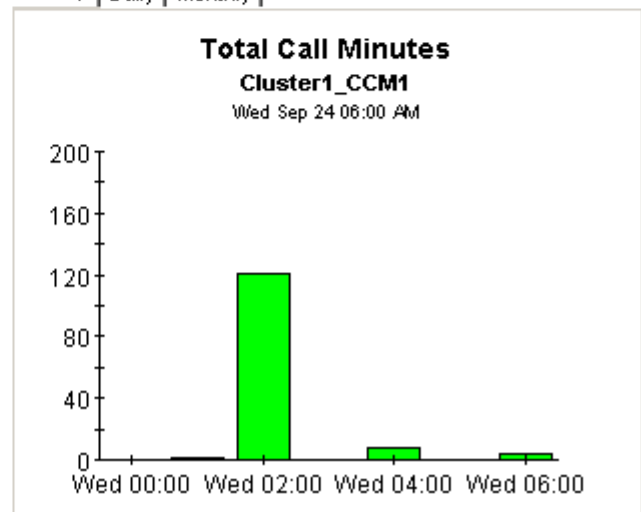


Hourly | Daily | Monthly

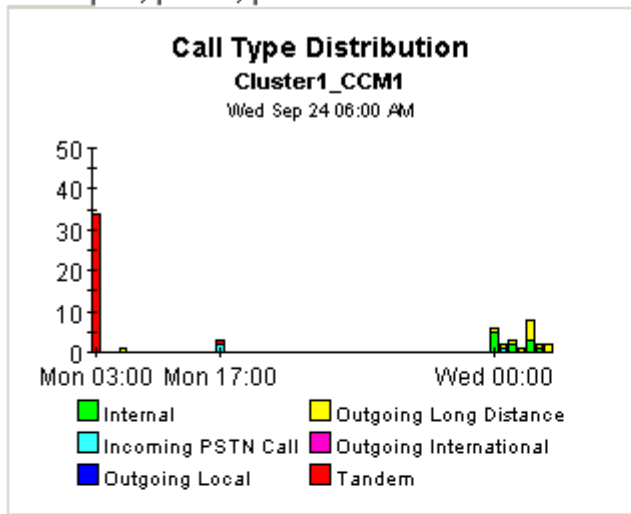


Hourly | Daily | Monthly

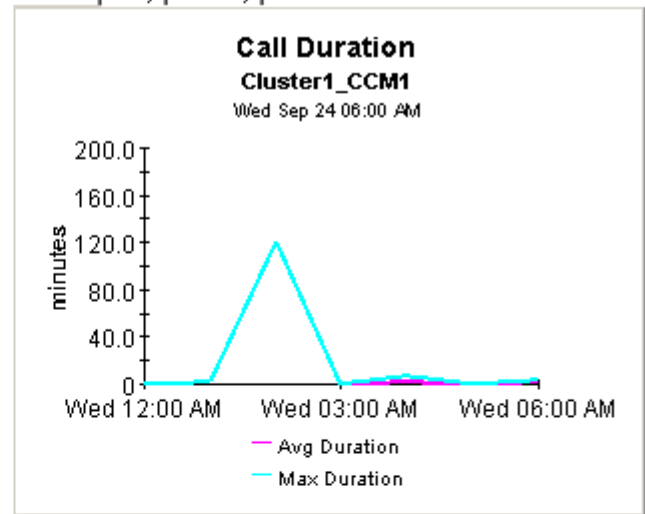

Hourly | Daily | Monthly

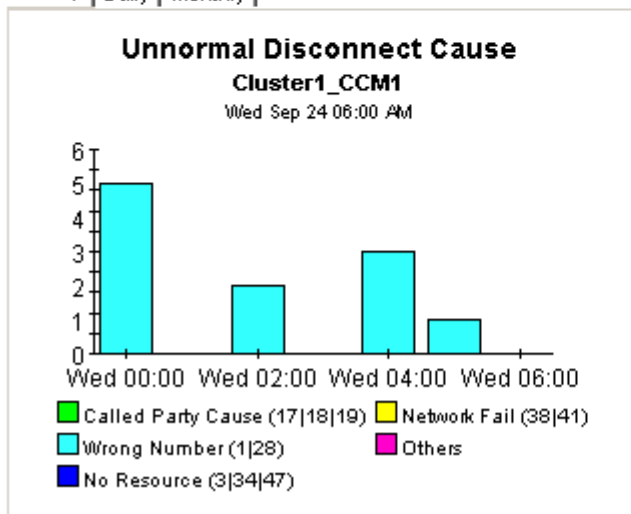

Hourly | Daily | Monthly

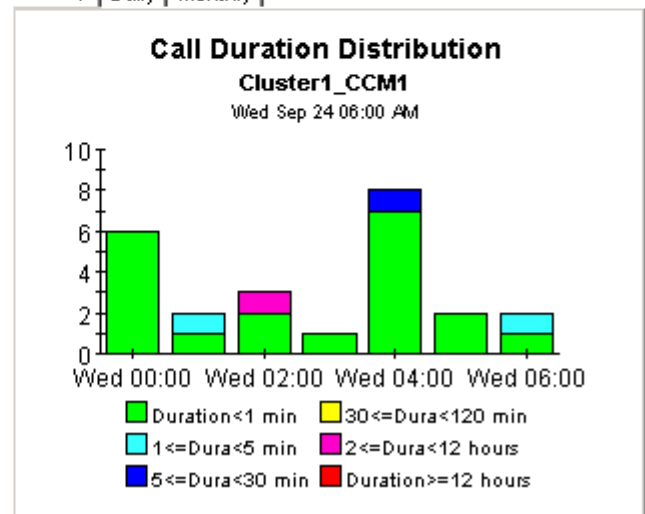

Cisco IP Telephony Call Details



Gateway History Summary by CallManager

The Gateway History Summary Report presents call history metrics aggregated for a given gateway. This report can be used to view call history statistics and identify device performance issues.

CallManager Selection

Wed Sep 24 12:00 AM


Call Manager	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
Cluster1_CCM1	24	52.2	134.4	13

Gateway Selection


Wed Sep 24 12:00 AM

Gateway	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
gateway1	13	100.0	134.4	13


Hourly Daily Monthly

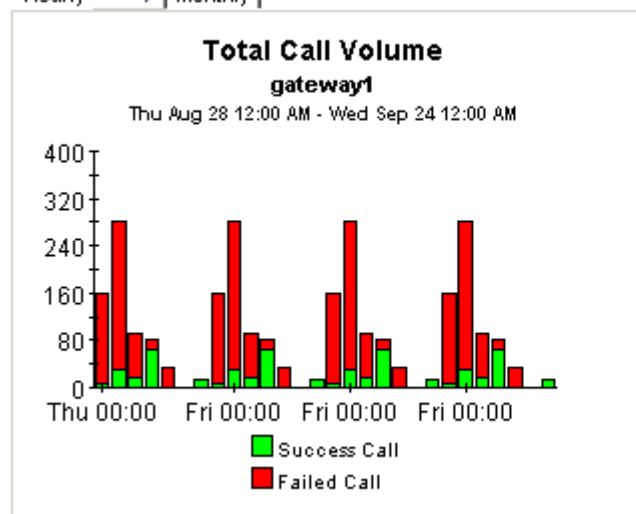


Hourly Daily Monthly

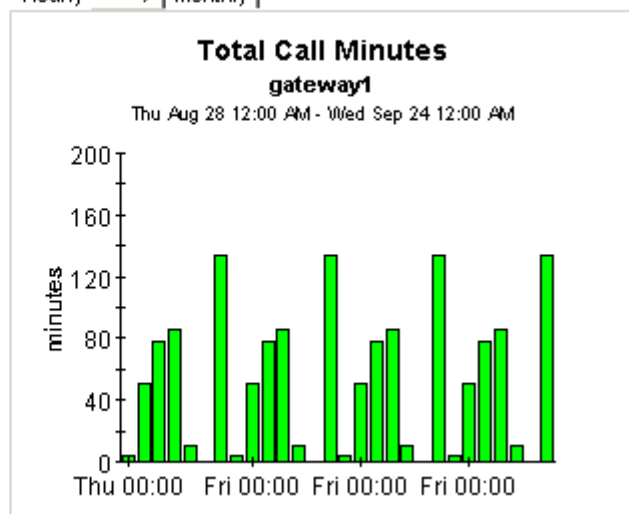


Hourly Daily Monthly

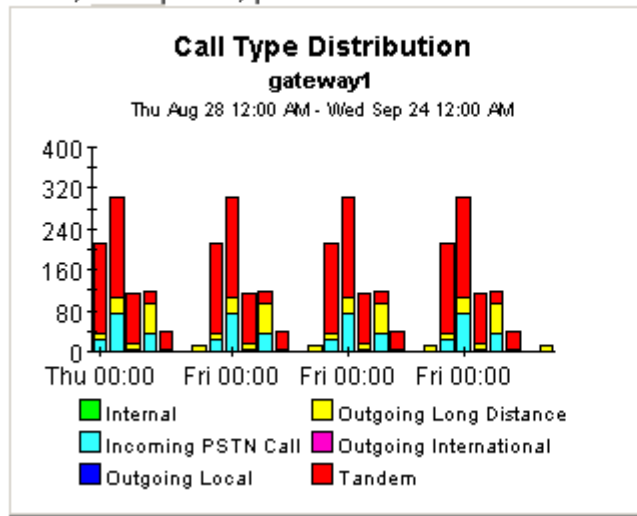


Hourly Daily Monthly

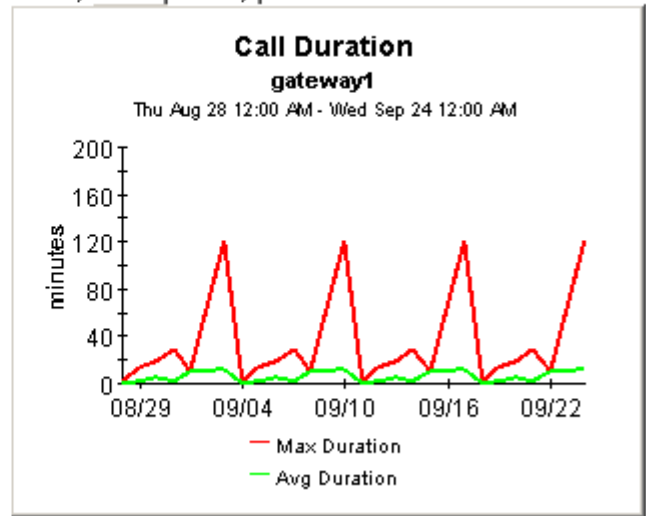

Hourly Daily Monthly

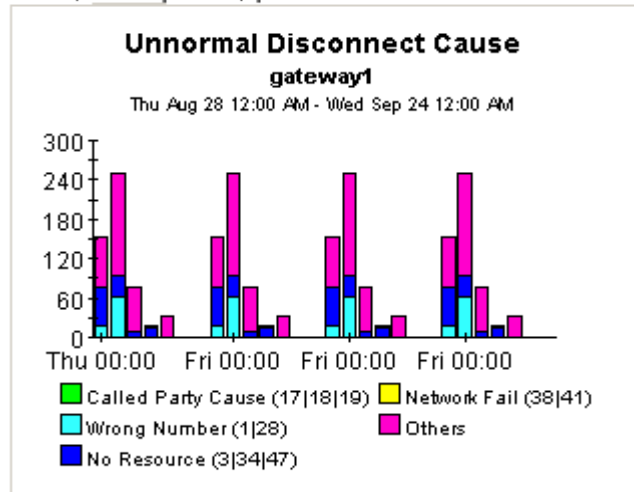

Hourly Daily Monthly

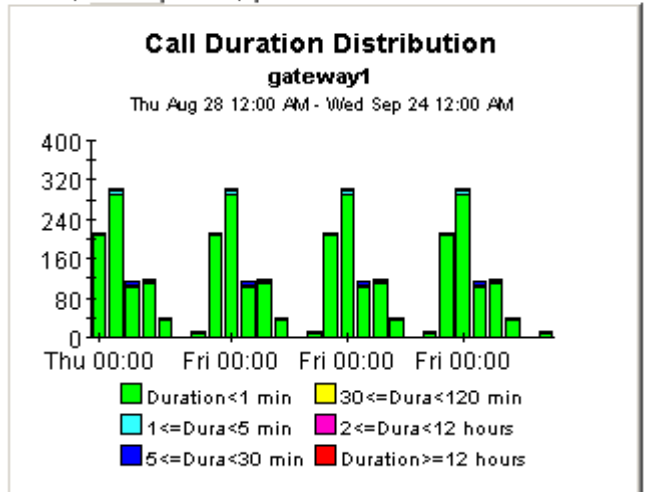

Cisco IP Telephony Call Details



Gateway History Summary by Location

The Gateway History Summary by Location Report presents call history metrics aggregated for a given gateway. This report can be used to view call history statistics and identify device performance issues.

Location Selection

Wed Sep 24 12:00 AM


Location	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
Location Unassigned	23	52.2	134.4	12

Gateway Selection


Wed Sep 24 12:00 AM

Gateway	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
gateway1	13	100.0	134.4	13


Hourly | Daily | Monthly

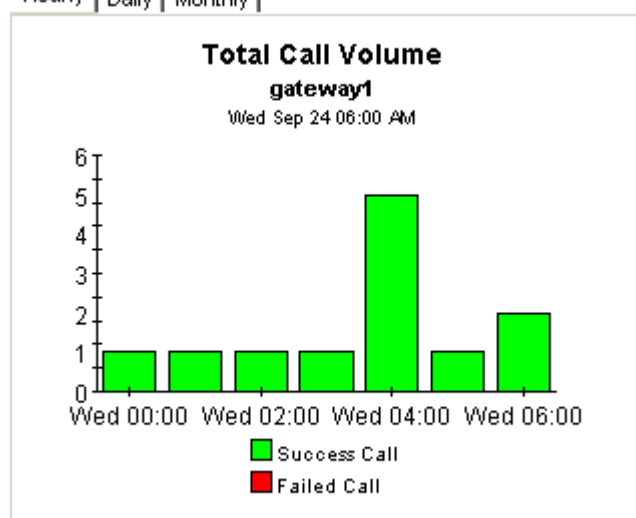


Hourly | Daily | Monthly

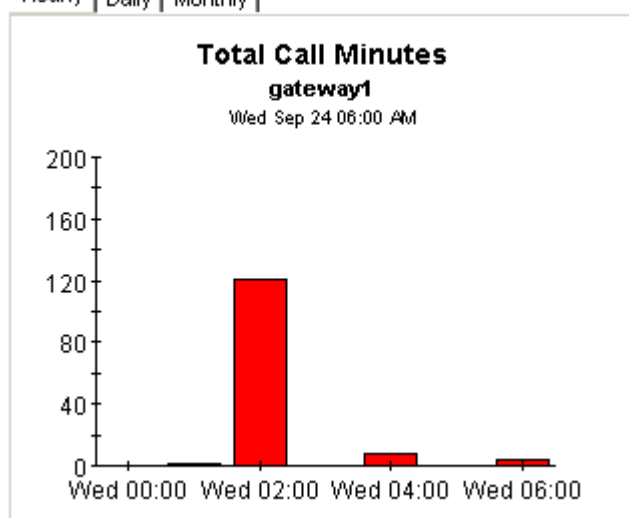


Hourly | Daily | Monthly

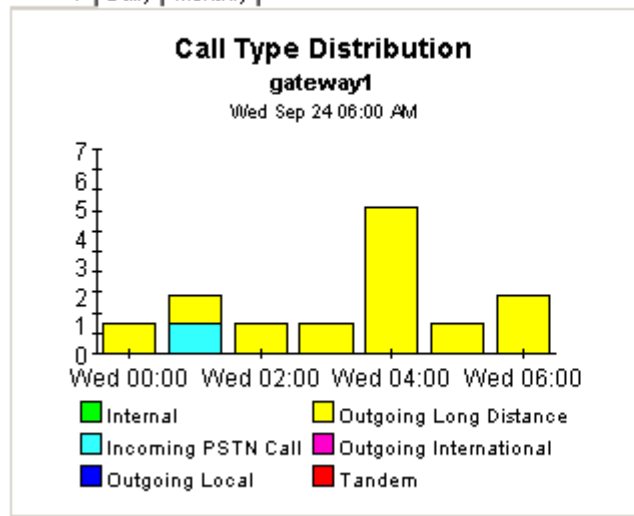


Hourly | Daily | Monthly

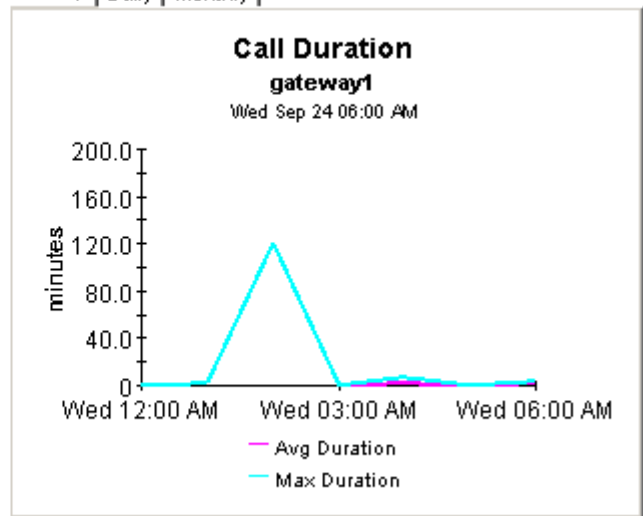

Hourly | Daily | Monthly

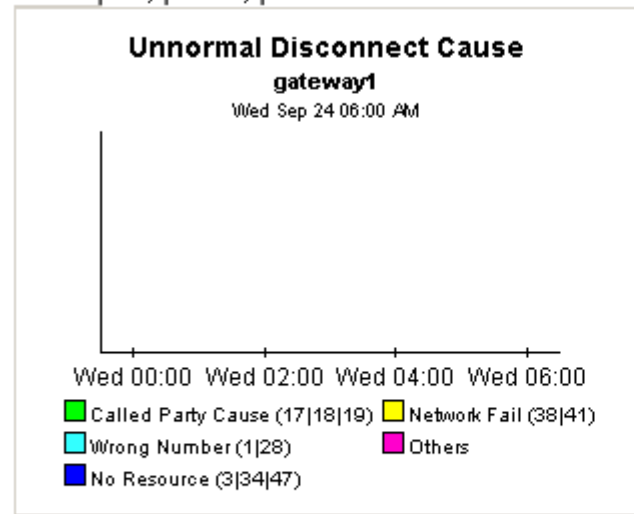

Hourly | Daily | Monthly

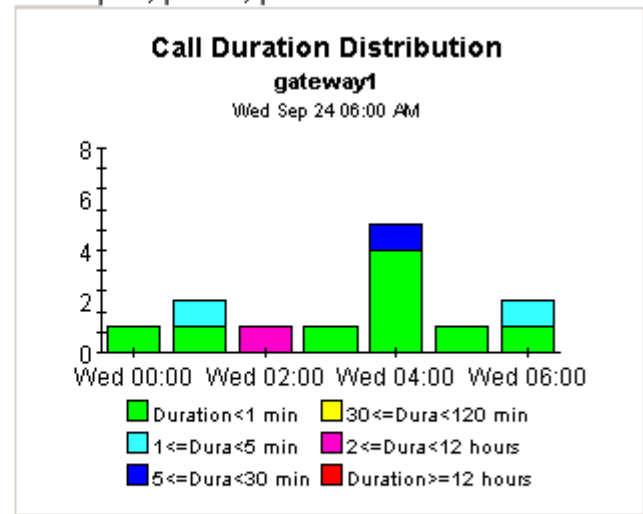

Cisco IP Telephony Call Details



Phone Number History Summary

The Phone Number History Summary Report presents call history metrics aggregated for a given Phone Number. This report can be used to view call history statistics and identify device performance issues.

CallManager Selection

Wed Sep 24 12:00 AM


Call Manager	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
Cluster1_CCM1	24	52.2	134.4	13

Phone Number Selection


Wed Sep 24 12:00 AM

Phone Number	Total Calls	CSR (%)	Total Call Minutes	Total Normal Disconnections
7793538	6	66.7	125.8	4
7793520	8	62.5	8.0	5
7793535	2	50.0	0.2	1
7793599	6	16.7	0.3	1
7793535	1	100.0	0.1	1


Hourly | Daily | Monthly

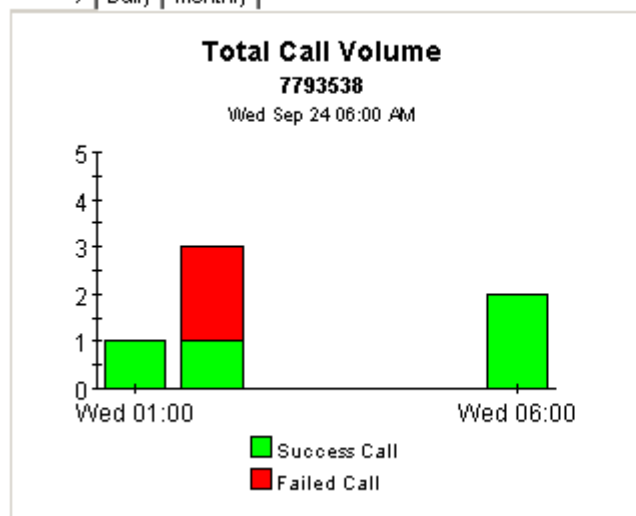


Hourly | Daily | Monthly

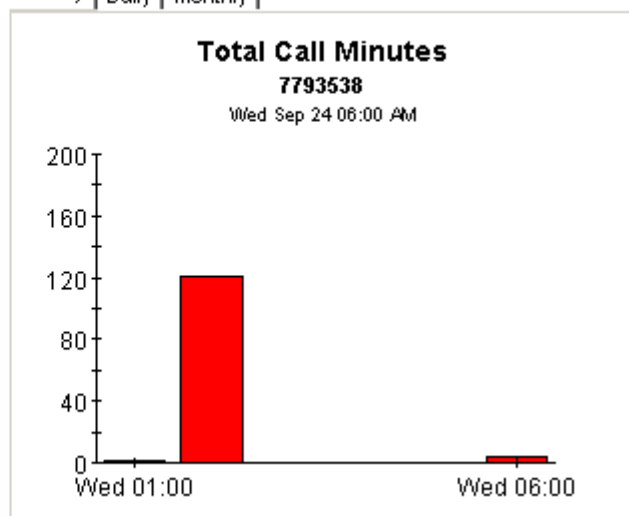


Hourly | Daily | Monthly

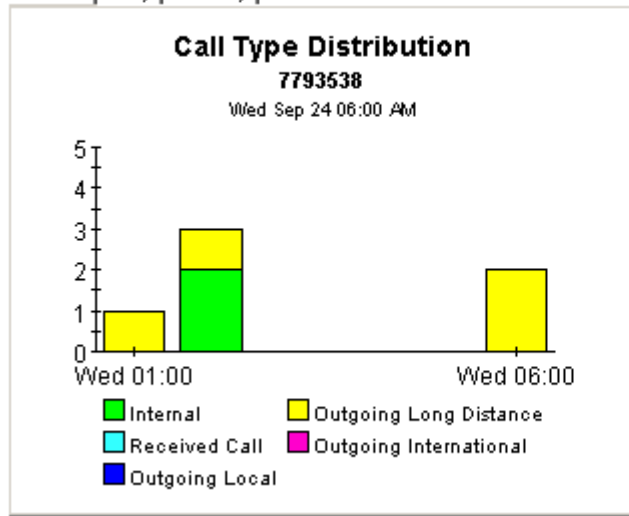


Hourly | Daily | Monthly

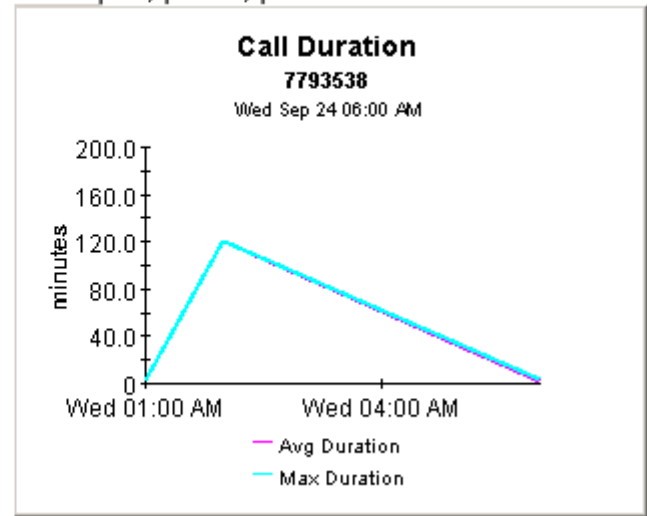

Hourly | Daily | Monthly

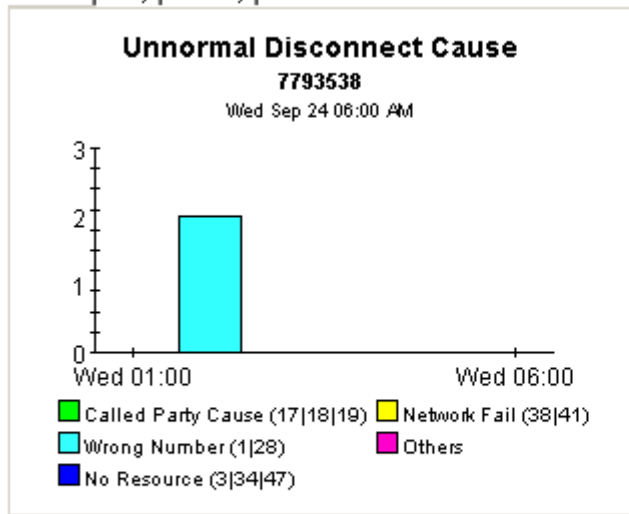

Hourly | Daily | Monthly

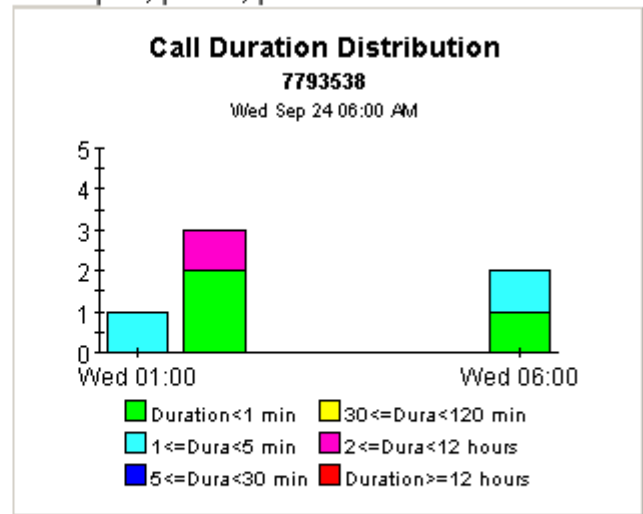

Cisco IP Telephony Call Details



Gateway EndPoint History Summary by CallManager



The Gateway EndPoint History Summary Report presents endpoint history metrics aggregated for a given Call Manager. This report can be used to view endpoint availability and usage statistics and identify endpoint performance issues.

Choose CallManager

Choose Gateway

End Points

	EndPointName	Protocol
	FXSPort_2_1_1	MGCP
	EANDMPort_2_0_0	MGCP
	EANDMPort_2_0_1	MGCP
	EANDMPort_2_0_0	MGCP
	T1CAS_1_0	MGCP
	FXSPort_2_1_0	MGCP
	EANDMPort_2_0_1	MGCP

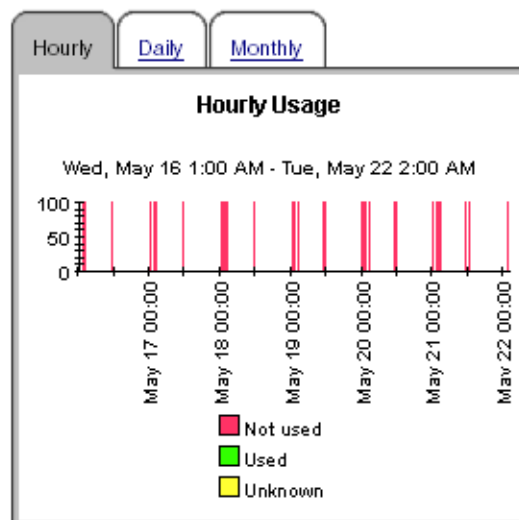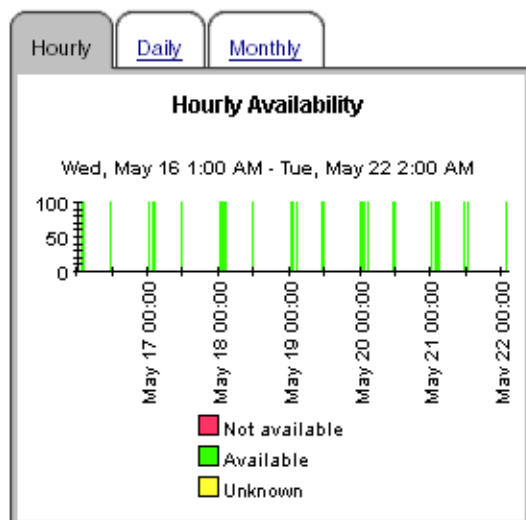

[Back to Top](#)



7 Top Ten and Top 100 Reports

There are 14 top ten reports (related to call history, call QoS, gateway endpoint, and gateway endpoint channel) and one top 100 report (phone number MOS).

Call History	Call QoS
Cluster History Top Ten	Cluster QoS Top Ten
CallManager History Top Ten	CallManager QoS Top Ten
Gateway History Top Ten by CallManager	Gateway QoS Top Ten by CallManager
Phone Number History Top Ten	Phone Number QoS Top Ten
Location History Top Ten	Location QoS Top Ten
Gateway History Top Ten by Location	Gateway QoS Top Ten by Location

Gateway Endpoint	Gateway Endpoint Channel
Gateway EndPoint Top Ten by CallManager	Gateway EndPoint Channel Top Ten by CallManager

Phone Number MOS

Top Hundred Offenders by MOS

Every top ten/100 report performs a ranking function that makes it easy for you to spot potential problem areas in yesterday's extremes.

The call history reports contain these tables:

- Highest Call Volume
- Highest Call Volume Increase
- Most Call Minutes
- Highest Call Minutes Increase
- Worst Call Success Rate
- Highest CSR Decrease

The call QoS reports contain these tables:

- Highest Packet Lost
- Highest Packet Lost Increase
- Highest Jitter

- Highest Jitter Increase
- Highest Latency

The gateway endpoint report contains these tables:

- Worst Hourly Usage
- Worst Daily Usage
- Worst Monthly Usage

The gateway endpoint channel report contains these tables:

- Worst Hourly
- Worst Daily
- Worst Monthly

The top hundred offenders by MOS report contains this table:

- Top 100 offenders based on lowest MOS values

Cisco IP Telephony Call Details



Cluster History Top Ten

The Cluster History Top Ten Report provides lists of Cluster that had the highest call volume, highest call minutes, and worst call success rate during the previous day. Clusters are also listed by the highest projected increase rate for each metric.

Highest Call Volume

Wed Sep 24 12:00 AM

Cluster Name	Calls
Cluster1	24

Highest Call Volume Increase

Thu Aug 28 12:00 AM

Cluster Name	Baseline	+30/60/90 Days
Cluster1	142	30/-47/-124

Most Call Minutes

Wed Sep 24 12:00 AM

Cluster Name	Minutes
Cluster1	134

Highest Call Minutes Increase

Thu Aug 28 12:00 AM

Cluster Name	Baseline (minutes)	+30/60/90 Days
Cluster1	66	103/128/153

Worst Call Success Rate

Wed Sep 24 12:00 AM

Cluster Name	CSR, %
Cluster1	52.2

Highest CSR Decrease

Thu Aug 28 12:00 AM

Cluster Name	Baseline (%)	+30/60/90 Days
Cluster1	19.2	80/-999/-999

Cisco IP Telephony Call Details

CallManager History Top Ten



The CallManager History Top Ten Report provides lists of CallManager that had the highest call volume, highest call minutes, and worst call success rate during the previous day. CallManagers are also listed by the highest projected increase rate for each metric.

Highest Call Volume

Wed Sep 24 12:00 AM

Call Manager	Calls
Cluster1_CCM1	24

Highest Call Volume Increase

Thu Aug 28 12:00 AM

Call Manager	Baseline	+30/60/90 Days
Cluster1_CCM1	142	30/-47/-124

Most Call Minutes

Wed Sep 24 12:00 AM

Call Manager	Minutes
Cluster1_CCM1	134

Highest Call Minutes Increase

Thu Aug 28 12:00 AM

Call Manager	Baseline (minutes)	+30/60/90 Days
Cluster1_CCM1	66	103/128/153

Worst Call Success Rate

Wed Sep 24 12:00 AM

Call Manager	CSR, %
Cluster1_CCM1	52.2

Highest CSR Decrease

Thu Aug 28 12:00 AM

Call Manager	Baseline (%)	+30/60/90 Days
Cluster1_CCM1	19.2	80/-999/-999

Cisco IP Telephony Call Details

Cluster QoS Top Ten



The Cluster QoS Top Ten Report provides lists of Cluster which had the highest Packets Lost, highest Jitter, and highest Latency during the previous day. Clusters are also listed by the highest projected increase rate for each metric.

Highest Packets Lost

Cluster Name	Packets Lost (%)
Cluster1	0.0

Highest Packets Lost Increase

Cluster Name	Baseline (%)	+30/60/90/ Days
Cluster1	0.1	0.1/0.0/0.0

Highest Jitter

Cluster Name	Jitter (ms)
Cluster1	7.0

Highest Jitter Increase

Cluster Name	Baseline (ms)	+30/60/90/ Days
Cluster1	5.8	6.4/6.7/7.1

Highest Latency

Cluster Name	Latency (ms)
Cluster1	0.0

Highest Latency Increase

Cluster Name	Baseline (ms)	+30/60/90/ Days
Cluster1	0.0	0.0/0.0/0.0

Cisco IP Telephony Call Details

CallManager QoS Top Ten



The CallManager QoS Top Ten Report provides lists of CallManager that had the highest Packets Lost, highest Jitter, and highest Latency during the previous day. CallManagers are also listed by the highest projected increase rate for each metric.

Highest Packets Lost

CallManager	Packets Lost (%)
Cluster1_CCM1	0.0

Highest Packets Lost Increase

CallManager	Baseline (%)	+30/60/90/ Days
Cluster1_CCM1	0.1	0.1/0.0/0.0

Highest Jitter

CallManager	Jitter (ms)
Cluster1_CCM1	7.0

Highest Jitter Increase

CallManager	Baseline (ms)	+30/60/90/ Days
Cluster1_CCM1	5.8	6.4/6.7/7.1

Highest Latency

CallManager	Latency (ms)
Cluster1_CCM1	0.0

Highest Latency Increase

CallManager	Baseline (ms)	+30/60/90/ Days
Cluster1_CCM1	0.0	0.0/0.0/0.0

Cisco IP Telephony Call Details

Gateway EndPoint TopTen by CallManager



The Gateway EndPoint TopTen Report presents top ten endpoints that have the Lowest Availability and Lowest Usage aggregated for a given Call Manager. This report can be used to identify the top bad performing end points.

Choose Call Manager

Hourly

Daily

Monthly

TopTen Hourly			
GatewayName	EndPointName	Protocol	Not Available
c3745-2.india.hp.com	EANDMPort	MGCP	233.00
c3745-2.india.hp.com	EANDMPort	MGCP	231.00
c3745-2.india.hp.com	EANDMPort	MGCP	231.00
c3745-2.india.hp.com	EANDMPort	MGCP	230.00
c3745-2.india.hp.com	EANDMPort	MGCP	229.00
c3745-2.india.hp.com	EANDMPort	MGCP	228.00
c3745-2.india.hp.com	EANDMPort	MGCP	226.00
c3745-2.india.hp.com	EANDMPort	MGCP	223.00
c3745-1.india.hp.com	EANDMPort	MGCP	222.00

Hourly

Daily

Monthly

Hourly Usage TopTen

GatewayName	EndPointName	Protocol	Not Used
c3745-2.india.hp.com	EANDMPort	MGCP	233.00
c3745-2.india.hp.com	EANDMPort	MGCP	231.00
c3745-2.india.hp.com	EANDMPort	MGCP	231.00
c3745-2.india.hp.com	EANDMPort	MGCP	230.00
c3745-2.india.hp.com	EANDMPort	MGCP	229.00
c3745-2.india.hp.com	EANDMPort	MGCP	228.00
c3745-2.india.hp.com	EANDMPort	MGCP	226.00
c3745-2.india.hp.com	FXSPort	MGCP	224.00
c3745-2.india.hp.com	FXSPort	MGCP	224.00

Cisco IP Telephony Call Details

Gateway EndPoint Channel TopTen by CallManager



The Gateway EndPoint Channel TopTen Report presents top ten endpoint channels that have the Lowest Availability and Lowest Usage aggregated for a given Call Manager. This report can be used identify the top bad performing channels.

Choose Call Manager

Hourly

Daily

Monthly

Hourly Availability TopTen

GatewayName	EndPointName	Protocol	ChannelName	Not Available
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	0.00

Hourly

Daily

Monthly

Hourly Availability TopTen

GatewayName	EndPointName	Protocol	ChannelName	Not Used
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2808.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2808.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2808.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2808.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2808.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2784.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2784.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	2784.00
c3745-1.india.hp.com	T1CAS_1_0	MGCP	DS0	1344.00

8 Call QoS Summary Reports

The call QoS summary reports provide QoS metrics aggregated by:

- Cluster
- CallManager
- The gateways associated with each CallManager
- The gateways associated with each location
- The phone numbers associated with each CallManager
- The phone numbers associated with each location

These reports focus on the following metrics:

- Total calls
- Average packets lost
- Average jitter
- Average latency
- Average QoS

Investigate Packets Lost more closely by looking at the following data graphs, tabbed Hourly, Daily, and Monthly:

- Calls by QoS Value stacked by:
 - Good
 - Acceptable
 - Fair
 - Poor
- Packets Lost
- Jitter
 - Average
 - Maximum
- Latency
 - Average
 - Maximum

Cisco IP Telephony Call Details



Cluster QoS Summary

The Cluster QoS Report presents QoS metrics aggregated for a given Cluster. This report can be used to view QoS statistic metrics and identify device performance issues. QoS value is derived from the Packet Lost, Jitter, and Latency metrics based on the pre-defined value ranges. QoS definition: 1=Good, 2=Acceptable, 3=Fair, and 4=Poor.


Cluster Selection

Wed Sep 24 12:00 AM

Cluster Name	Total Calls	Avg PacketsLost (%)	Avg Jitter (ms)	Avg Latency (ms)	Avg QoS
Cluster1	5	0.0	6.0	0.0	1.0


Hourly | Daily | Monthly

Calls by QoS Value For Selected Cluster

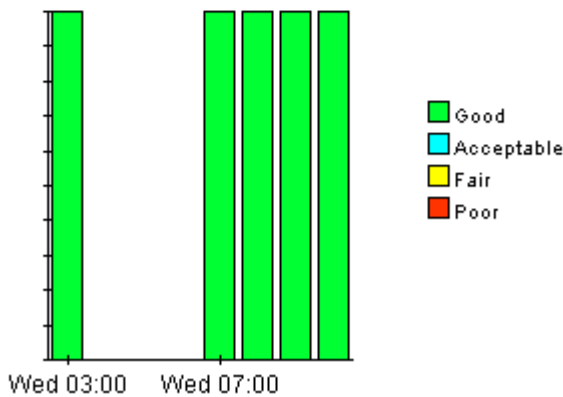


Hourly | Daily | Monthly

Packets Lost For Selected Cluster

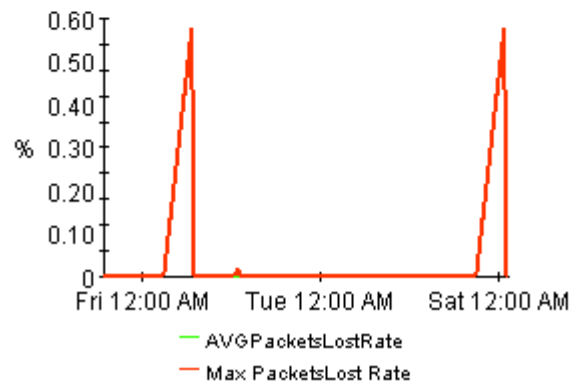




Hourly | **Daily** | Monthly

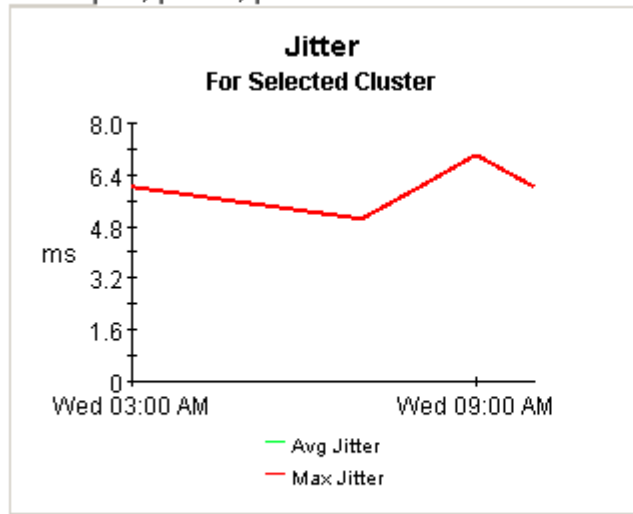

Hourly | **Daily** | Monthly

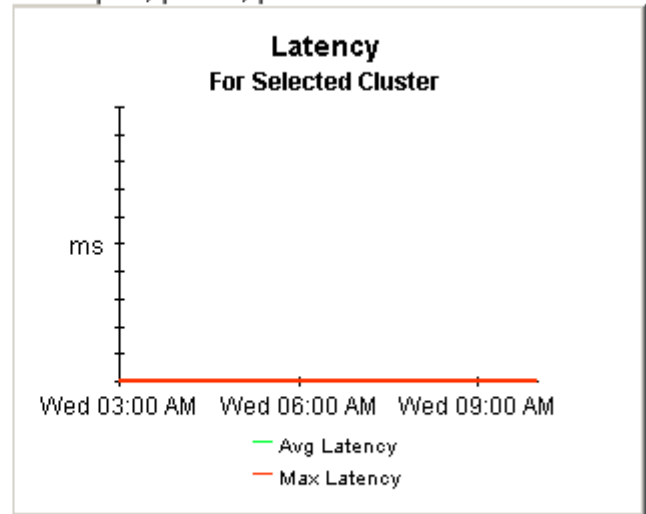

Cisco IP Telephony Call Details



Gateway QoS Summary by Location

The Gateway QoS Summary by Location Report presents QoS metrics aggregated for a given Gateway grouped by location. This report can be used to view QoS statistic metrics and identify device performance issues. QoS value is derived from the Packet Lost, Jitter, and Latency metrics based on the pre-defined value ranges. QoS definition: 1=Good, 2=Acceptable, 3=Fair, and 4=Poor.

Location Selection

Wed Jul 30 12:00 AM


Location	Total Calls	Avg PacketsLost (%)	Avg Jitter (ms)	Avg Latency (ms)	Avg QoS
Location Unassigned	1.00	0.0	0.0	0.0	1.0

Gateway Selection


Wed Jul 30 12:00 AM

Gateway	Total Calls	Avg PacketsLost (%)	Avg Jitter (ms)	Avg Latency (ms)	Avg QoS
SEP0009B7DA0E36	1	0.0	0.0	0.0	1.0


Hourly | Daily | Monthly

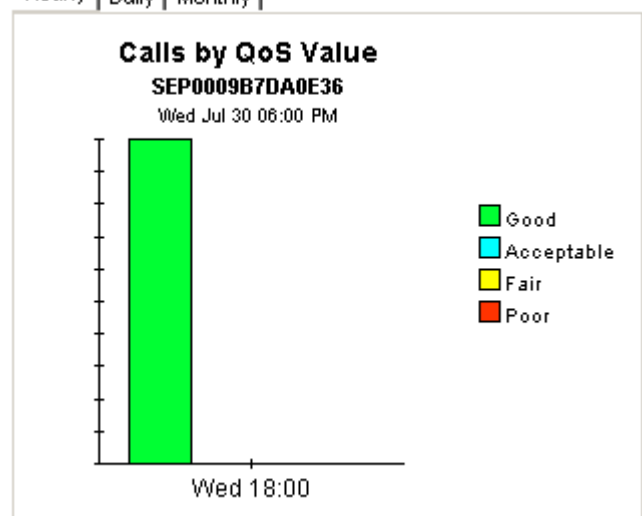


Hourly | Daily | Monthly

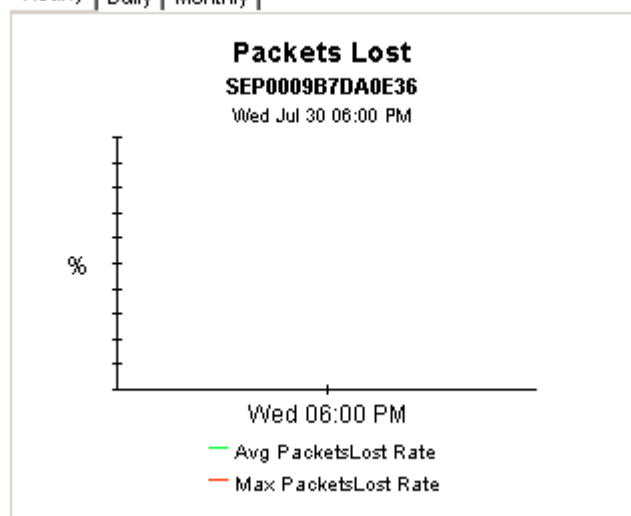

Hourly | Daily | Monthly

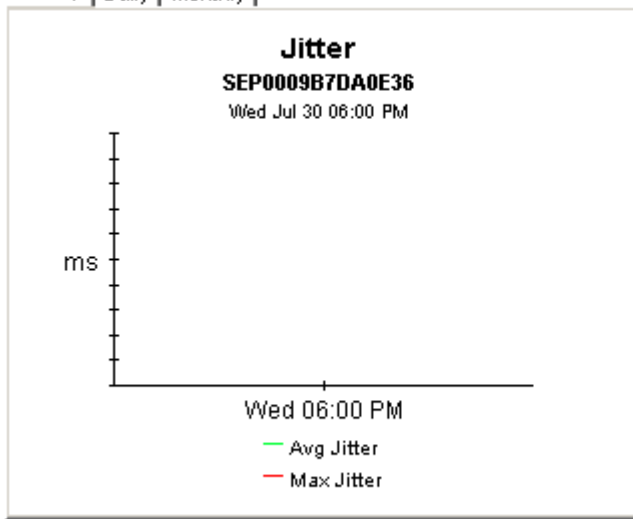

Hourly | Daily | Monthly

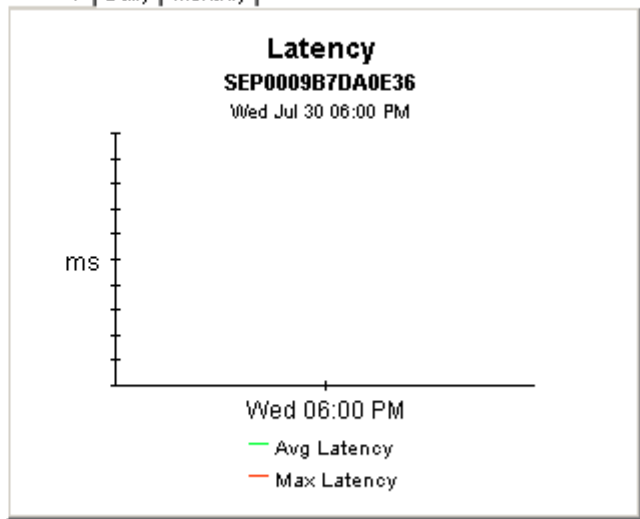

Cisco IP Telephony Call Details

CallManager QoS Summary




The CallManager QoS Report presents QoS metrics aggregated for a given CallManager. This report can be used to view QoS statistic metrics and identify device performance issues. QoS value is derived from the Packet Lost, Jitter, and Latency metrics based on the pre-defined value ranges. QoS definition: 1=Good, 2=Acceptable, 3=Fair, and 4=Poor.

CallManager Selection


Wed Sep 24 12:00 AM

Call Manager	Total Calls	Avg PacketsLost (%)	Avg Jitter (ms)	Avg Latency (ms)	Avg QoS
Cluster1_CCM1	5	0.0	6.0	0.0	1.0


Hourly | Daily | Monthly

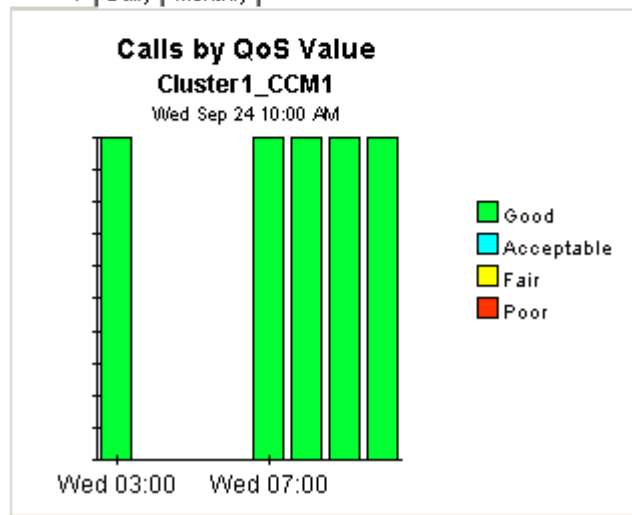


Hourly | Daily | Monthly

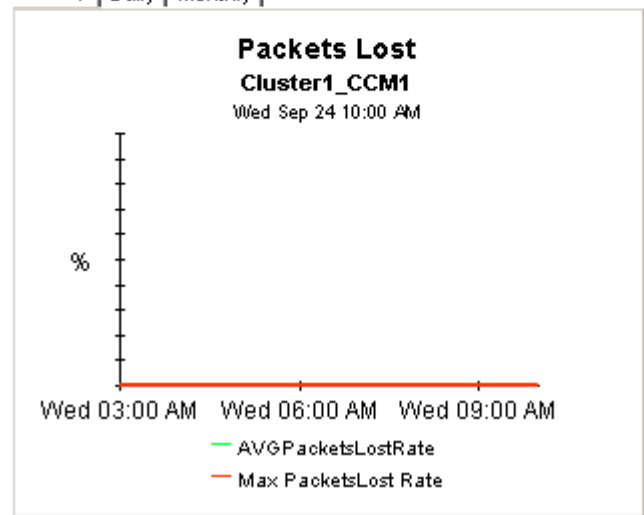

Hourly | Daily | Monthly

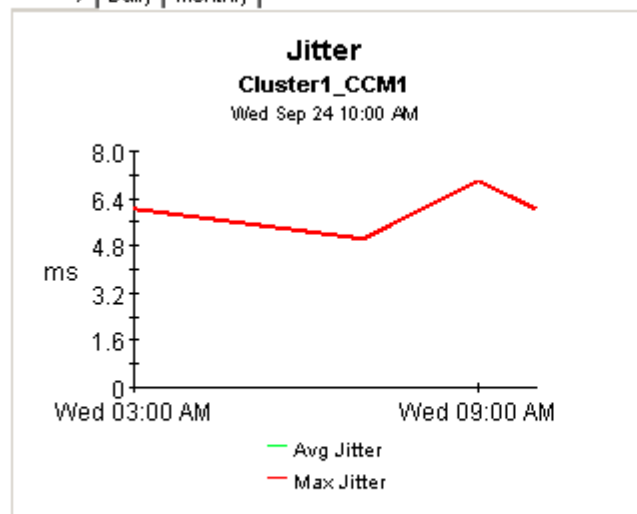

Hourly | Daily | Monthly

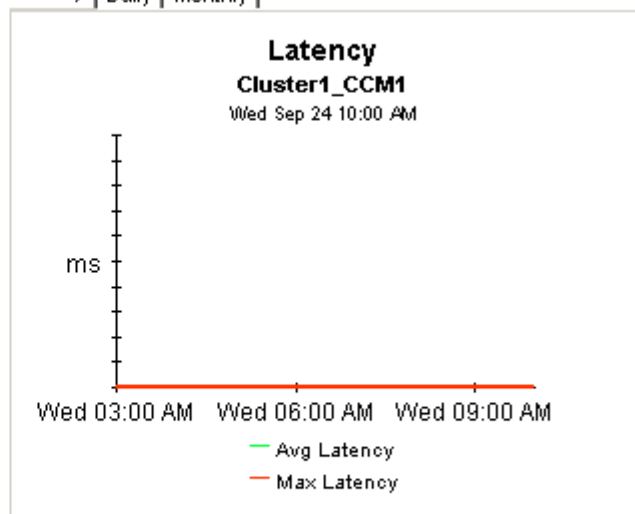

Cisco IP Telephony Call Details



Phone Number QoS Summary

The Phone Number QoS Summary Report presents QoS metrics aggregated for a given phone number associated with a CallManager. This report can be used to view QoS statistic metrics and identify device performance issues. QoS value is derived from the Packet Lost, Jitter, and Latency metrics based on the pre-defined value ranges. QoS definition: 1=Good, 2=Acceptable, 3=Fair, and 4=Poor

CallManager Selection

Wed Sep 24 12:00 AM


Call Manager	Total Calls	Avg PacketsLost (%)	Avg Jitter (ms)	Avg Latency (ms)	Avg QoS
Cluster1_CCM1	5.00	0.0	6.0	0.0	1.0

Phone Number Selection


Wed Sep 24 12:00 AM

Phone Number	Total Calls	Avg Jitter (ms)	Avg PacketsLost (%)	Avg Latency (ms)	Avg QoS
7793535	5	6.0	0.0	0.0	1.0


Hourly | Daily | Monthly

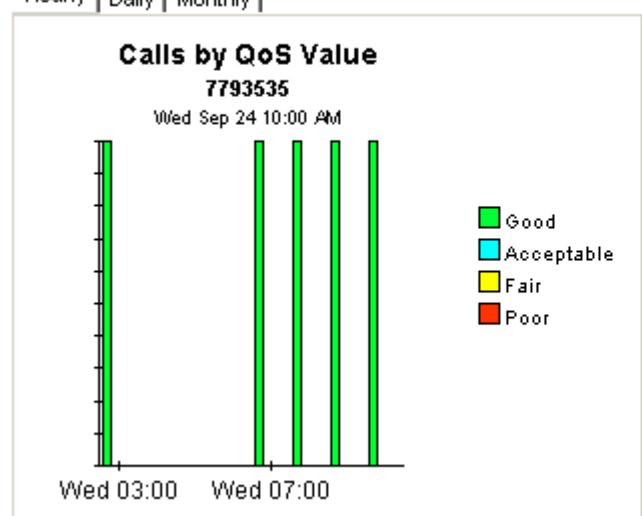


Hourly | Daily | Monthly

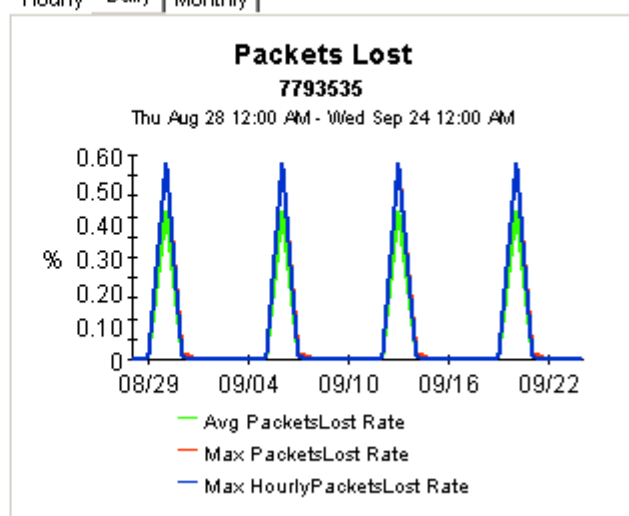

Hourly Daily Monthly

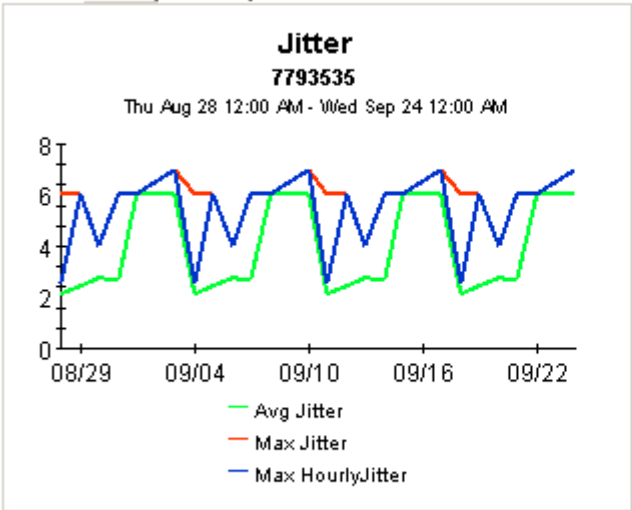

Hourly Daily Monthly

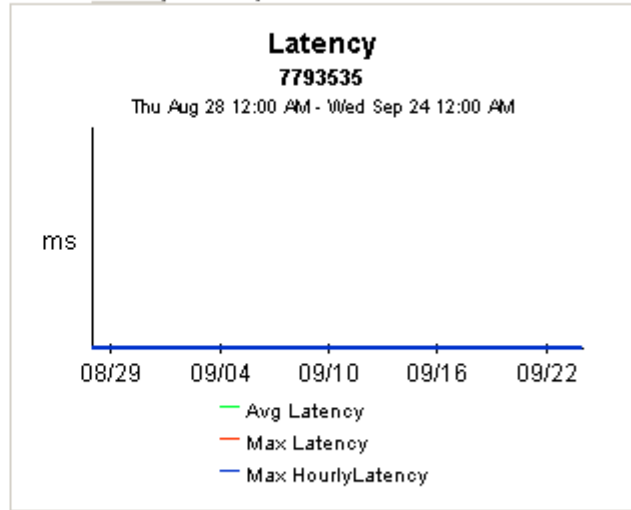

9 Forecast Reports

Forecast reports tell you whether call volume is growing or decreasing and how fast it is growing or decreasing. IPT Call Detail includes the following forecast reports:

- CallManager forecast
- Cluster forecast
- Gateway forecast by CallManager
- Phone number forecast
- Gateway forecast by location
- Location forecast
- Performance Monitor Forecast by CallManager
- Phone Number MOS Forecast
- Process CallManager Forecast
- Process Site Forecast
- System Resource Metrics Forecast by Call Manager
- System Resource Metrics Forecast by Site

CallManager, cluster, gateway, phone number, and location reports begin with an estimate of future call volume. The time ranges are 30 days from now, 60 days from now, and 90 days from now. You can investigate future performance in more detail by using the following graphs:

- Call Volume Forecast
- Call Minutes Forecast
- Call Success Rate Forecast
- Average QoS Forecast

Each graph has the following tabs:

Standard

Compare the baseline average to future performance.

Day of Week

Correlate future performance by day of week.

History

Inspect the data collected throughout the baseline period (the previous 91 days).

Cisco IP Telephony Call Details



CallManager Forecast


The CallManager Forecast Report enables the user to quickly identify CallManagers with the greatest projected increase in call volume, call minutes, call success rate, and average QoS grade. CallManagers are sorted by rate of increase in number of calls processed. Drill down charts present forecasted overall call volume metrics for the selected CallManager.

CallManager Selection


Thu Aug 28 12:00 AM


Call Manager	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
Cluster1_CCM1	142	30	-47	-124

Standard | Day of Week | History |

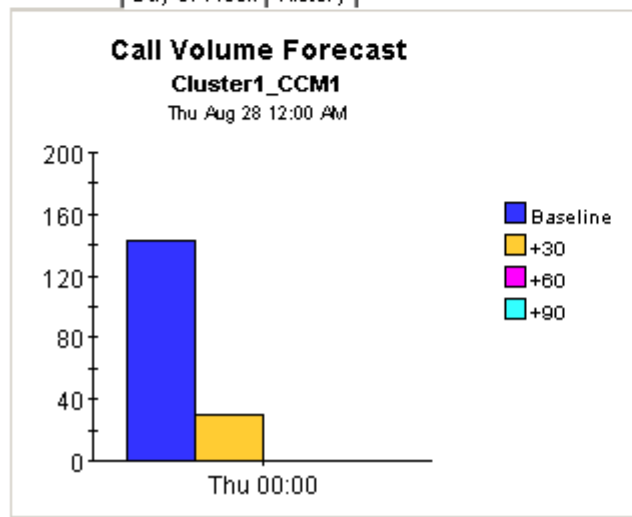

Standard | Day of Week | History |

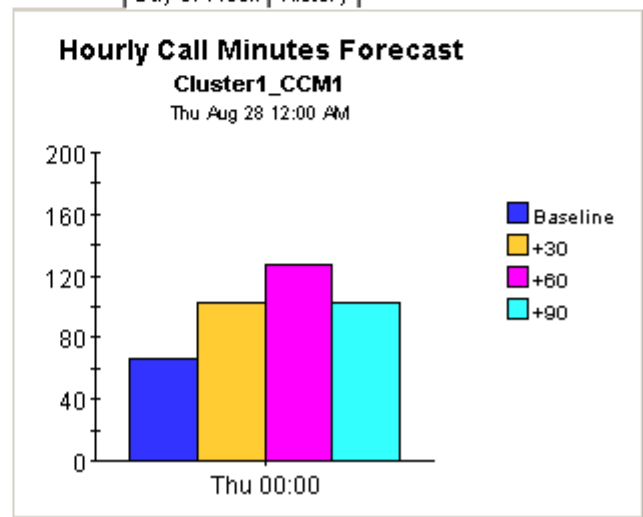

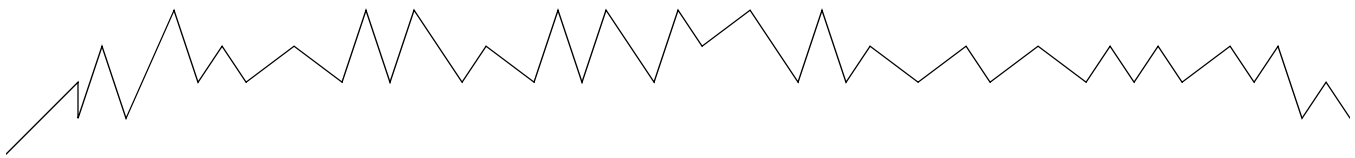


Standard | Day of Week | History

Call Success Rate Forecast

Cluster1_CCM1

Thu Aug 28 12:00 AM

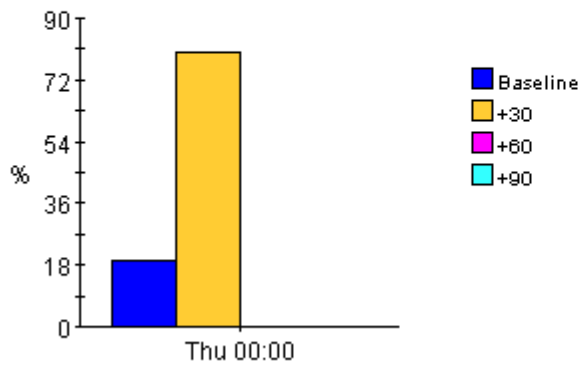


Standard | Day of Week | History

Average QoS Forecast

Cluster1_CCM1: Thu Aug 28 12:00 AM

1 - Good, 2 - Acceptable, 3 - Fair, 4 - Poor

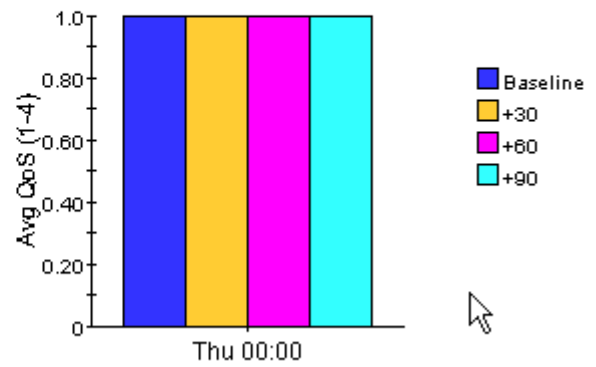

Cisco IP Telephony Call Details



Cluster Forecast


The Cluster Forecast Report enables the user to quickly identify Cluster with the greatest projected increase in call volume, call minutes, call success rate, and average QoS grade. Clusters are sorted by rate of increase in number of calls processed. Drill down charts present forecasted overall call volume metrics for the selected Cluster.

Cluster Selection


Thu Aug 28 12:00 AM

ClusterName	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
Cluster1	142	30	-47	-124

Standard | Day of Week | History

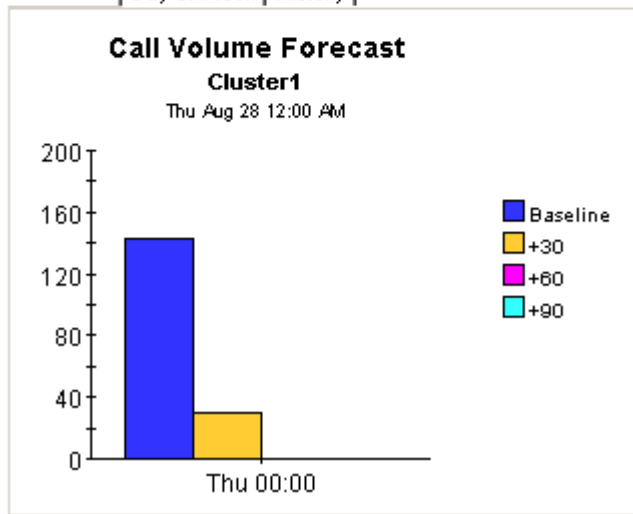


Standard | Day of Week | History

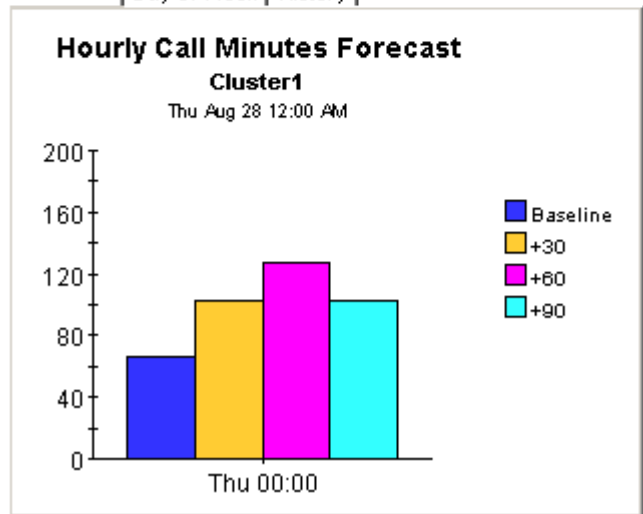



Standard | Day of Week | History


Call Success Rate Forecast

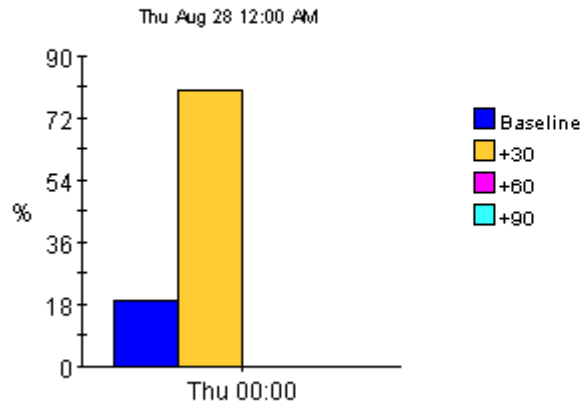

Standard | Day of Week | History

Average QoS Forecast

Cluster1: Thu Aug 28 12:00 AM
1 - Good, 2 - Acceptable, 3 - Fair, 4 - Poor

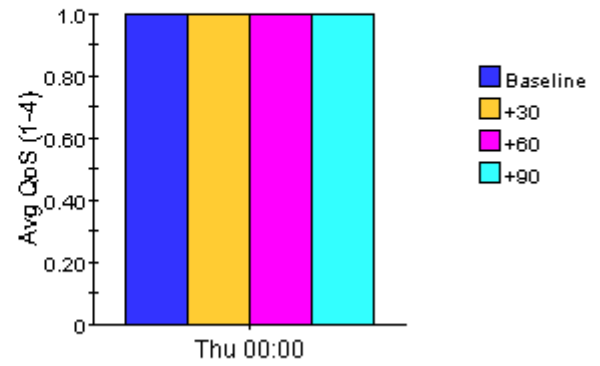

Cisco IP Telephony Call Details



Gateway Forecast by CallManager

The Gateway Forecast Report enables the user to quickly identify Gateways with the greatest projected increase in call volume, call minutes, call success rate, and average Quos grade. Gateways are sorted by rate of increase in number of calls processed. Drill down charts present forecasted overall call volume metrics for the selected Gateway.

CallManager Selection

Thu Aug 28 12:00 AM


Call Manager	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
Cluster1_CCM1	142	30	-47	-124

Gateway Selection


Thu Aug 28 12:00 AM

Gateway	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
gateway1	132	20	-57	-134

Standard | Day of Week | History

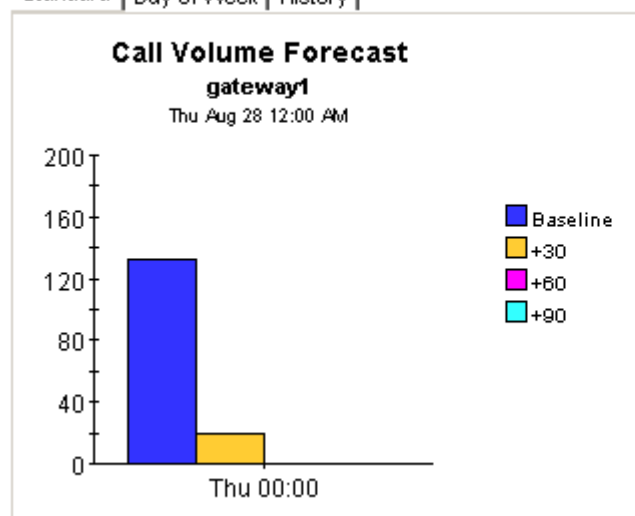

Standard | Day of Week | History

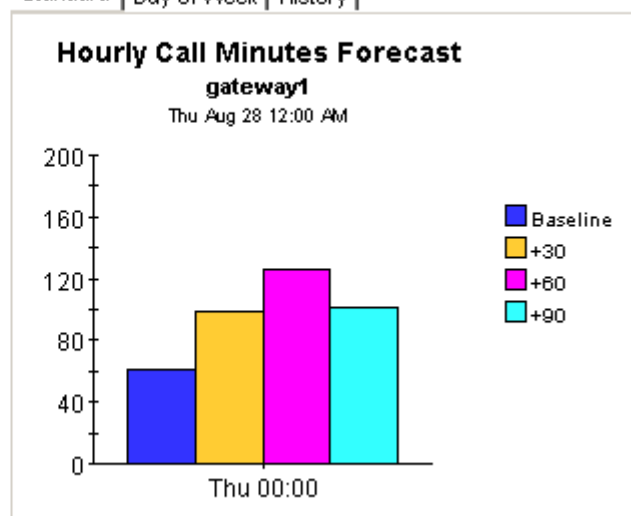


Standard | Day of Week | History

Call Success Rate Forecast

gateway1

Thu Aug 28 12:00 AM

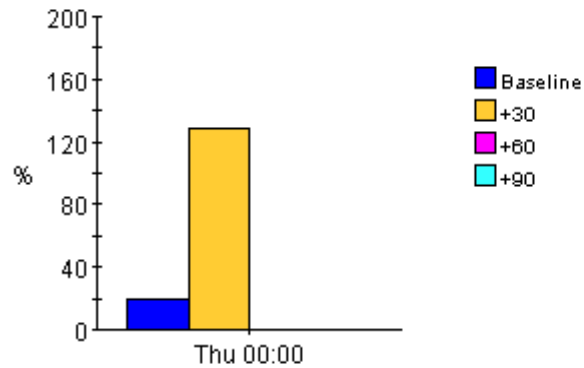

Standard | Day of Week | History

Average QoS Forecast

gateway1: Fri Sep 26 02:01 PM

1 - Good, 2 - Acceptable, 3 - Fair, 4 - Poor

Cisco IP Telephony Call Details



Gateway Forecast by Location

The Gateway Forecast by Location Report enables the user to quickly identify Gateways with the greatest projected increase in call volume, call minutes, call success rate, and average QoS grade. Gateways are sorted by rate of increase in number of calls processed. Drill down charts present forecasted overall call volume metrics for the selected Gateway.



Location Selection

Thu Aug 28 12:00 AM


Location	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
Location Unassigned	37	31	27	24

Gateway Selection


Thu Aug 28 12:00 AM

Gateway	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
gateway1	132	20	-57	-134

Standard | Day of Week | History

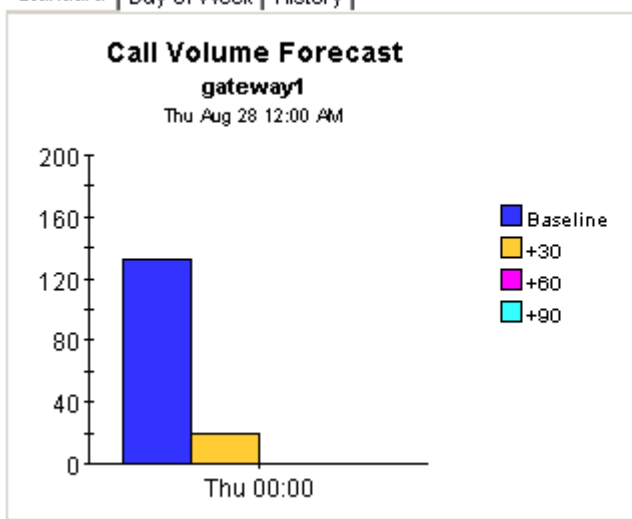

Standard | Day of Week | History

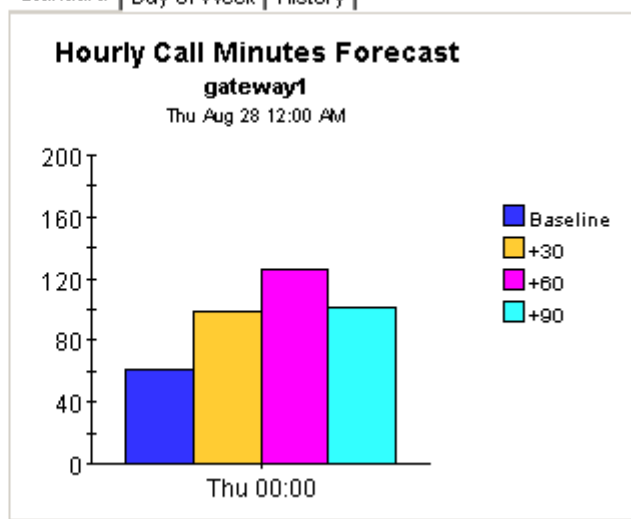


Standard | Day of Week | History

Call Success Rate Forecast

gateway1

Thu Aug 28 12:00 AM

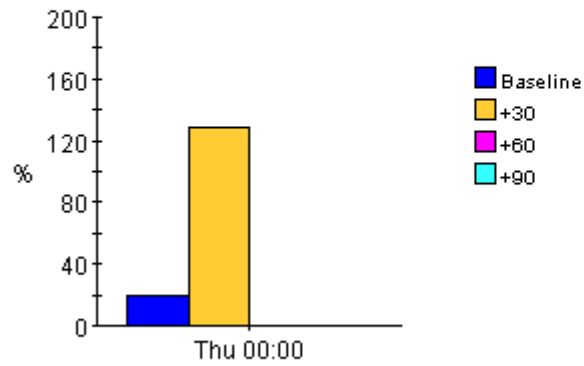

Standard | Day of Week | History

Average QoS - Day of Week Forecast

gateway1: Thu Sep 25 12:00 AM

1 - Good, 2 - Acceptable, 3 - Fair, 4 - Poor

Day of Week	Baseline	+30	+60	+90
-------------	----------	-----	-----	-----

Cisco IP Telephony Call Details



Phone Number Forecast

The Phone Number Forecast Report enables the user to quickly identify phone numbers with the greatest projected increase in call volume, call minutes, call success rate, and average QoS grade. Phone numbers are sorted by rate of increase in number of calls processed. Drill down charts present forecasted overall call volume metrics for the selected phone number.

CallManager Selection

Thu Aug 28 12:00 AM


Call Manager	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
Cluster1_CCM1	142	30	-47	-124

Phone Number Selection


Sun Aug 31 12:00 AM

Phone Number	AVGTOTCalls	F30TOTCalls	F60TOTCalls	F90TOTCalls
7793538	13	14	15	16
7793502	1	1	1	1
7793520	9	8	7	7
7793522	17	17	17	17
7793535	10	2	-4	-10
7793599	7	6	5	5
7793501	1	1	1	1
7793502	2	3	4	5


Standard | Day of Week | History |

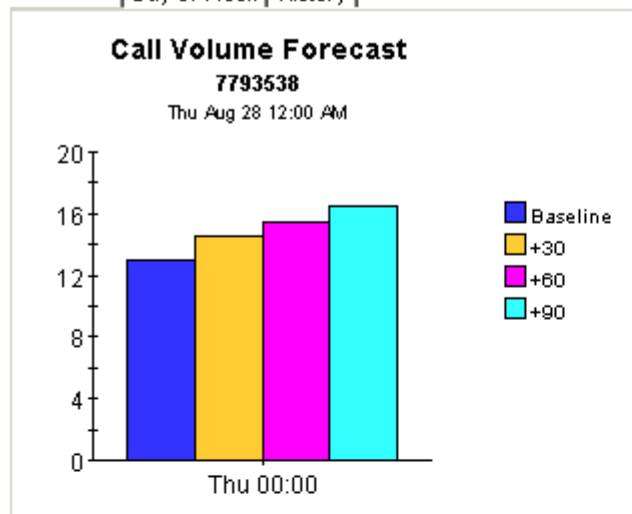

Standard | Day of Week | History |

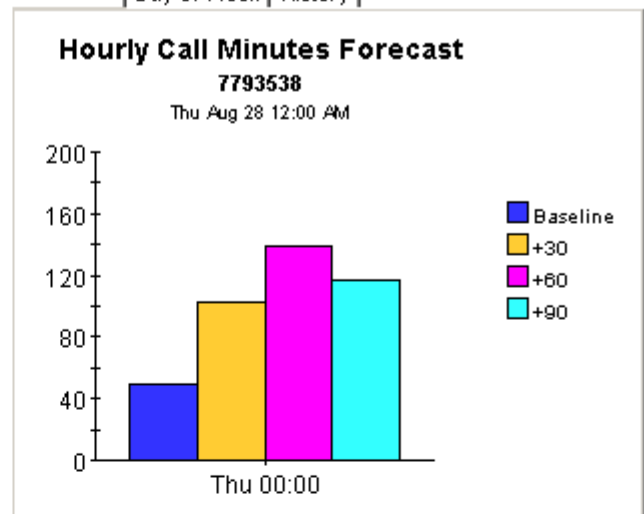

Standard | Day of Week | History |

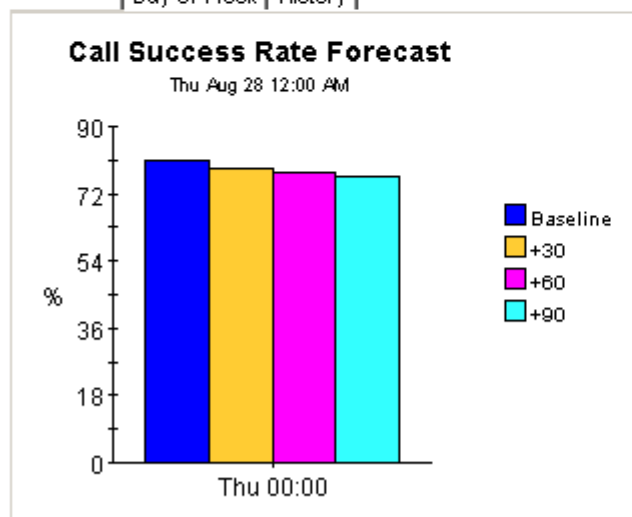

Standard | Day of Week | History |



Cisco IP Telephony Call Details



Performance Monitor Forecast by CallManager

The Performance Monitor Forecast Report enables the user to quickly identify Objects and Metrics with the greatest projected increase in values. Metrics are sorted by increase in number of values. Drill down charts present forecasted overall performance monitor metrics for the selected object and metric.

CManager Selection


	Node Name
	15.106.79.100
	15.106.79.67
	15.106.79.46

Object Selection

	Object Name
	Cisco CTI Manager
	Cisco CallManager
	Cisco CallManager Attendant Console
	Cisco CallManager System Performance
	Cisco Dual-Mode Mobility
	Cisco Enterprise Mobility

Metrics Selection

Attribute Name	AVG	+30	+60	+90
##TranscoderResourceActive	0	0	0	0

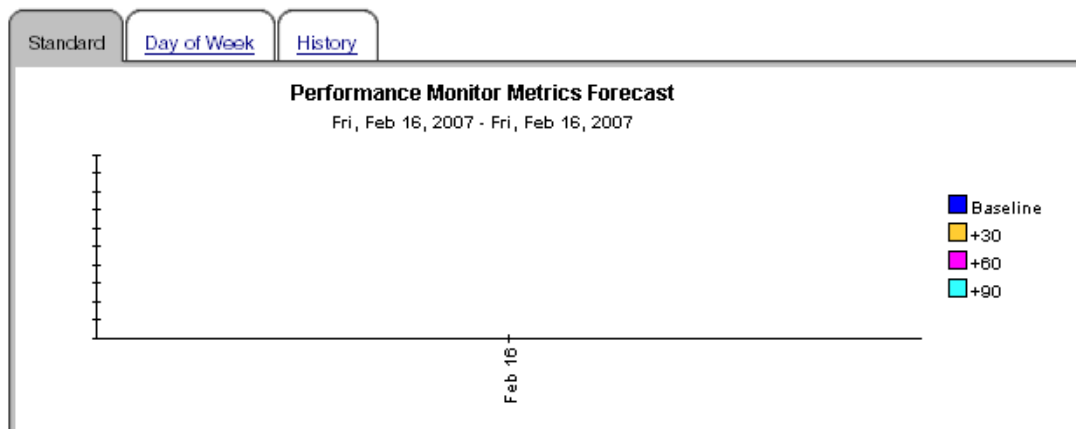




Cisco IP Telephony Call Details



Process Forecast - CallManager



The process forecast report will give various process system level metrics reports of the selected object type associated with a callmanager. It will display CPU, memory, file number, normal and abnormal status number metrics.




CallManager Selection

CallManager Name	
	15.106.79.100
	15.106.79.67
	15.106.79.46

Process selection

Process Name	
	/usr/local/platform/bin/CiscoLicenseMgr

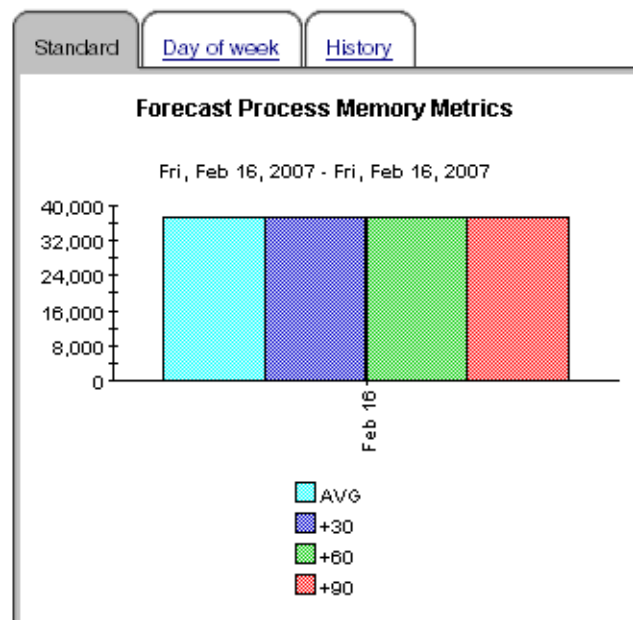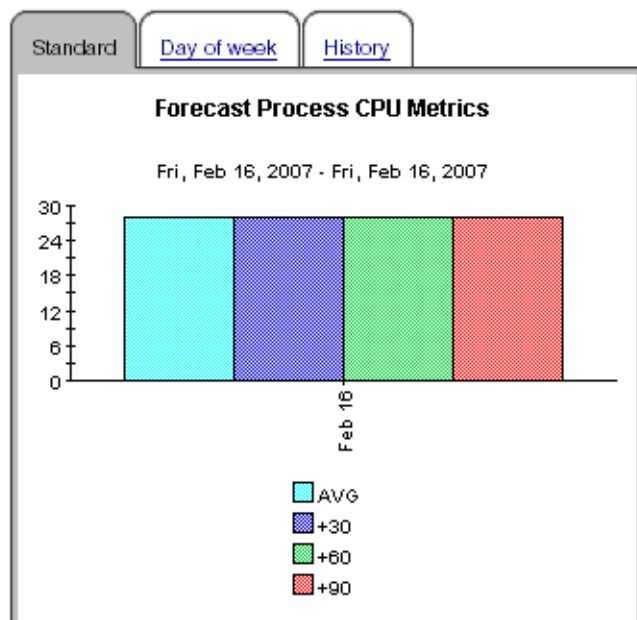

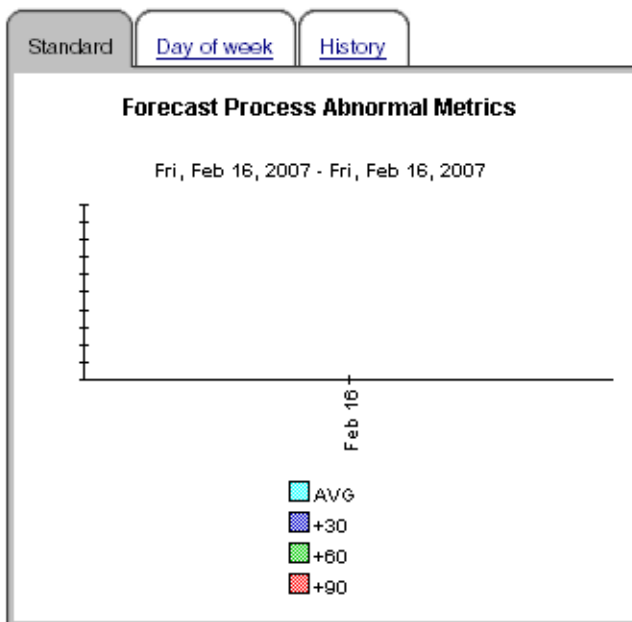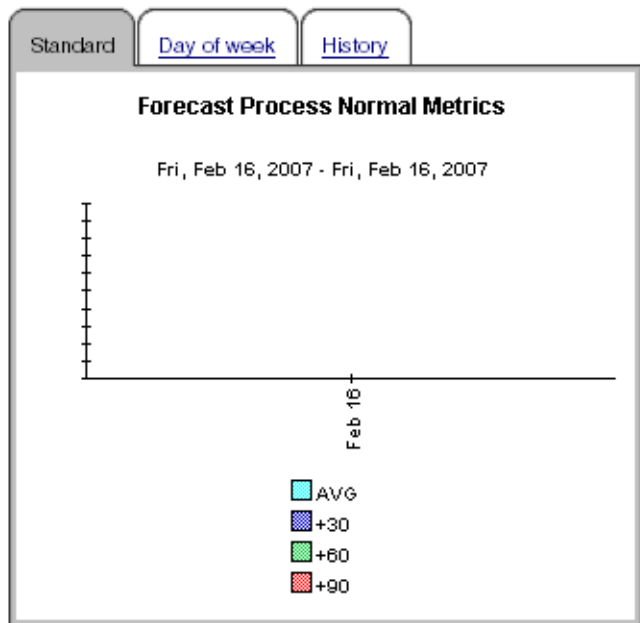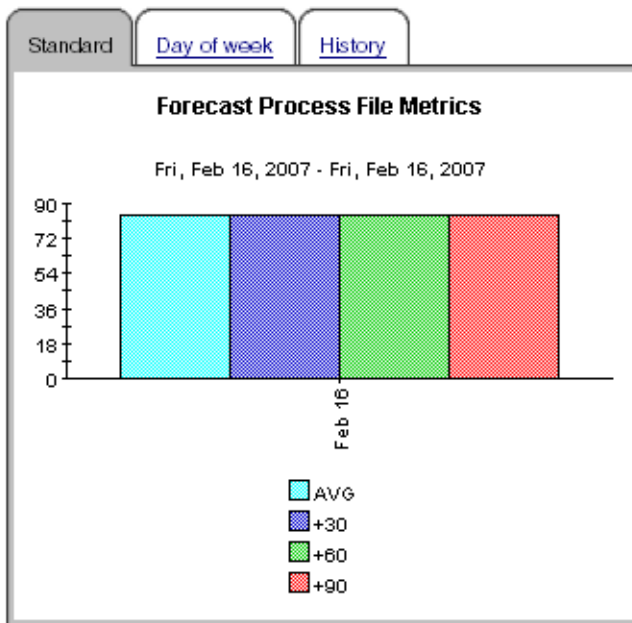

10 Inventory Report

The inventory report provides a list of:

- Clusters
- CallManagers associated with each cluster
- Gateways associated with each CallManager
- IP phones associated with each CallManager

If you are in the habit of assigning customers and locations to CallManagers and gateways, this report will tell you which CallManager and gateways, if any, do not have customers or locations assigned to them.

The inventory report reads property tables created by the Admin module. The Admin module that comes with IPT Call Detail is exactly the same as the Admin module that comes with IP Telephony Gateway Statistics. Both packages share the same inventory report. The inventory report reads the following property tables:

- K_IPT_Cluster
- K_IPT_CManager
- K_IPT_gateway
- K_IPT_phoneNum
- K_IPT_gateway_loc (location module)
- K_IPT_loc (location module)
- K_IPT_QoS

These tables are refreshed daily by the Cisco CDR Datapipe. In addition, they are updated by any changes you make using the property update forms that come with IPT Call Detail.

Cisco IP Telephony Administration

Inventory



This report has one entry for each CallManager Cluster and provides hierarchy information for the CallManagers, Gateways, and IP Phones associated with that CallManager Cluster.

Cluster Selection

Cluster Name	Number of CallManager	Number of Gateway	Number of IP Phone
default	1	1	1
Cluster1	1	1	10

Call Manager for Selected Cluster

CallManager	Location	Number of Gateway	Number of IP Phone
default	Location Unassigned	1	1

Gateways for Selected CallManager

Gateway	Location
---------	----------

IP Phones For Selected CallManager

Phone Number	User	Location
default		Location Unassigned

11 Summary Reports

There are five summary reports that show summary views by phone number, CallManager, or site:

- **Phone Number MOS Summary** - presents MOS metrics aggregated for a given phone number associated with a CallManager. This report can be used to view MOS statistic metrics and identify device performance issues.
- **Process CallManager Summary** - gives various process system level metrics reports of the selected object type associated with a CallManager.
- **Process Location Summary** - gives various process system level metrics reports of the selected object type associated with a site.
- **System Resource Metrics Summary by CallManager** - gives various system resource system level metrics reports of the selected object type associated with a CallManager.
- **System Resource Metrics Summary by Location** - gives various system resource system level metrics summary reports of the selected object type associated with a site.

Cisco IP Telephony Call Details



Process Summary - CallManager

The process summary report will give various process system level metrics reports of the selected object type associated with a CallManager.

Call Manager Selection


Call Manager Name

	15.106.79.100
	15.106.79.67
	15.106.79.46

Process selection

Process Name

/usr/local/platform/bin/CiscoLicenseMgr

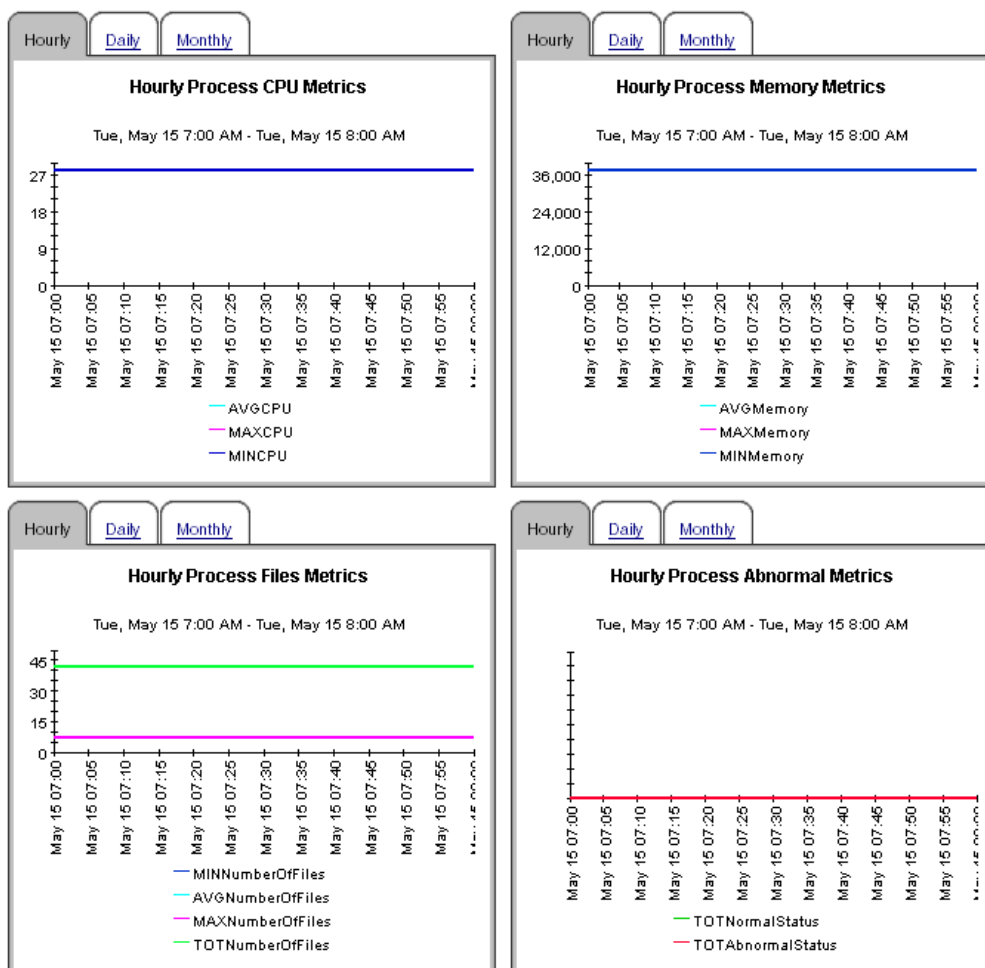

Cisco IP Telephony Call Details



Process Summary - Location

The process summary report will give various process system level metrics reports of the selected object type associated with a location.

Location Selection

Location Name

Shanghai

Process selection

Process Name

/usr/local/platform/bin/CiscoLicenseMgr



logread.exe




dllhost.exe

Hourly [Daily](#) [Monthly](#)

Hourly Process CPU Metrics


Tue, May 15 7:00 AM - Tue, May 15 8:00 AM

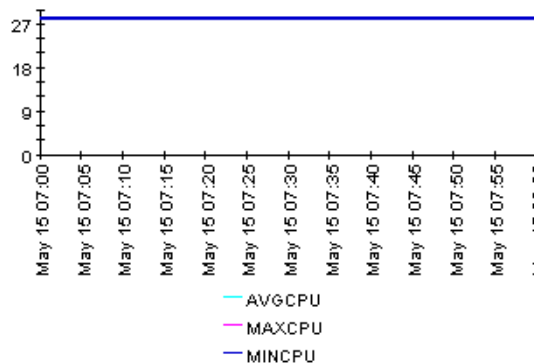

Hourly [Daily](#) [Monthly](#)

Hourly Process Memory Metrics


Tue, May 15 7:00 AM - Tue, May 15 8:00 AM

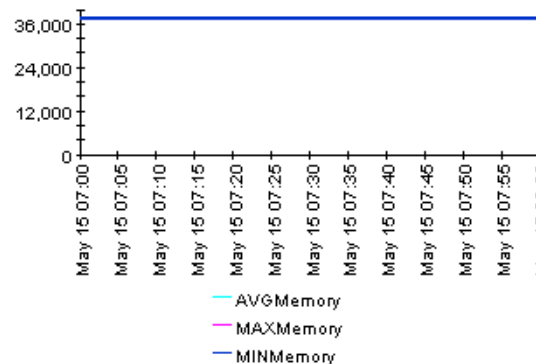

Hourly [Daily](#) [Monthly](#)

Hourly Process Files Metrics


Tue, May 15 7:00 AM - Tue, May 15 8:00 AM

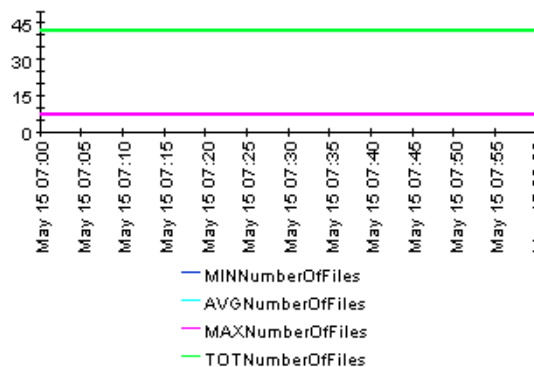

Hourly [Daily](#) [Monthly](#)

Hourly Process Abnormal Metrics

Tue, May 15 7:00 AM - Tue, May 15 8:00 AM

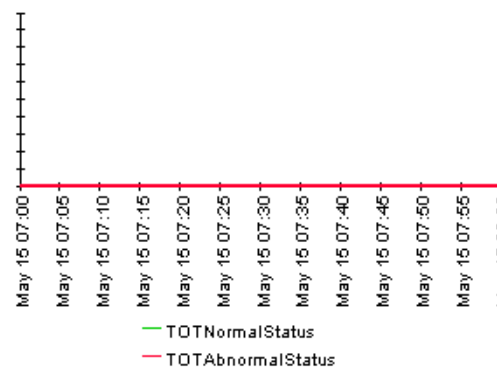




Cisco IP Telephony Call Details

System Resource Metrics Summary - Call Manager










The system resource summary report will give various system resource system level metrics reports of the selected object type associated with a CallManager.





Call Manager Selection


Call Manager Name	
	ABCD_CM_DBN_CCM2
	ABCD_CM_DBN_CCM3
	ABCD_CM_DBN_CCM7
CCM3	

System Resource Object Selection

Object Type	Object Name
	Processor .0
	LOGICAL_STORAGE_AREA /
	LOGICAL_STORAGE_AREA /common
	PHYSICAL_DEVICE /dev/cciss/c0d0
	PHYSICAL_DEVICE /dev/hda DV-28E-N
	LOGICAL_STORAGE_AREA /dev/pts
	LOGICAL_STORAGE_AREA /dev/shm

System Resource - Metrics selection

Object Type	Attribute Name
	LOGICAL_STORAGE_AREA StorageAllocFailures
	LOGICAL_STORAGE_AREA StorageAllocUnit
	LOGICAL_STORAGE_AREA StorageSize
	LOGICAL_STORAGE_AREA StorageUsed

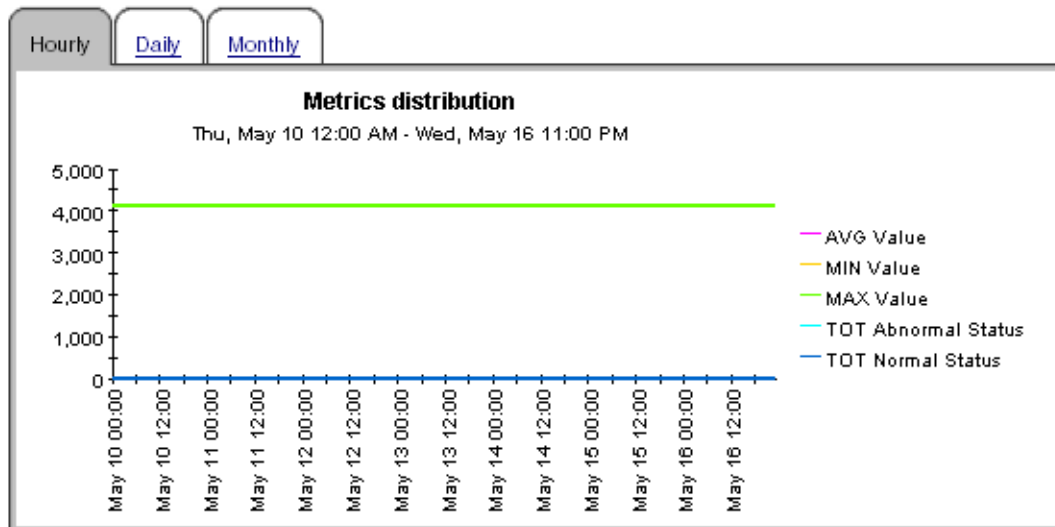

A Version History

Version	Release Date	Features/Enhancements
1.00	October 2003	<ul style="list-style-type: none">• 30 call detail reports, 1 inventory report• Sybase support• OVPI Object Manager support• Cisco CallManager 3.3 support• CiscoCDR_Datapipe 1.00
2.00	August 2004	<ul style="list-style-type: none">• Oracle support• Cisco CallManager 4.0 support• CiscoCDR_Datapipe 2.00
2.00	June 2005	<i>new upgrade packages:</i> <ul style="list-style-type: none">• UPGRADE_Cisco_IP_Telephony_Admin_to_2• UPGRADE_Cisco_IP_Telephony_CallDetails_to_2• UPGRADE_Cisco_IPT_CallDetails_Location_to_2 CiscoCDR_Datapipe 2.10 (defect fix)
3.00	April 2007	<i>new features:</i> <ul style="list-style-type: none">• LIR (copy policies modified)• Integration with the Cisco IPT SPI• CCM 5.0 support (MOS data) <i>new reports</i> <ul style="list-style-type: none">• Gateway EndPoint Channel Top Ten by CM• Gateway EndPoint Channel History Summary by CM• Gateway EndPoint History Summary by CM• Gateway EndPoint Channel Forecast by CM• Gateway EndPoint Top Ten by CM• Gateway EndPoint Channel History Summary by Location• Gateway EndPoint History Summary by Location• Gateway EndPoint Forecast by CM• PerfMon Forecast• PerfMon Summary

Version	Release Date	Features/Enhancements
3.00	April 2007	<ul style="list-style-type: none"> • Phone Number MOS Forecast • Phone Number MOS Summary • Phone Number MOS Top100Offender • Process CallManager Forecast • Process CallManager Summary • Process Location Forecast • Process Location Summary • System Resource Location Forecast • System Resource Location Summary • System Resource CallManager Forecast • System Resource CallManager Summary • Voice Application Location History Summary • Voice Application CallManagerHistory Summary <p><i>new upgrade packages:</i></p> <ul style="list-style-type: none"> • UPGRADE_IPT_CallDetails_Location_to_21 • UPGRADE_IPT_Admin_to_21 • UPGRADE_IPT_CallDetails_to_3 <p><i>revised datapipe:</i></p> <ul style="list-style-type: none"> • CiscoCDR_Datapipe 3.0 <p><i>defect fix:</i></p> <ul style="list-style-type: none"> • QXCR1000352040
3.00	October 2007	<p><i>upgrade prerequisites</i></p> <ul style="list-style-type: none"> • PI 5.30 <p><i>new upgrade package</i></p> <ul style="list-style-type: none"> • Common Property Tables 3.70
3.10	February 2008	<p>Upgrade Patch (not available on CD):</p> <p><i>upgrade prerequisites</i></p> <ul style="list-style-type: none"> • PI 5.31 <p><i>upgrade feature:</i></p> <ul style="list-style-type: none"> • Copy Policy Enhancement <p><i>new upgrade packages</i></p> <ul style="list-style-type: none"> • UPGRADE_IPT_CallDetails_to_31.ap • UPGRADE_CiscoCDR_Datapipe_to_32.ap • Common Property Tables 3.80

Version	Release Date	Features/Enhancements
3.10	February 2009	<p><i>upgrade prerequisites</i></p> <ul style="list-style-type: none"> PI 5.40 <p><i>upgrade feature:</i></p> <ul style="list-style-type: none"> Data Aggregation Utilities Enhancement Support for CCM 6.x <p><i>new upgrade packages</i></p> <ul style="list-style-type: none"> Cisco_IP_Telephony_Admin_Upgrade_to_21 (UPGRADE_IPT_Admin_to_21.ap) Cisco_IP_Telephony_CallDetails_Loc_Upgrade_to_22 (UPGRADE_IPT_CallDetails_Location_to_22.ap) Cisco_IP_Telephony_CallDetails_Upgrade_to_31 (UPGRADE_IPT_CallDetails_to_31.ap) CiscoCDR_Datapipe_Upgrade_to_32 (UPGRADE_CiscoCDR_Datapipe_to_32.ap) Cisco_IP_Telephony_Statistics_Loc_Upgrade_to_31 (UPGRADE_Gateway_Statistics_Location_to_31.ap) Cisco_IP_Telephony_Statistics_Upgrade_to_32 (UPGRADE_Gateway_Statistics_to_32.ap) CommonPropertyTables_Upgrade_to_39 (UPGRADE_CommonPropertyTables_to_39.ap) <p><i>defect fix:</i></p> <ul style="list-style-type: none"> QXCR1000872944


B Editing Tables and Graphs

Any table or graph can be viewed in several ways. Although the default view is usually adequate, you can easily change to a different view. If you are using Report Viewer, right-click the object to open a list of view options. If you are using the Web Access Server, follow these steps to change the default view of a table or graph:

- 1 Click **Preferences** on the links bar.
- 2 Expand **Reports** in the navigation frame.
- 3 Click **Viewing**.
- 4 Select the **Allow element editing** box.
- 5 Click **Apply**.
- 6 Click the Edit icon next to the table or graph.

View Options for Tables

Right-clicking a table, or selecting the Edit Table icon if you are using the Web Access Server, opens a list of table view options.

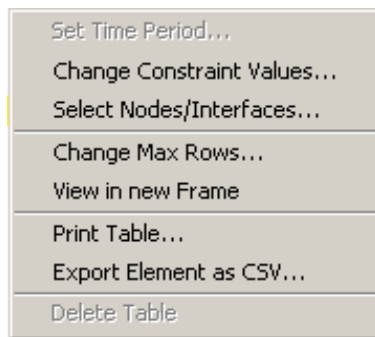

Select **Set Time Period** to alter the relative time period (relative to now) or set an absolute time period. The Set Time Period window opens.

You can shorten the period of time covered by the table from, for example, 42 days to 30 days or to 7 days. If you are interested in a specific period of time that starts in the past and stops *before* yesterday, click **Use Absolute Time** and select a Start Time and an End Time.

Select **Change Constraint Values** to loosen or tighten a constraint, thereby raising or lowering the number of elements that conform to the constraint. The Change Constraint Values window opens. To loosen a constraint, set the value lower. To tighten a constraint, set the value higher.

The **Select Nodes/Interfaces** enables you to change the scope of the table by limiting the table to specific nodes, specific interfaces, or a specific group of nodes or interfaces. The Select Node Selection Type window opens.


Change Max Rows increases or decreases the number of rows in a table. The default is 50. If you expand the default, the table might take more time to open. If you are trending a large network, using the default ensures that the table opens as quickly as possible.

View in new Frame opens the table in a Table Viewer window, shown below. If necessary, make the data in the table more legible by resizing the window.

Polled IP QoS Statistics Data - Input Over Previous 6 Hours					
Direction	IpPrecedence	Switched Bytes	Switched Pkts	Time Period	
Input	0	105,888	675	Tue Oct 29 07:00 AM	
Input	1	0	0	Tue Oct 29 07:00 AM	
Input	2	0	0	Tue Oct 29 07:00 AM	
Input	3	0	0	Tue Oct 29 07:00 AM	
Input	4	0	0	Tue Oct 29 07:00 AM	
Input	5	0	0	Tue Oct 29 07:00 AM	
Input	6	600	5	Tue Oct 29 07:00 AM	
Input	7	0	0	Tue Oct 29 07:00 AM	
Input	0	98,334	638	Tue Oct 29 06:45 AM	
Input	1	0	0	Tue Oct 29 06:45 AM	
Input	2	0	0	Tue Oct 29 06:45 AM	
Input	3	0	0	Tue Oct 29 06:45 AM	
Input	4	0	0	Tue Oct 29 06:45 AM	

View Options for Graphs

Right-clicking a graph, or clicking the Edit Graph icon if you are using the Web Access Server, opens the following list of view options.

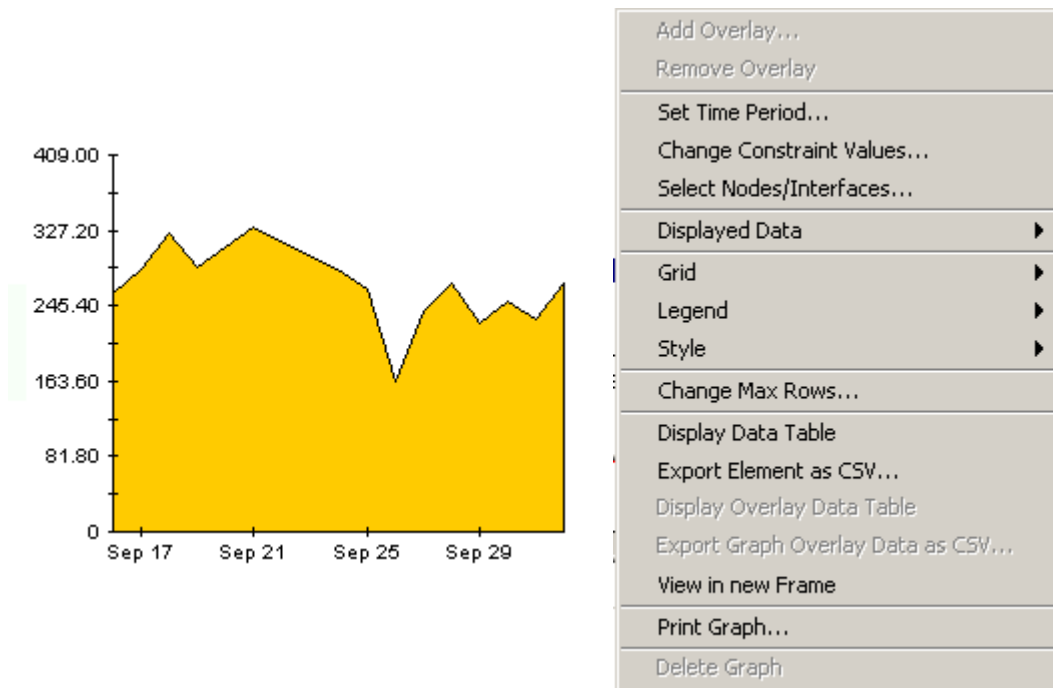


The following table provides details about each option.

Option	Function
Set Time Period	Same as the table option shown above.
Change Constraint Values	Same as the table option shown above.
Select Nodes/Interfaces	Same as the table option shown above.
Displayed Data	For every point on a graph, display data in a spreadsheet.
Grid	Add these to the graph: X axis grid lines Y axis grid lines X and Y axis grid lines
Legend	Delete or reposition the legend.
Style	See the illustrations below.
Change Max Rows...	Same as the table option shown above.
Display Data Table	See below.
Export Element as CSV...	Same as the table option shown above.
View in New Frame	Opens graph in a Graph Viewer window.
Print Graph	Same as the table option shown above.


Style Options

Select **Style** to display a list of seven view options for graphs.

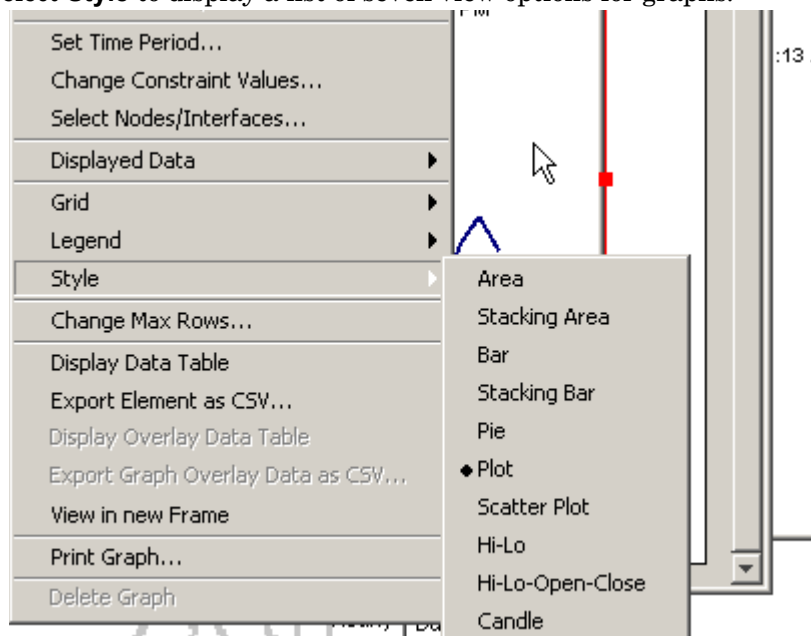

Style > Area


The plot or bar chart changes to an area graph. Although relative values and total values are easy to view in this format, absolute values for smaller data types may be hard to see. Click anywhere within a band of color to display the exact value for that location

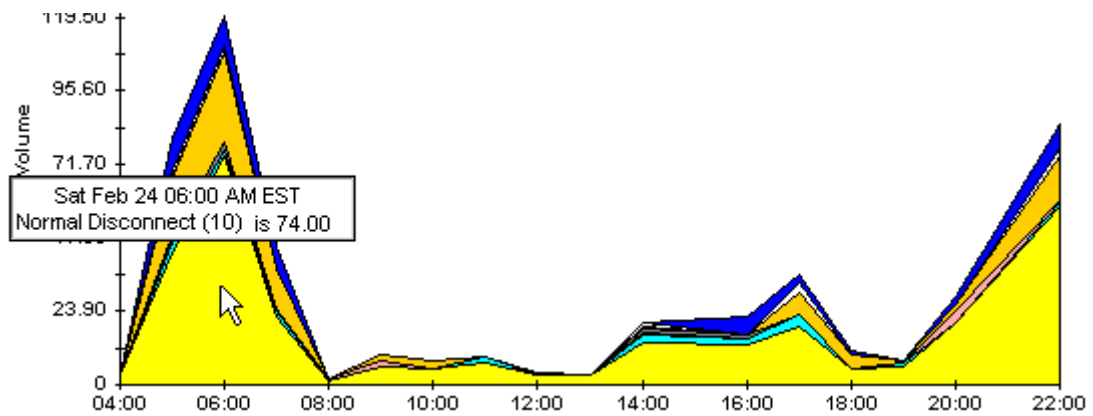

To shorten the time span of a graph, press SHIFT+ALT and use the left mouse button to highlight the time span you want to focus on. Release the mouse button to display the selected time span.


Style > Stacking Area

The area or plot graph changes to a stacking area graph. This view is suitable for displaying a small number of variables.

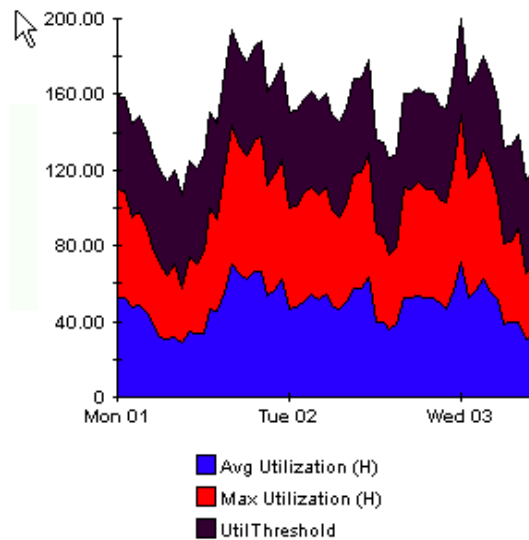


Style > Bar

The graph changes to a bar chart. This view is suitable for displaying relatively equal values for a small number of variables. There are three variables in the graph below.

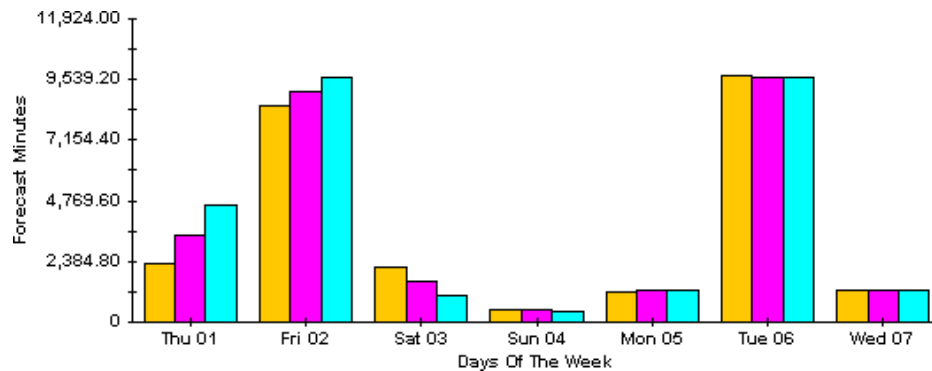


Style > Stacking Bar

The plot or area graph changes to a stacking bar chart. If you increase the width of the frame, the time scale becomes hourly. If you increase the height of the frame, the call volume shows in units of ten.

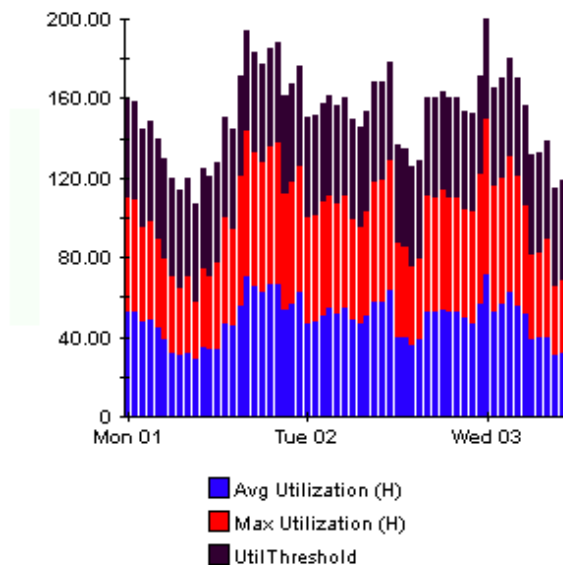


Style > Plot

Bands of color in an area graph change to lines. If you adjust the frame width, you can make the data points align with hour. If you adjust the frame height, you can turn call volume into whole numbers.

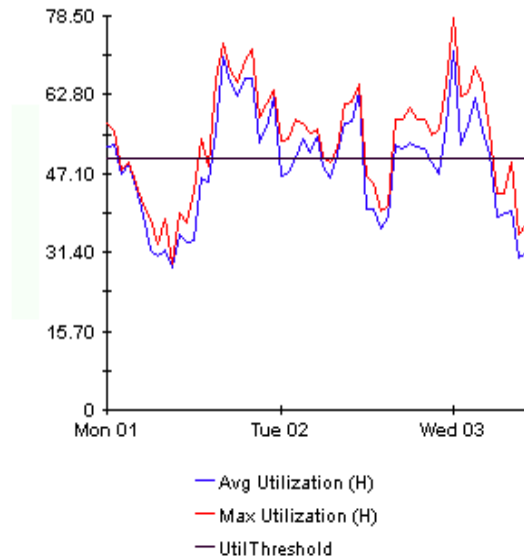

Style > Pie


An area graph becomes a pie chart. Bands in an area graph convert to slices of a pie and the pie constitutes a 24-hour period. This view is helpful when a small number of data values are represented and you are looking at data for one day.

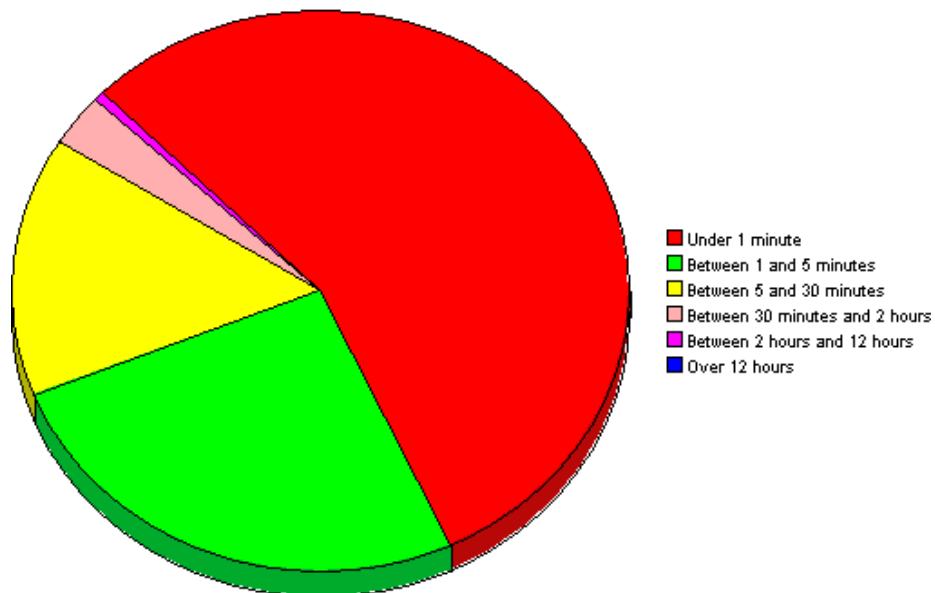

If you are looking at data for more than one day, you will see multiple pie graphs, one for each day.

Display Data Table


This option changes a graph into a spreadsheet.

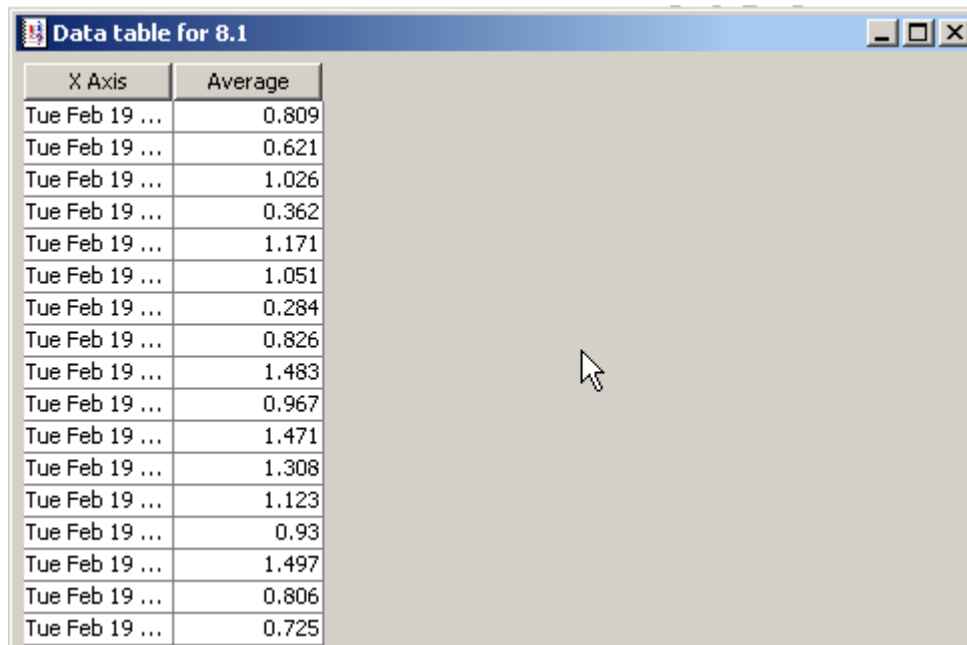

X Axis	Average
Tue Feb 19 ...	0.809
Tue Feb 19 ...	0.621
Tue Feb 19 ...	1.026
Tue Feb 19 ...	0.362
Tue Feb 19 ...	1.171
Tue Feb 19 ...	1.051
Tue Feb 19 ...	0.284
Tue Feb 19 ...	0.826
Tue Feb 19 ...	1.483
Tue Feb 19 ...	0.967
Tue Feb 19 ...	1.471
Tue Feb 19 ...	1.308
Tue Feb 19 ...	1.123
Tue Feb 19 ...	0.93
Tue Feb 19 ...	1.497
Tue Feb 19 ...	0.806
Tue Feb 19 ...	0.725

View in New Frame

The graph opens in a Graph Viewer window. Improve legibility by resizing the window.

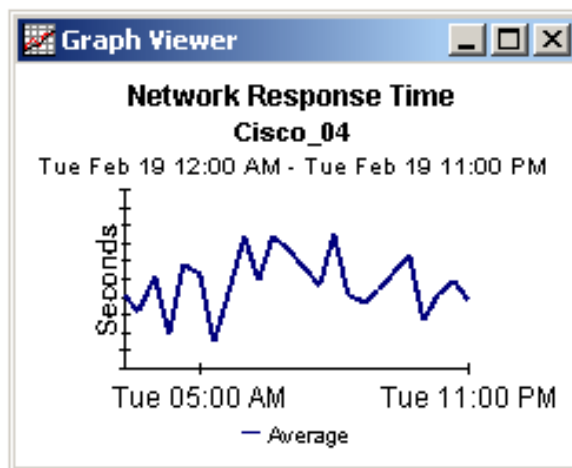

C Troubleshooting

This appendix describes common problems seen during the installation, configuration, or running of the Report Packs.

A Workaround for Supporting Multiple Versions of CCM in One PI

Make a backup copy of the file `CiscoCDR_Collection.pro` under both `{DPIPE_HOME}/scripts` folder and `{DPIPE_HOME}/packages/CiscoCDR_Datapipe/CiscoCDR_Datapipe.ap` folder, and then modify the file `CiscoCDR_Collection.pro` under both folders by following the steps below:

- 1 Ensure that the data folder for storing CCM 5.x data is a different one from those folders that store data from IPT SPI or other versions of CCM. This can be set in the command parameter on line 27:

Line 27:

```
{DPIPE_HOME}/bin/CCM5_datapipe -username=abc -password=abc  
-ccmHost=xx.xxx.xx.xxx -servicePort=8080 -ftpHost=xyz -ftpUser=xyz  
-ftpPassword=xyz -ftpDir=/xyz/ -timeZone=PST)
```

- 2 Add the following lines to the file `CiscoCDR_Collection.pro` on line 20 (after CCM 5.x data collected and before the NNM parser runs):

```
begin: wait
```

```
{DPIPE_HOME}/bin/perl {DPIPE_HOME}/bin/CiscoCDR_PP.pl -l <local  
directory where CCM 5.x data files are located> -v 5.x
```

```
end:
```

```
begin: wait
```

```
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_CDRs -mw "-X"
```

```
end:
```

```
begin: wait
```

```
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_Hist_phoneNum -mw "-X"
```

```
end:
```

```
begin: wait
```

```
{DPIPE_HOME}/bin/ee_collect -s <source file name with full path> -a  
CiscoCDR_CMRS -mw "-X"
```

```
end:
```


Index

A

assigning dial plans to gateways, 42

C

CallManager (object model), 34

call success threshold, 18, 45

CDR onDemand Service, 40, 41

change max rows option, 113

channel (object model), 34

Cisco_IP_Telephony_CallDetails_Thresholds.ap, 31

CiscoCDR_Collection.pro, 41

Cisco IPT SPI
integration, 44

cluster (object model), 34

Common Property Tables, 22, 30

configuration

- assigning dial plans to gateways, 42
- collecting data from CCM 5.x, 40
- defining a unique data folder for CCM 5.x, 41
- integrating with the Cisco IPT SPI, 44
- modifying default thresholds, 45
- modifying IP phone user and location, 48
- modifying IP QoS parameters, 49

D

default thresholds for CallManagers, 45

default thresholds for gateways, 45

demo package, 19

dial plans, 10

disabling daily aggregations, 52

disabling trendcopy, 22, 30

Display Data Table, 113

displayed data option, 113

distributed systems, 22, 30

G

gateway (object model), 34

gateway thresholds, 46

grid options, 113

group accounts, 17

group filters, 17

GW endpoint (object model), 34

I

integrating Cisco IPT SPI, 44

IP, 31

IP_Phone (object model), 34

IPT_Admin.ap, 31

L

legend options, 113

N

network fail threshold, 18, 45

NNM Alarms Browser, 30

O

object categories, 34

Q

QoS threshold, 18, 45

R

report parameters, 19

S

satellite servers, 54

style options for graphs, 113

system clocks, 55

T

thresholds

- average QoS value, 18
- call success, 18, 45
- gateway, 46
- network fail, 18, 45
- QoS, 45

trendcopy pull commands, 52

U

update properties

- QoS parameters, 49

Use Absolute Time, 111

V

view in new frame, 112

W

workaround for supporting multiple versions of
CCM, 41

We appreciate your feedback!

If an email client is configured on this system, by default an email window opens when you click on the bookmark “Comments”.

In case you do not have the email client configured, copy the information below to a web mail client, and send this email to **docfeedback@hp.com**

Product name:

Document title:

Version number:

Feedback:

